Pioneer sound.vision.soul

Service Manual

ORDER NO.
RRV2768

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-D512-K
VSX-D512-S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	The voltage can be converted by the following method.
VSX-D512-K	FXJI	AC110V/120-127V/220V/240V	With the voltage selector
VSX-D512-S	FXJI	AC110V/120-127V/220V/240V	With the voltage selector
VSX-D512-S	SLXJI	AC110V/120-127V/220V/240V	With the voltage selector

- **This service manual should be used together with the following manual(s):**

Model No.	Order No.	Remarks
VSX-D512-K/MYXJIEW	RRV2743	

- **For SPECIFICATIONS and PANEL FACILITIES, refer to the operating instructions.**

CONTENTS

1. CONTRAST OF MISCELLANEOUS PARTS ····· 2
2. SCHEMATIC DIAGRAM ····· 8
3. PCB CONNECTION DIAGRAM ····· 11

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2003

T – ZZR MAY 2003 Printed in Japan

1. CONTRAST OF MISCELLANEOUS PARTS

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *Reference Nos. indicate the pages and Nos. in the service manual for the base model.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*
- *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω → 56 × 10¹ → 561 ..... RD1/4PU 5 6 1 J
47k Ω → 47 × 10³ → 473 ..... RD1/4PU 4 7 3 J
0.5 Ω → R50 ..... RN2H R 5 0 K
1 Ω → 1R0 ..... RS1P 1 R 0 K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω → 562 × 10¹ → 5621 ..... RN1/4PC 5 6 2 1 F

■ CONTRAST TABLE

VSX-D512-K/FXJI, VSX-D512-S/FXJI, VSX-D512-S/SLXJI and VSX-D512-K/MYXJIEW are constructed the same except for the following :

Ref. No.	Mark	Symbol and Description	Part No.				Remarks
			VSX-D512-K /MYXJIEW	VSX-D512-K /FXJI	VSX-D512-S /FXJI	VSX-D512-S /SLXJI	
		PCB ASSEMBLIES					
	NSP	AMP&PS ASSY	XWK3113	XWK3054	XWK3054	XWK3054	
P9- 2		├ AMP&PRIMARY ASSY	XWZ3533	XWZ3534	XWZ3534	XWZ3534	
P9- 4		├ AMP INPUT ASSY	XWZ3547	XWZ3548	XWZ3548	XWZ3548	
P9- 5		└ TRANS 2 ASSY	XWZ3555	XWZ3556	XWZ3556	XWZ3556	
		BOARD TO BOARD ASSY	Not used	XWZ3527	XWZ3527	XWZ3527	No. 1
		VOLTAGE SELECT SW ASSY	Not used	XWZ3563	XWZ3563	XWZ3563	No. 2
	NSP	COMPLEX ASSY	XWK3107	XWK3039	XWK3039	XWK3040	
P11-1		├FRONT ASSY	XWZ3493	XWZ3494	XWZ3494	XWZ3495	
		└DIGITAL IN ASSY	XWZ3747	XWZ3517	XWZ3517	XWZ3517	
		S. VIDEO ASSY	Not used	XWZ3521	XWZ3521	XWZ3521	No. 3
		TRANS4 ASSY	Not used	XWZ3526	XWZ3526	XWZ3526	No. 4
P9-18		FM/AM TUNER MODULE	AXQ7232	XXQ3003	XXQ3003	XXQ3003	
		PACKING SECTION					
P7- 2	NSP	Warranty Card	ARY7065	Not used	Not used	Not used	
P7- 5		Operating Instructions (English/Italian)	XRE3068	Not used	Not used	Not used	
P7- 5		Operating Instructions (English/Chinese/Spanish)	Not used	XRE3069	XRE3069	XRE3069	
P7- 6		Remote Control Unit	XXD3039	XXD3057	XXD3057	XXD3057	
P7- 8		Battery Cover	AZA7378	AZA7424	AZA7424	AZA7424	
P7-12		Packing Case	XHD3328	XHD3337	XHD3338	XHD3339	
P7-16		Operating Instructions (Dutch/Spanish)	XRC3079	Not used	Not used	Not used	
P7-17		Operating Instructions (French/German)	XRC3080	Not used	Not used	Not used	
		Caution 220V Label	Not used	ARR1003	ARR1003	Not used	No.5
	⚠	AC Power Cord	Not used	ADG7062	ADG7062	Not used	No.6
	⚠	AC Power Cord	Not used	XDG3014	XDG3015	Not used	Accessories
		J Shape Plug	Not used	AKX7008	AKX7008	AKX7008	Accessories
	⚠	AC Plug Adapter	Not used	AKX7011	Not used	Not used	Accessories
		EXTERIOR SECTION					
P9-20	⚠	Power Transformer (AC220-230V)	ATS7259	Not used	Not used	Not used	
P9-20	⚠	Power Transformer (AC110V/120-127V/220V/230V)	Not used	XTS3048	XTS3048	XTS3048	
P9-22	⚠	Fuse (FU1 : T2.5A)	REK1026	Not used	Not used	Not used	
P9-22	⚠	Fuse (FU1 : T6.3A)	Not used	REK1030	REK1030	REK1030	
P9-23	⚠	AC Power Cord	VDG1077	Not used	Not used	XDG3016	
P9-22		Cord Stopper	CM-22B	Not used	Not used	AEC7317	
P9-35		Top Cover	XME3004	Not used	Not used	Not used	
P9-38		Insulator	PNW2766	AMR7198	PNW2766	AMR7198	

Ref. No.	Mark	Symbol and Description	Part No.				Remarks
			VSX-D512-K /MYXJIEW	VSX-D512-K /FXJI	VSX-D512-S /FXJI	VSX-D512-S /SLXJI	
P9-40		Rear Panel	XNC3191	XNC3192	XNC3192	XNC3204	
P9-41		Bonnet	XZN3111	XZN3112	XZN3123	XZN3123	
P9-42		Push Rivet	AEC7025	Not used	Not used	Not used	
P9-46	NSP	Heat Sink Assy	ANH7118	XNH3023	XNH3023	XNH3023	
P9-56		Tuner Sheet	XEC3031	Not used	Not used	Not used	
P9-57		Screw	FBT40P080FZK	FBT40P080FZK	FBT40P080FNI	FBT40P080FNI	No.14
P9-21	NSP	Fuse Card	AAX7277	XAX3218	XAX3218	XAX3218	
P9-58	NSP	N Label	Not used	Not used	XAL3167	Not used	
P9-59		Spacer R5	XEB3029	Not used	Not used	Not used	
P9-60		Screw	BBT30P100FCC	Not used	Not used	Not used	
	⚠	AC Inlet Assy	Not used	ADX7395	ADX7395	Not used	No. 7
		3P F.F.C/30V	Not used	XDD3107	XDD3107	XDD3107	No. 8
	⚠	Fuse (FU2, FU3 : T2.5A)	Not used	REK1026	REK1026	REK1026	No. 9
	⚠	Voltage Selector	Not used	AKX-507	AKX-507	Not used	No.10
		Fan Motor	Not used	XXM3002	XXM3002	XXM3002	No.11
		Fan Holder R4	Not used	XNG3040	XNG3040	XNG3040	No.12
		FRONT PANEL SECTION					
P11- 6		Front Panel	XMB3113	XMB3121	XMB3120	XMB3120	
P11- 7		Sub Button	XAD3125	XAD3125	XAD3133	XAD3133	
P11- 9		Pioneer Badge	VAM3006	XAM3006	VAM1129	VAM1129	
P11-11		Select Knob	XAB3023	XAB3023	XAB3024	XAB3024	
P11-12		Volume Knob	XAB3025	XAB3025	XAB3026	XAB3026	
P11-13		Power Button	XAD3123	XAD3123	XAD3129	XAD3129	
P11-14		Sub Panel	XAK3273	XAK3272	XAK3387	XAK3387	
P11-15		Jog Button	XMB3124	XAD3124	XAD3131	XAD3131	
P11-18		D Panel R5	XAK3320	XAK3274	XAK3274	XAK3274	
P11-19		Power Button M	XAD3127	XAD3127	XAD3137	XAD3137	
		Rubber Sheet	Not used	AEB1111	Not used	Not used	No.13

Notes : ●The numbers in the remarks column correspond to the numbers on the " EXPLODED VIEWS ".

● For PCB ASSEMBLIES, Refer to "CONTRAST OF PCB ASSEMBLIES", "PCB PARTS LIST", "2. SCHEMATIC DIAGRAM" and "3. PCB CONNECTION DIAGRAM".

■ EXPLODED VIEWS

■ EXTERIOR SECTION

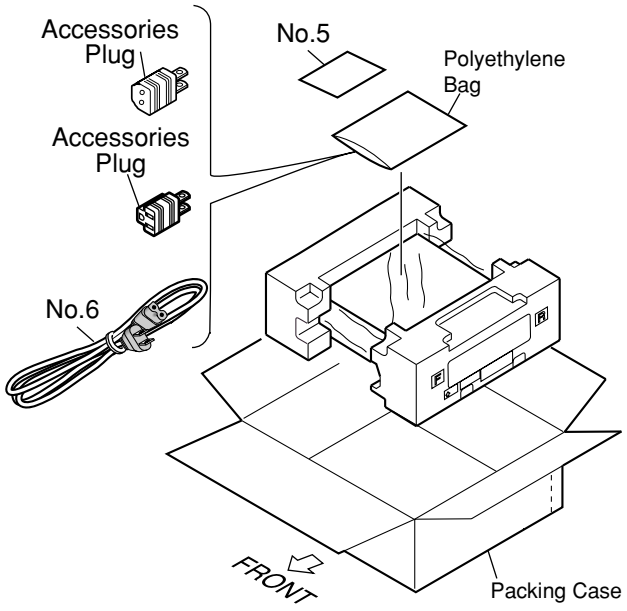

• EXTERIOR SECTIONS

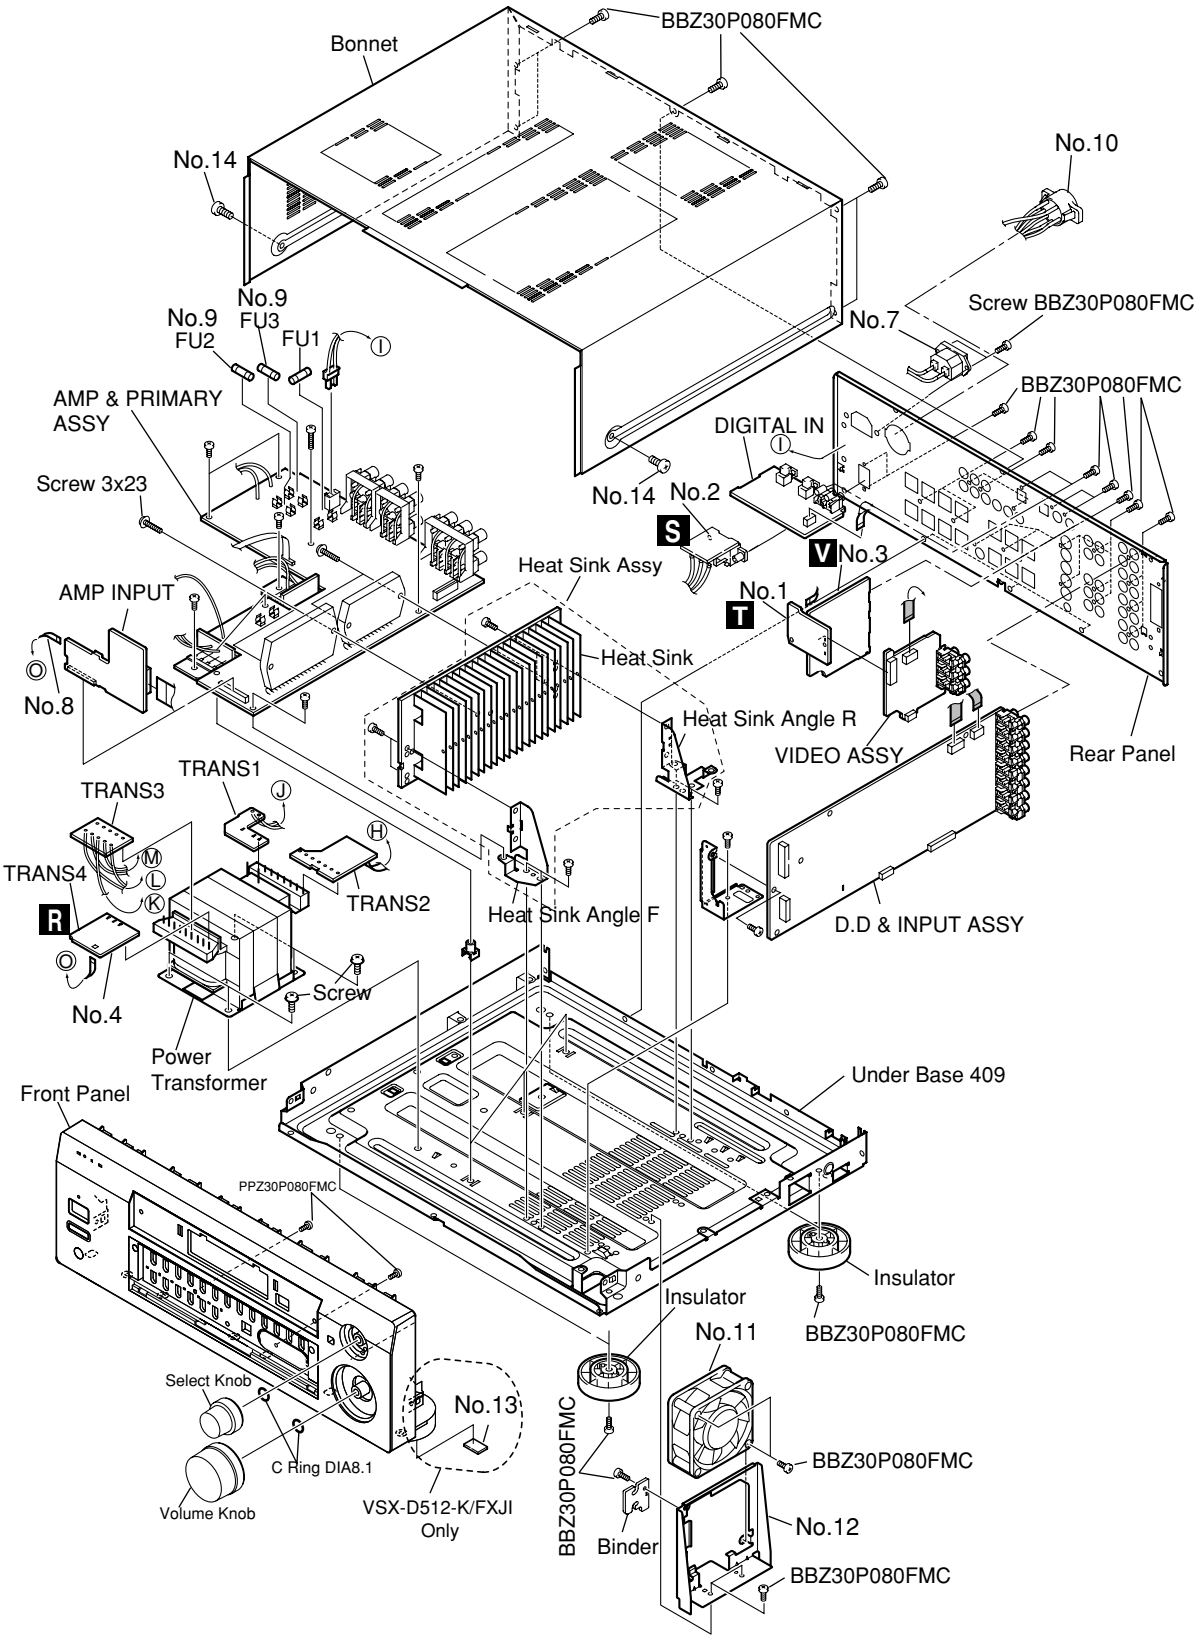

■ CONTRAST OF PCB ASSEMBLIES

BF AMP & PRIMARY ASSY

XWZ3534 and XWZ3533 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		XWZ3533	XWZ3534	
	R703, R704	RD1/4PU683J	RD1/4PU623J	
	R707, R708	RD1/4PU154J	RD1/4PU184J	
	C701, C702 (4700uF)	ACH7134	ACH7137	
	H53–H56 FUSE CLIP	Not used	AKR7001	
	53 TERMINAL 3P	Not used	AKC-081	
	T51 STANDBY TRANSFORMER	ATT7037	ATT7038	

HF AMP INPUT ASSY

XWZ3548 and XWZ3547 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		XWZ3547	XWZ3548	
	IC251	Not used	NJM4558D	
	Q251, Q256	Not used	2SC2878	
	Q252	Not used	2SD1858X	
	Q253- Q255	Not used	KRC103M	
	Q257	Not used	2SA933S	
	D251, D252	Not used	1SS133	
	D253	Not used	MTZJ27D	
	D254	Not used	MTZJ5.1B	
	C251	Not used	CEANP470M25	
	C252, C253	Not used	CKPUYF103Z25	
	C254	Not used	CEAT101M25	
	R251- R256, R258, R259, R262, R266, R268	Not used	RD1/4PU104J	
	R257	Not used	RD1/4PU164J	
	R260	Not used	RD1/4PU754J	
	R261	Not used	RD1/4PU222J	
	R263	Not used	RD1/4PU471J	
	R264, R267	Not used	RD1/4PU472J	
	R265	Not used	RD1/4PU223J	
	R269	Not used	RD1/4PU102J	
	CN251 (3P FFC CONNECTOR)	Not used	52044-0345	
	CN252 (3PL PLUG)	Not used	KM250MA3L	

C TRANS 2 ASSY

XWZ3556 and XWZ3555 are constructed the same except for the following:

Mark	Symbol and Description	Part No.		Remarks
		XWZ3555	XWZ3556	
⚠	IC851, IC852	AEK7012 (1.6A)	AEK7018 (4A)	

■ CONTRAST OF PCB ASSEMBLIES

JF DIGITAL IN ASSY

XWZ3517 and XWZ3747 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		XWZ3747	XWZ3517	
	IC1902	TC74HCU04AF	Not used	
	L1904	QTL1013	Not used	
	C1910	CKSRYB103K50	Not used	
	C1911	CCSRCH470J50	Not used	
	C1913	CKSRYB103K50	Not used	
	C1914	CCSRCH271J50	Not used	
	C1916	CCSRCH471J50	Not used	
	R1907	RS1/16S750J	Not used	
	R1908	RS1/16S473J	Not used	
	R1909	RS1/16S101J	Not used	
	R1910	RS1/16S222J	Not used	
	R1921	Not used	RS1/16S0R0J	
	JA1901 1P PIN JACK (BLACK)	VKB1077	Not used	

OF FRONT ASSY

XWZ3494, XWZ3495 and XWZ3493 are constructed the same except for the following:

Mark	Symbol and Description	Part No.			Remarks
		XWZ3493	XWZ3494	XWZ3495	
	IC481	BU1923F	Not used	Not used	
	Q481	2SA1037K	Not used	Not used	
	Q482	DTC143EK	Not used	Not used	
	Q483	2SC3326	Not used	Not used	
	C481, C482	CKSRYB102K50	Not used	Not used	
	C483	CEAT101M10	Not used	Not used	
	C484	CEAT2R2M50	Not used	Not used	
	C485	CKSRYB472K50	Not used	Not used	
	C486	CEAT1R0M50	Not used	Not used	
	C488	CCSRCH561J50	Not used	Not used	
	C489, C490	CCSRCH270J50	Not used	Not used	
	R429	RS1/16S332J	RS1/16S751J	RS1/16S182J	
	R481	RS1/16S473J	Not used	Not used	
	R482	RS1/16S222J	Not used	Not used	
	R483	RS1/16S333J	Not used	Not used	
	R484	RS1/16S104J	Not used	Not used	
	R485, R486, R487	RS1/16S102J	Not used	Not used	
	R1501, R1502	Not used	RS1/16S0R0J	RS1/16S0R0J	
	L481	LFEA2R2J	Not used	Not used	
	X481 (CERAMIC RESO.4.3MHz)	ASS7004	Not used	Not used	

XF FM/AM TUNER MODULE

XXQ3003 and AXQ7232 are constructed the same except for the following :

Mark	Symbol and Description	Part No.		Remarks
		AXQ7232	XXQ3003	
	C216, C217	CKSRYB103K50	CKSRYB123K50	
	R218, R219	RS1/16S681J	RS1/16S102J	

■ PCB PARTS LIST

Mark	No.	Description	Part No.

SF VOLTAGE SELECT SW ASSY

SWITCHES

⚠	S051	VOLTAGE SELECTOR	AKX1033

RF TRANS 4 ASSY

SEMICONDUCTORS

	IC891, IC892 (630mA)	AEK7006
	D891	SIWB(A)60SD

CAPACITORS

	C891, C892	CEAT471M35

OTHERS

	CN891	3P FFC CONNECTOR	52045-0345

VF S.VIDEO ASSY

SEMICONDUCTORS

	IC351, IC352	NJM2296M
	D351– D354	1SS355

CAPACITORS

	C375, C376	CCSRCH470J50
	C352, C355, C358, C361– C363	CEAT470M25
	C366	CEAT470M25
	C372, C373, C378	CKSRYB103K50
	C351, C353, C354, C356, C357	CKSRYB104K25
	C359, C367	CKSRYB104K25
	C364, C365, C368 – C371	CKSRYB221K50

RESISTORS

	All Resistors	RS1/16S###J

OTHERS

	CN353	4Px2 MINI DIN SOCKET	AKP7020
	CN352	4Px3 MINI DIN SOCKET	AKP7043
	CN351	11P SOCKET	KP200TA11L
	JA351	REMOTE JACK	RKN1004

Mark	No.	Description	Part No.

TF BOARD TO BOARD ASSY

OTHERS

	CN390	13P PLUG	KM200TA13
	CN391	11P PLUG	KM200TA11

2. SCHEMATIC DIAGRAM

Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST"

2.1 AMP&PRIMARY and VOLTAGE SELECT SW ASSYS

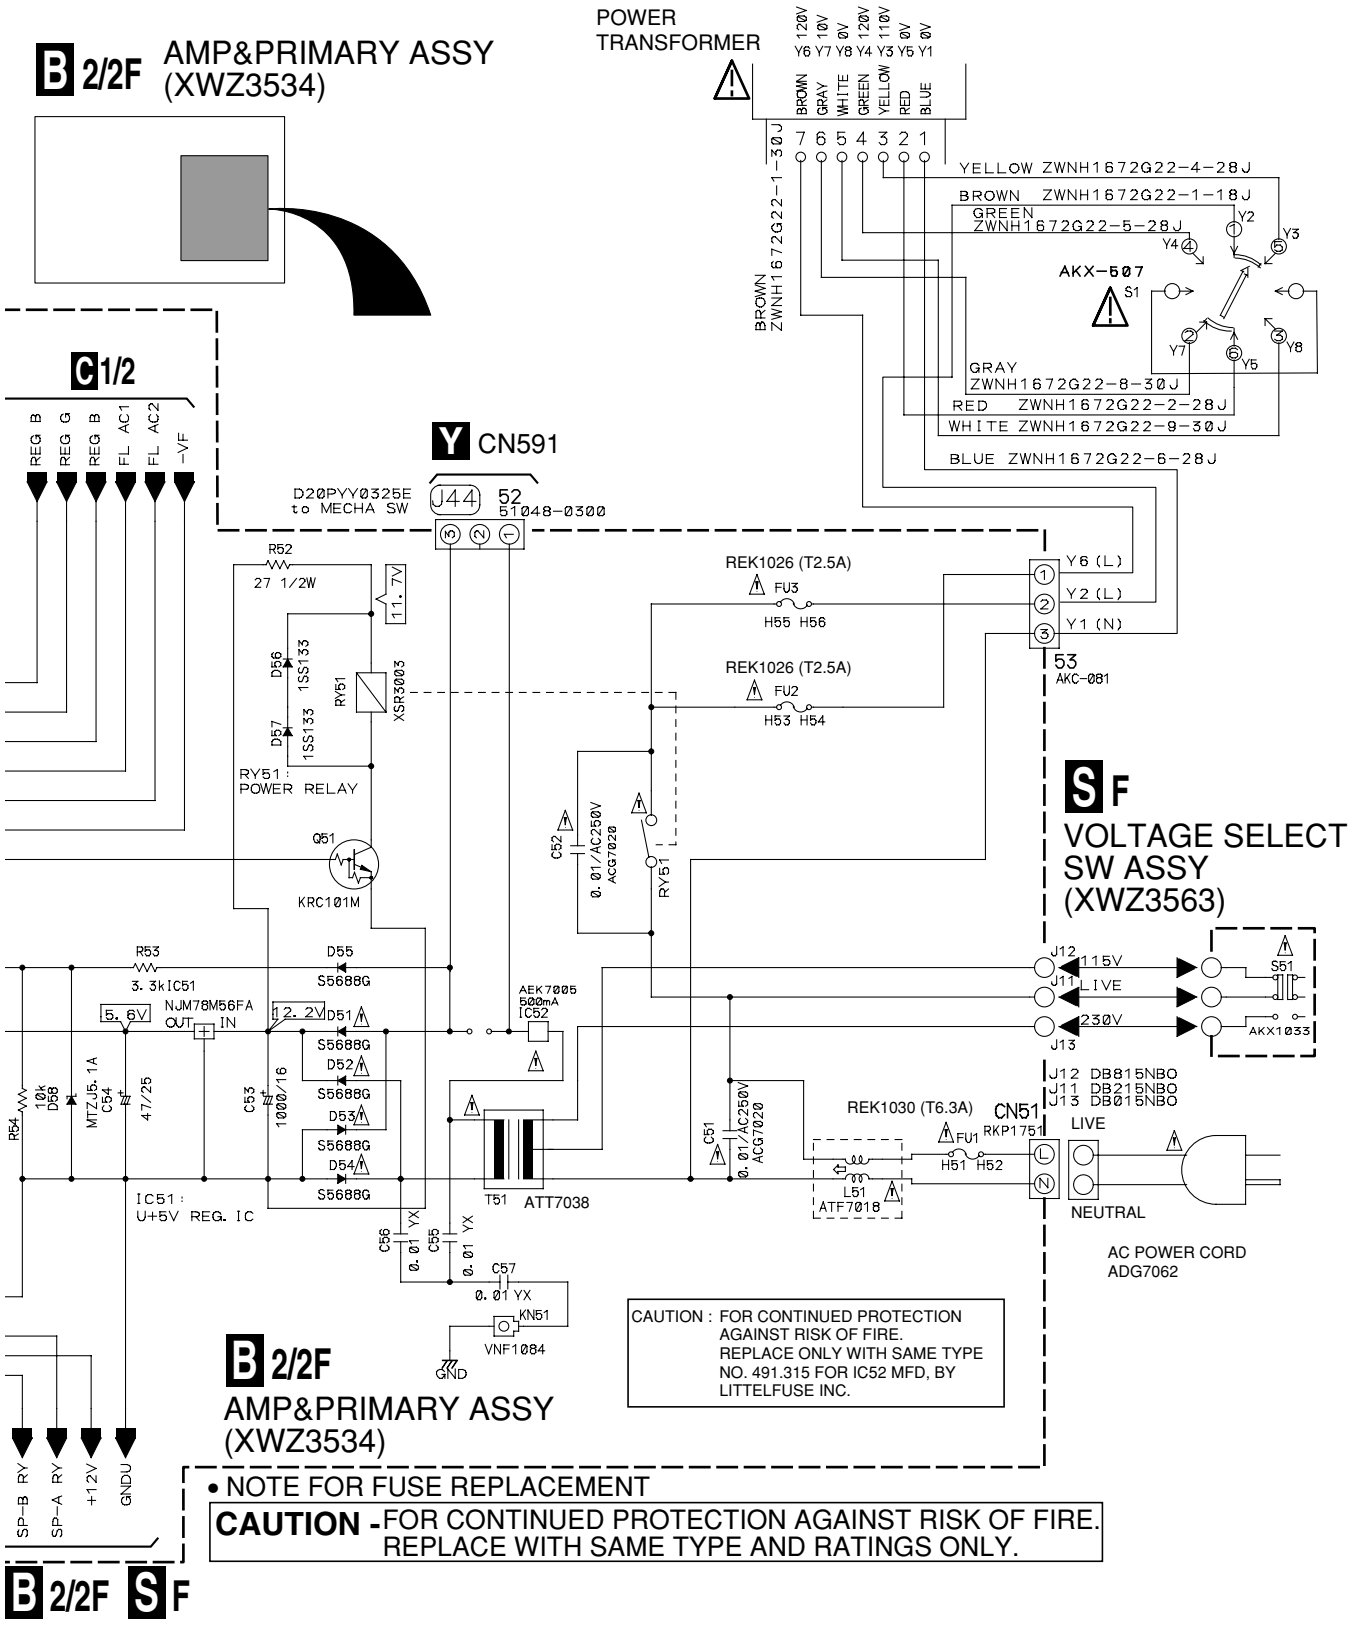

2.2 BOARD TO BOARD, TRANS4 and AMP INPUT ASSYS

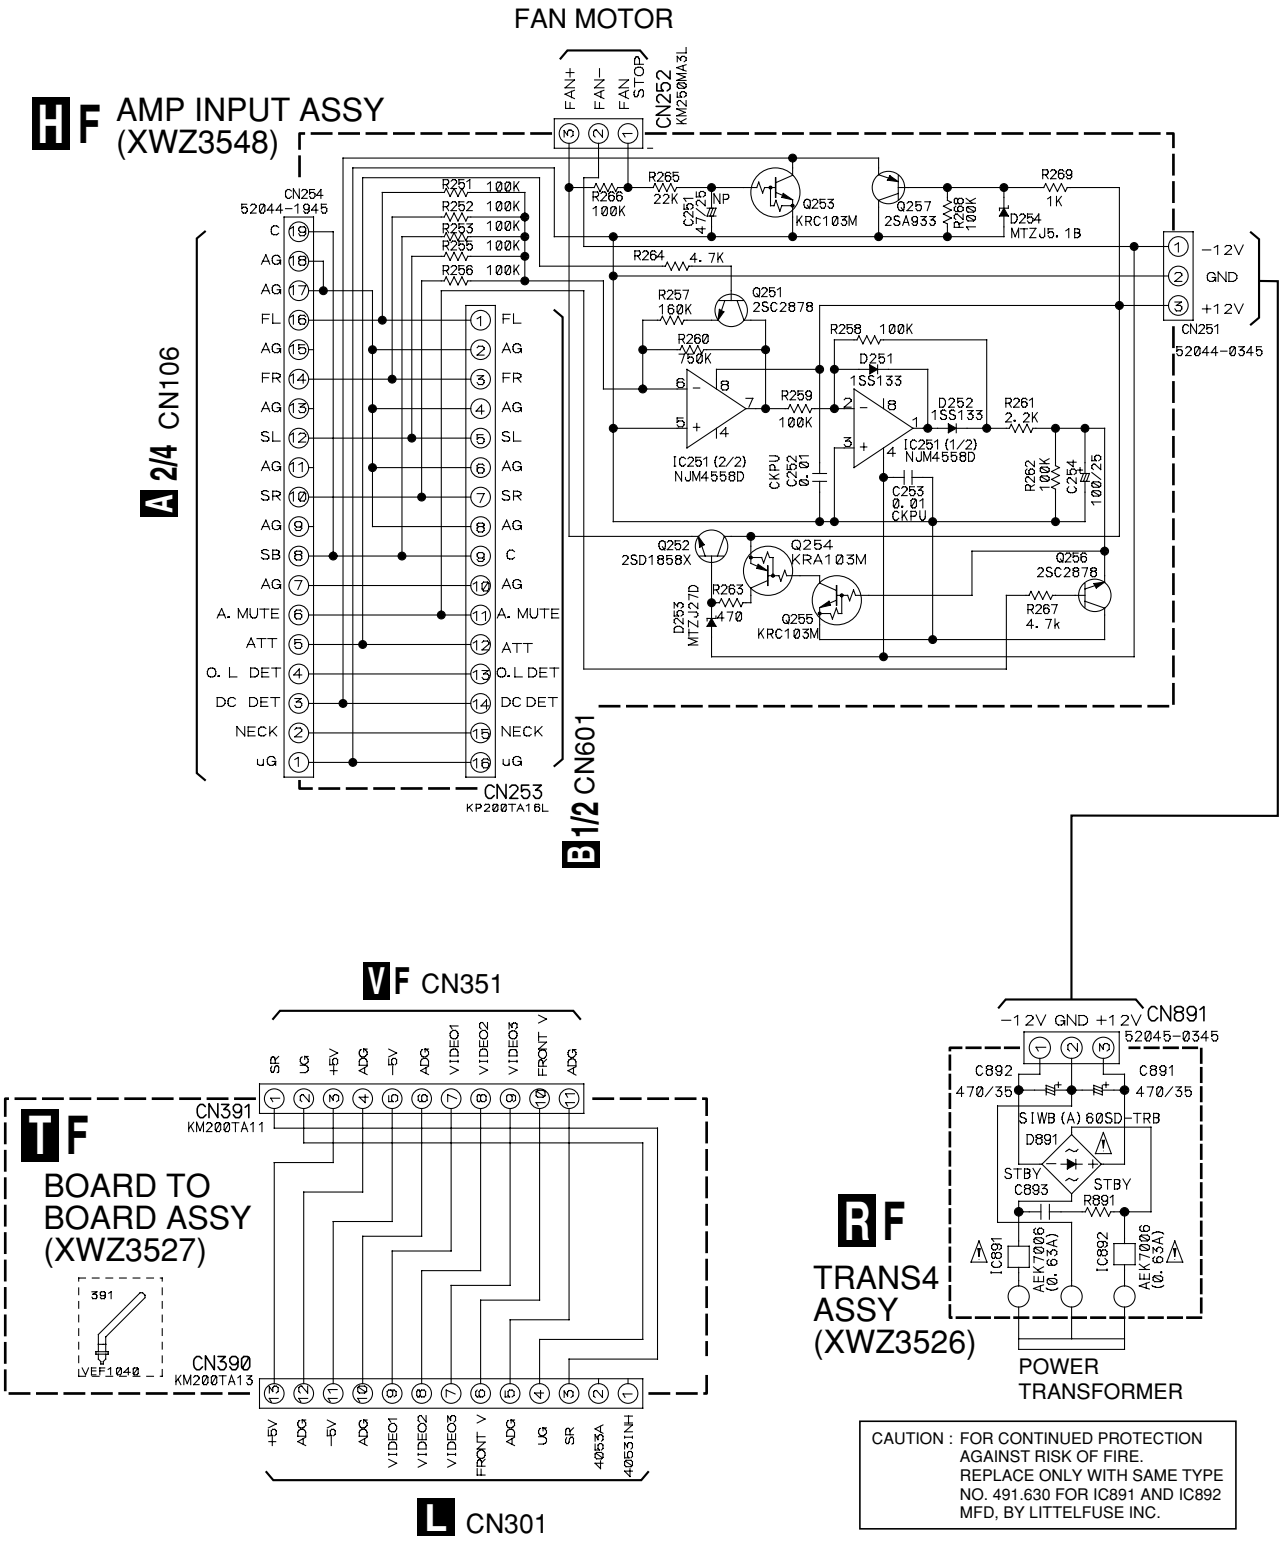

HF RF TF

2.3 S.VIDEO ASSY

NOTE

1. RESISTORS
   Unit: k-kΩ, M-MΩ or Ω unless otherwise noted.
   Rated power: 1/10W unless otherwise noted.
   Tolerance: (J)±5% unless otherwise noted.
2. CAPACITORS
   Unit: p-pF or μF unless otherwise noted.
   Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.
   Rated Voltage: 50V expect for electrolytic capacitors.
3. DIODES
   Indicated in 1SS355-TRB

NJM2296D control port status

SW1	SW2	SW3	SW4	SW5	Vout1	Vout2	Vout3
1	0	(1)	0	1	Vin2	Vin2	mute
1	1	(1)	0	1	Vin3	Vin3	Vin3
1	1	0	1	1	Vin4	Vin4	Vin4
1	1	1	1	1	Vin5	Vin5	Vin5
0	0	(0)	(0)	0	mute	mute	mute

VIN 2. VCR
VIN 3. DVD/LD
VIN 4. TV/SAT
VIN 5. FRONT
Vout1. MON out
Vout2. MR out
Vout3. VCR out

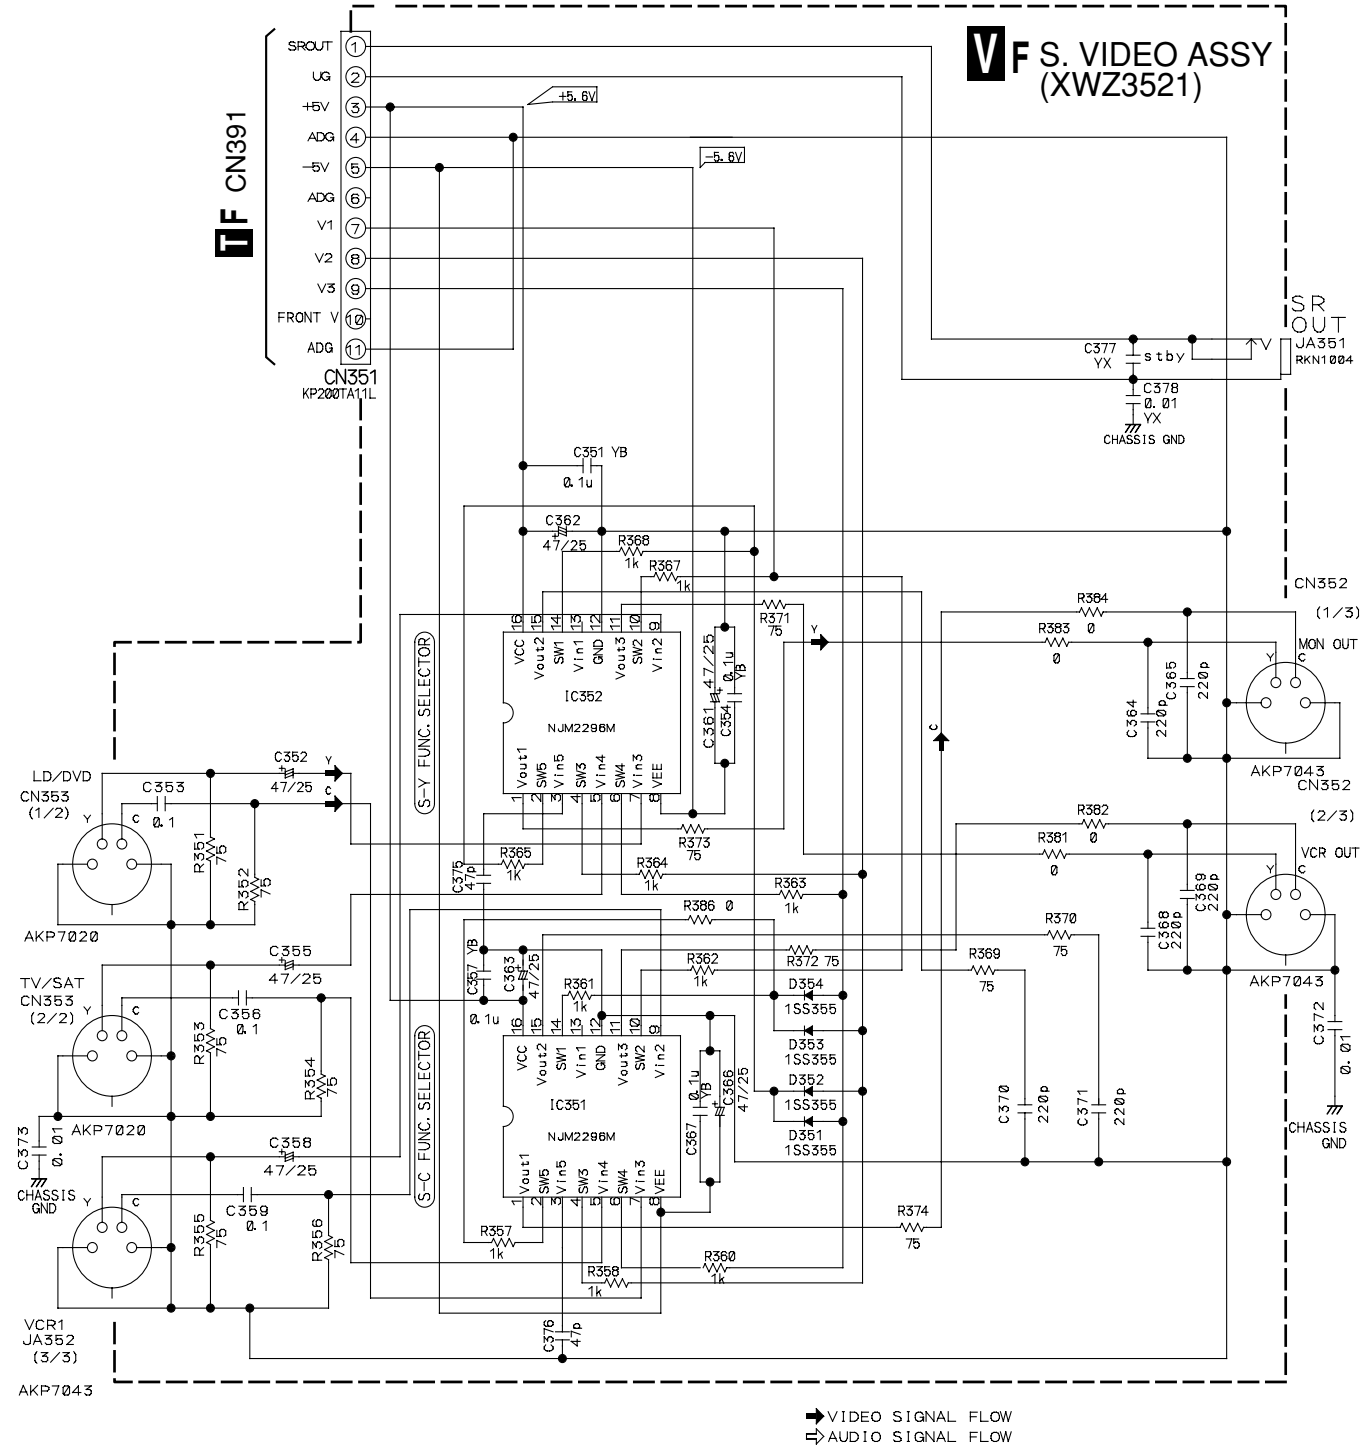

3. PCB CONNECTION DIAGRAM

3.1 TRANS4 and VOLTAGE SELECT SW ASSYS

S VOLTAGE SELECT SW ASSY

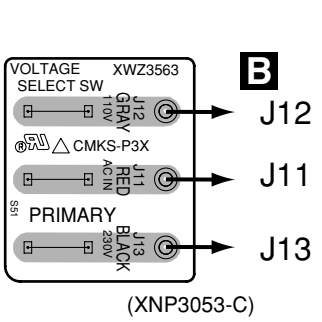

R TRANS4 ASSY

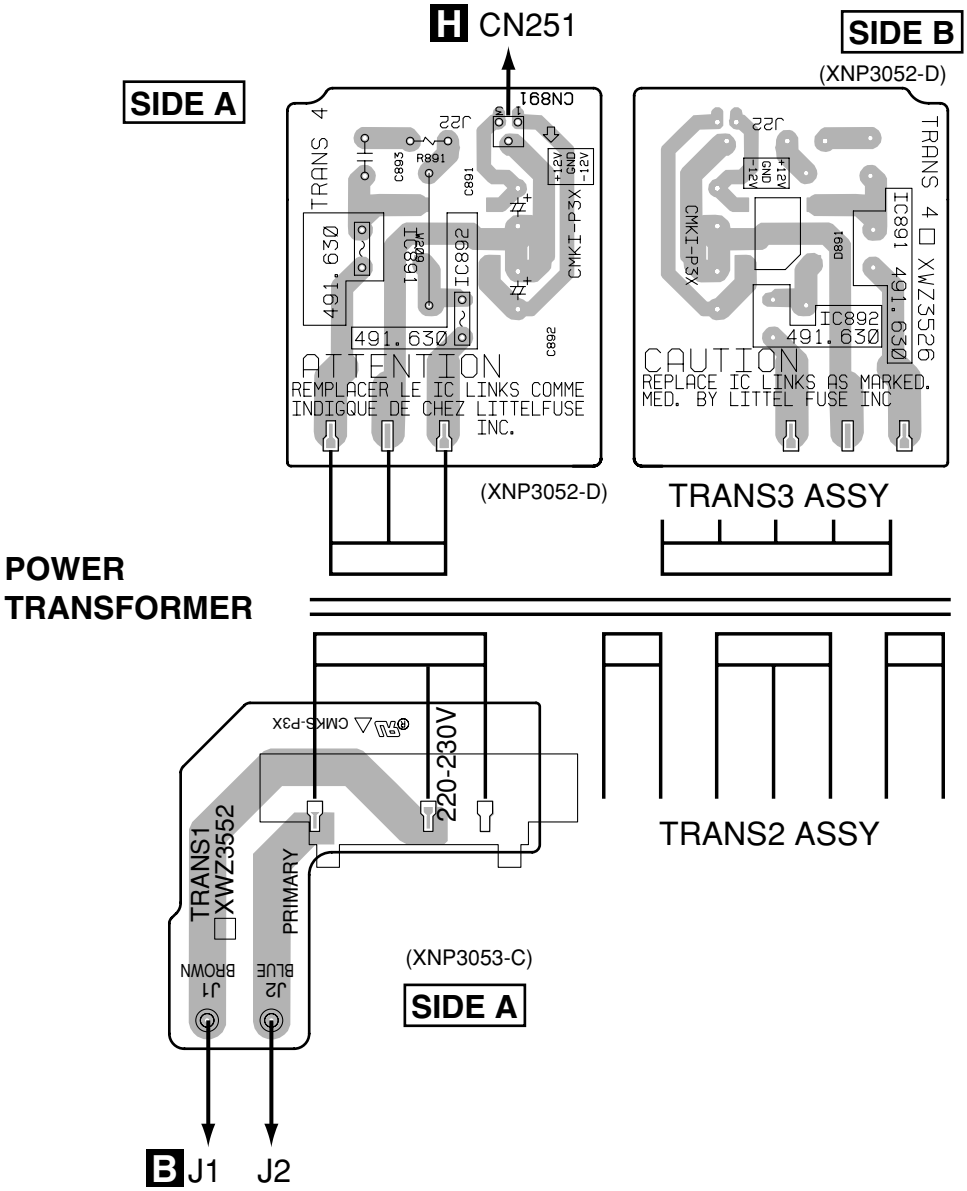

S R

S R

3.2 BOARD TO BOARD and S.VIDEO ASSYS

SIDE A

V S. VIDEO ASSY

T BOARD TO BOARD ASSY

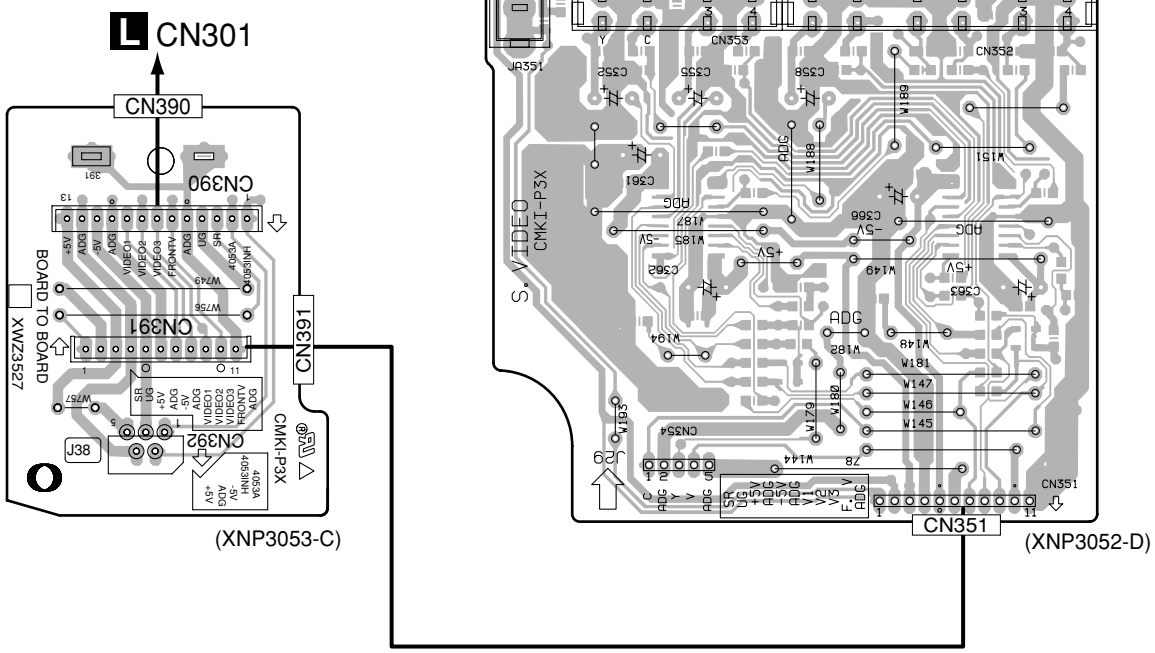

SIDE B

V S. VIDEO ASSY

T BOARD TO BOARD ASSY

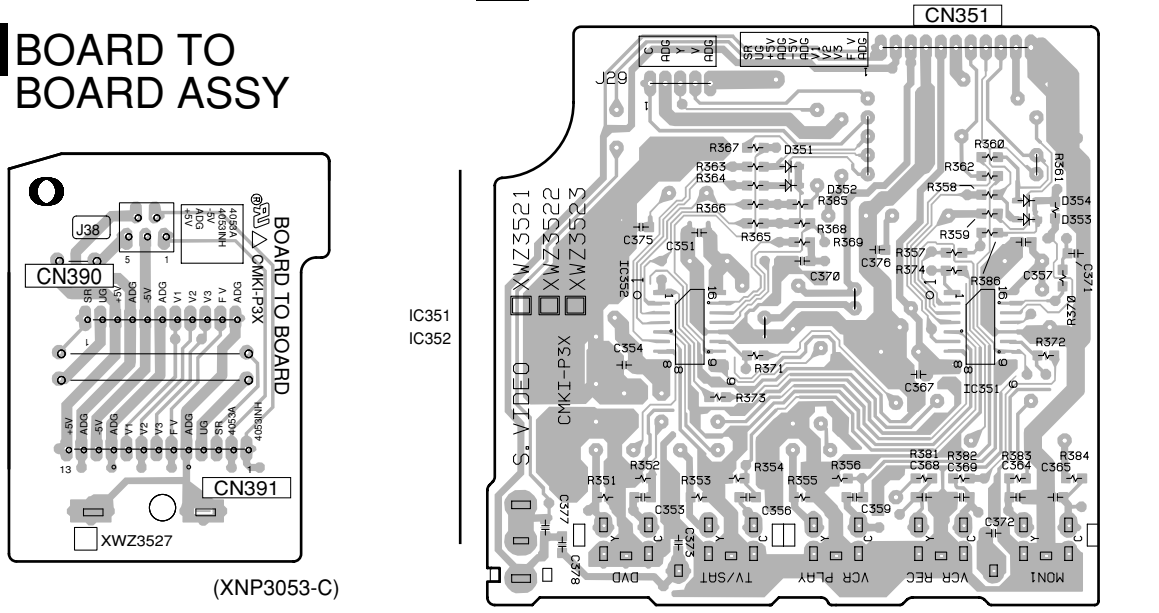

T V

Pioneer sound.vision.soul

Service Manual

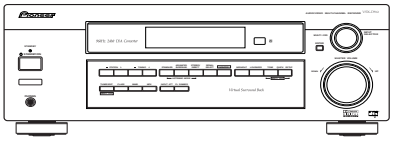

VSX-D512-K

ORDER NO.
RRV2743

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-D512-K
VSX-D512-S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
VSX-D512-K	MYXJIEW	AC220-230V	
VSX-D512-S	MVJI	AC230V	
VSX-D512-S	MYXJIEW	AC220-230V	
VSX-D512-S	MYXJIFG	AC220-230V	

For details, refer to "Important symbols for good services" .

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.
PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936
ⓒ**PIONEER CORPORATION 2003**

T-ZZR APR. 2003 printed in Japan

SAFETY INFORMATION

This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING
This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65

NOTICE
(FOR CANADIAN MODEL ONLY)
Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE
(POUR MODÈLE CANADIEN SEULEMENT)
Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.

(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

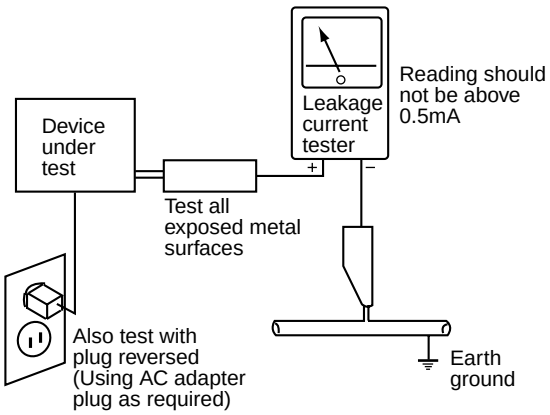
Device under test
Leakage current tester
Reading should not be above 0.5mA
+
–
Test all exposed metal surfaces
Also test with plug reversed (Using AC adapter plug as required)
Earth ground

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a ⚠ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

[Important symbols for good services]
In this manual, the symbols shown-below indicate that adjustments, settings or cleaning should be made securely.
When you find the procedures bearing any of the symbols, be sure to fulfill them:

1. Product safety

You should conform to the regulations governing the product (safety, radio and noise, and other regulations), and should keep the safety during servicing by following the safety instructions described in this manual.

2. Adjustments

To keep the original performances of the product, optimum adjustments or specification confirmation is indispensable. In accordance with the procedures or instructions described in this manual, adjustments should be performed.

3. Cleaning

For optical pickups, tape-deck heads, lenses and mirrors used in projection monitors, and other parts requiring cleaning, proper cleaning should be performed to restore their performances.

4. Shipping mode and shipping screws

To protect the product from damages or failures that may be caused during transit, the shipping mode should be set or the shipping screws should be installed before shipping out in accordance with this manual, if necessary.

5. Lubricants, glues, and replacement parts

Appropriately applying grease or glue can maintain the product performances. But improper lubrication or applying glue may lead to failures or troubles in the product. By following the instructions in this manual, be sure to apply the prescribed grease or glue to proper portions by the appropriate amount.For replacement parts or tools, the prescribed ones should be used.

CONTENTS

SAFETY INFORMATION 2
1. SPECIFICATIONS 5
2. EXPLODED VIEWS AND PARTS LIST 6
2.1 PACKING 6
2.2 EXTERIOR SECTION 8
2.3 FRONT PANEL SECTION 10
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM 12
3.1 BLOCK DIAGRAM 12
3.2 OVERALL WIRING CONNECTION DIAGRAM 14
3.3 D.D & INPUT(1/4) ASSY 16
3.4 D.D & INPUT(2/4) ASSY 18
3.5 D.D & INPUT(3/4) ASSY 20
3.6 D.D & INPUT(4/4) ASSY 22
3.7 AMP & PRIMARY(1/2), TRANS2 and TRANS3 ASSYS 24
3.8 AMP & PRIM.(2/2), REG., HASHIGETA and MECH SW ASSYS 26
3.9 VIDEO and 6CH IN ASSYS 28
3.10 FRONT, R.ENCODER and POWER SW ASSYS 30
3.11 DIGITAL IN, H.P. and KAWA ASSYS 32
3.12 FM/AM TUNER MODULE 34
4. PCB CONNECTION DIAGRAM 36
4.1 TRANS1, TRANS2 and TRANS3 ASSYS 37
4.2 D.D & INPUT ASSY 38
4.3 AMP INPUT, AMP & PRIMARY and MECHA SW ASSYS 42
4.4 FRONT, POWER SW, H.P. and R.ENCODER ASSYS 44
4.5 REGULATOR, HASHIGETA and KAWA ASSYS 48
4.6 DIGITAL IN, 6CH IN and VIDEO ASSYS 50
4.7 FM/AM TUNER MODULE 52
5. PCB PARTS LIST 53
6. ADJUSTMENT 58
7. GENERAL INFORMATION 59
7.1 DISASSEMBLY and DIAGNOSIS 59
7.1.1 DISASSEMBLY and PCB LOCATION 59
7.1.2 U-COM BLOCKDIAGRAM 60
7.1.3 PROTECTION CIRCUIT 61
7.1.4 POWER ON SEQUENCE 62
7.1.5 POWER OFF SEQUENCE 63
7.2 PARTS 64
7.2.1 IC 64
7.2.2 DISPLAY 69
8. PANEL FACILITIES 71

1. SPECIFICATIONS

Amplifier Section

Continuous Power Output (STEREO mode)

Front ..... 80 W per channel
(DIN 1kHz, THD 1.0 %, 8 Ω)

Continuous Power Output
Front ..... 80 W per channel
(1kHz, THD 1.0 %, 8 Ω)
Center ..... 80 W (1kHz, THD 1.0 %, 8 Ω)
Surround ..... 80 W per channel (1kHz, THD 1.0 %, 8 Ω)

• Above specifications are applicable when the power supply is 230V.

Input (Sensitivity/Impedance)
CD, VCR/DVR, CD-R/TAPE/MD, DVD/LD, TV/SAT ... 200 mV/47 kΩ

Frequency Response
CD, VCR/DVR, CD-R/TAPE/MD, DVD/LD,TV/SAT
..... 5 Hz to 100,000 Hz $^{+0}_{-3}$dB

Output (Level/Impedance)
VCR/DVR REC, CD-R/TAPE/MD REC ..... 200 mV/2.2 kΩ

Tone Control
BASS ..... ± 6 dB (100 Hz)
TREBLE ..... ± 6 dB (10 kHz)
LOUDNESS ..... +9 dB/+9 dB (100 Hz/10 kHz)

Signal-to-Noise Ratio [DIN (Continuous rated power output/50 mW)]
CD, VCR/DVR, CD-R/TAPE/MD,DVD/LD, TV/SAT ····· 88/64 dB

Video Section

Input (Sensitivity/Impedance)
VCR/DVR, DVD/LD, TV/SAT ..... 1 Vp-p/75 Ω

Output (Level/Impedance)
VCR/DVR ..... 1 Vp-p/75 Ω

Frequency Response
VCR/DVR, DVD/LD,TV/SAT ⇨ MONITOR ..... 5 Hz to 7 MHz $^{+0}_{-3}$dB
Signal-to-Noise Ratio ..... 55 dB
Cross Talk ..... 55 dB

Manufactured under license from Dolby Laboratories.
"Dolby", "Pro Logic II" and the double D symbol ◻◻ are trademarks of Dolby Laboratorories.

"DTS" ,"ES" and "DTS Digital Surround" are trademarks of Digital Theater Systems, Inc.

FM Tuner Section

Frequency Range ..... 87.5 MHz to 108 MHz
Usable Sensitivity ..... Mono:13.2 dBf, IHF (1.3 μV/ 75 Ω)
50 dB Quieting Sensitivity ..... Mono: 20.2 dB
Stereo: 38.6 dBf
Signal-to-Noise Ratio ..... Mono: 73 dB (at 85 dBf)
Stereo: 70 dB (at 85 dBf)
Signal-to-Noise Ratio (DIN) ····· Mono: 62 dB
Stereo: 58 dB
Distortion ····· Stereo: 0.5 % (1 kHz)
Alternate Channel Selectivity ..... 60 dB (400 kHz)
Stereo Separation ..... 40 dB (1 kHz)
Frequency Response ..... 30 Hz to 15 kHz (±1 dB)
Antenna Input (DIN) ..... 75 Ω unbalanced

AM Tuner Section

Frequency Range ..... 531 kHz to 1,602 kHz
Sensitivity (IHF, Loop antenna) ..... 350 μV/m
Selectivity ..... 25 dB
Signal-to-Noise Ratio ..... 50 dB
Antenna ..... Loop antenna

Miscellaneous

Power Requirements
UK model ····· AC 230 V, 50/60Hz
European model ····· AC 220-230 V, 50/60 Hz
Power Consumption
..... 220W
In Standby ..... 1 W

Dimensions ..... 420 (W) x 158 (H) x 393 (D) mm

Weight (without package)
..... 9.0 kg

Furnished Parts

AM loop antenna 1
FM wire antenna 1
Dry cell batteries (AA size IEC R6P) 2
Remote control 1
Operating instructions 1

Note

Specifications and the design are subject to possible modifications without notice, due to improvements.

Accessories

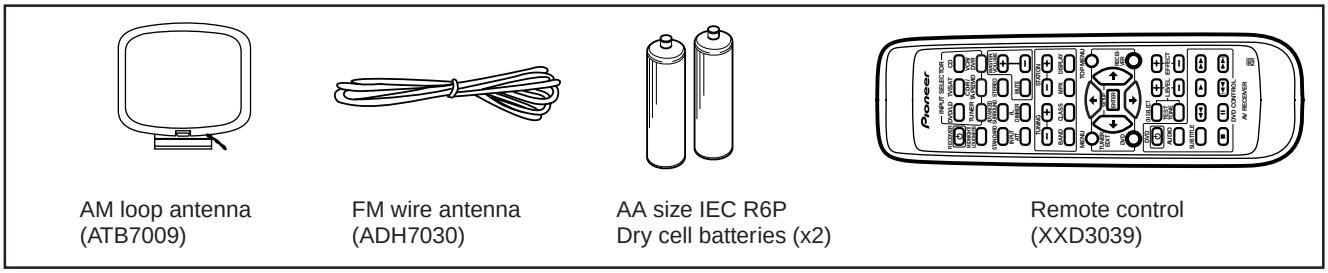

AM loop antenna (ATB7009)
FM wire antenna (ADH7030)
AA size IEC R6P Dry cell batteries (x2)
Remote control (XXD3039)

2. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

2.1 PACKING

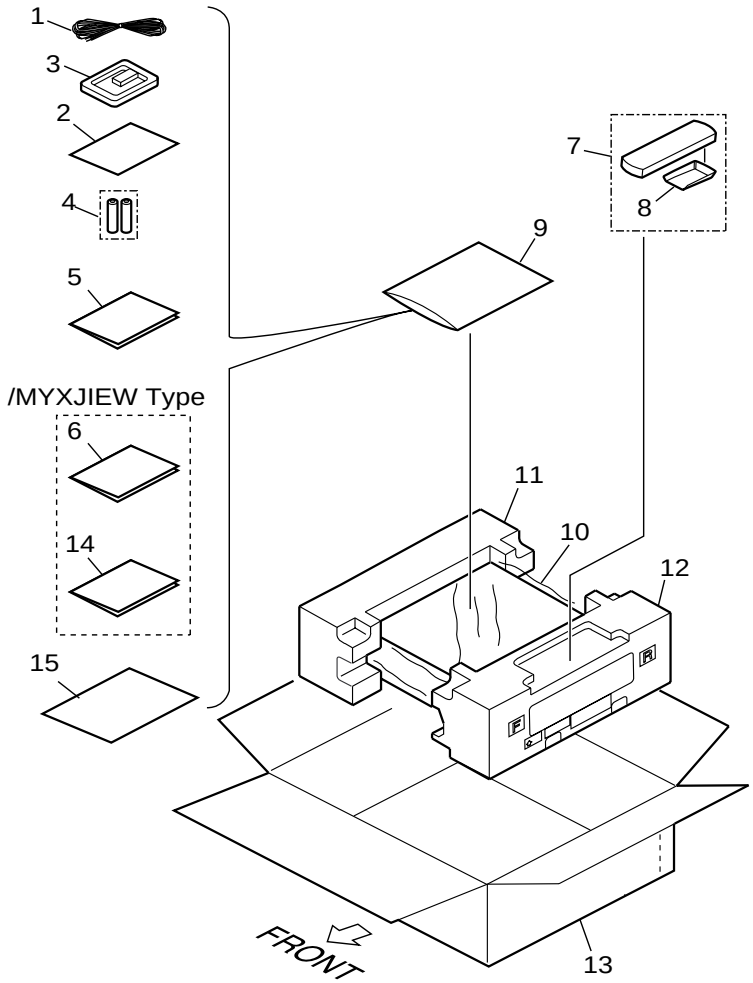

PACKING parts List

Mark	No.	Description	Part No.
	1	FM wire antenna	ADH7030
NSP	2	Warranty Card	ARY7065
	3	AM loop antenna	ATB7009
NSP	4	Dry cell batteries (AA/R6P)	VEM1031
	5	Operating instructions (English/Italian)	See Contrast table(2)
	6	Operating instructions	See Contrast table(2)
	7	Remote Control	XXD3039
	8	Battery Cover	AZA7378
NSP	9	Literature Bag	AHG1180
	10	Packing Sheet	AHG7069
	11	Left Pad R5	XHA3032
	12	Right Pad R5	XHA3033
	13	Packing Case	See Contrast table(2)
	14	Operating instructions	See Contrast table(2)
NSP	15	Accessory Board	XHB3008

(2) CONTRAST TABLE

VSX-D512-S/MVXJI, /MYXJIEW, /MYXJIFG and VSX-D512-K/MYXJIEW are constructed the same except for the following :

Mark	NO	Symbol and Description	VSX-D512-K/ MYXJIEW	VSX-D512-S/ MVXJI	VSX-D512-S/ MYXJIEW	VSX-D512-S/ MYXJIFG
	5	Operating Instructions (English,Italian)	XRE3068	XRE3068	XRE3068	Not used
	6	Operating Instructions (French,German)	XRC3080	Not used	XRC3080	XRC3080
	13	Packing Case	XHD3328	XHD3329	XHD3329	XHD3329
	14	Operating Instructions (Spanish,Dutch)	XRC3079	Not used	XRC3079	Not used

2.2 EXTERIOR SECTION

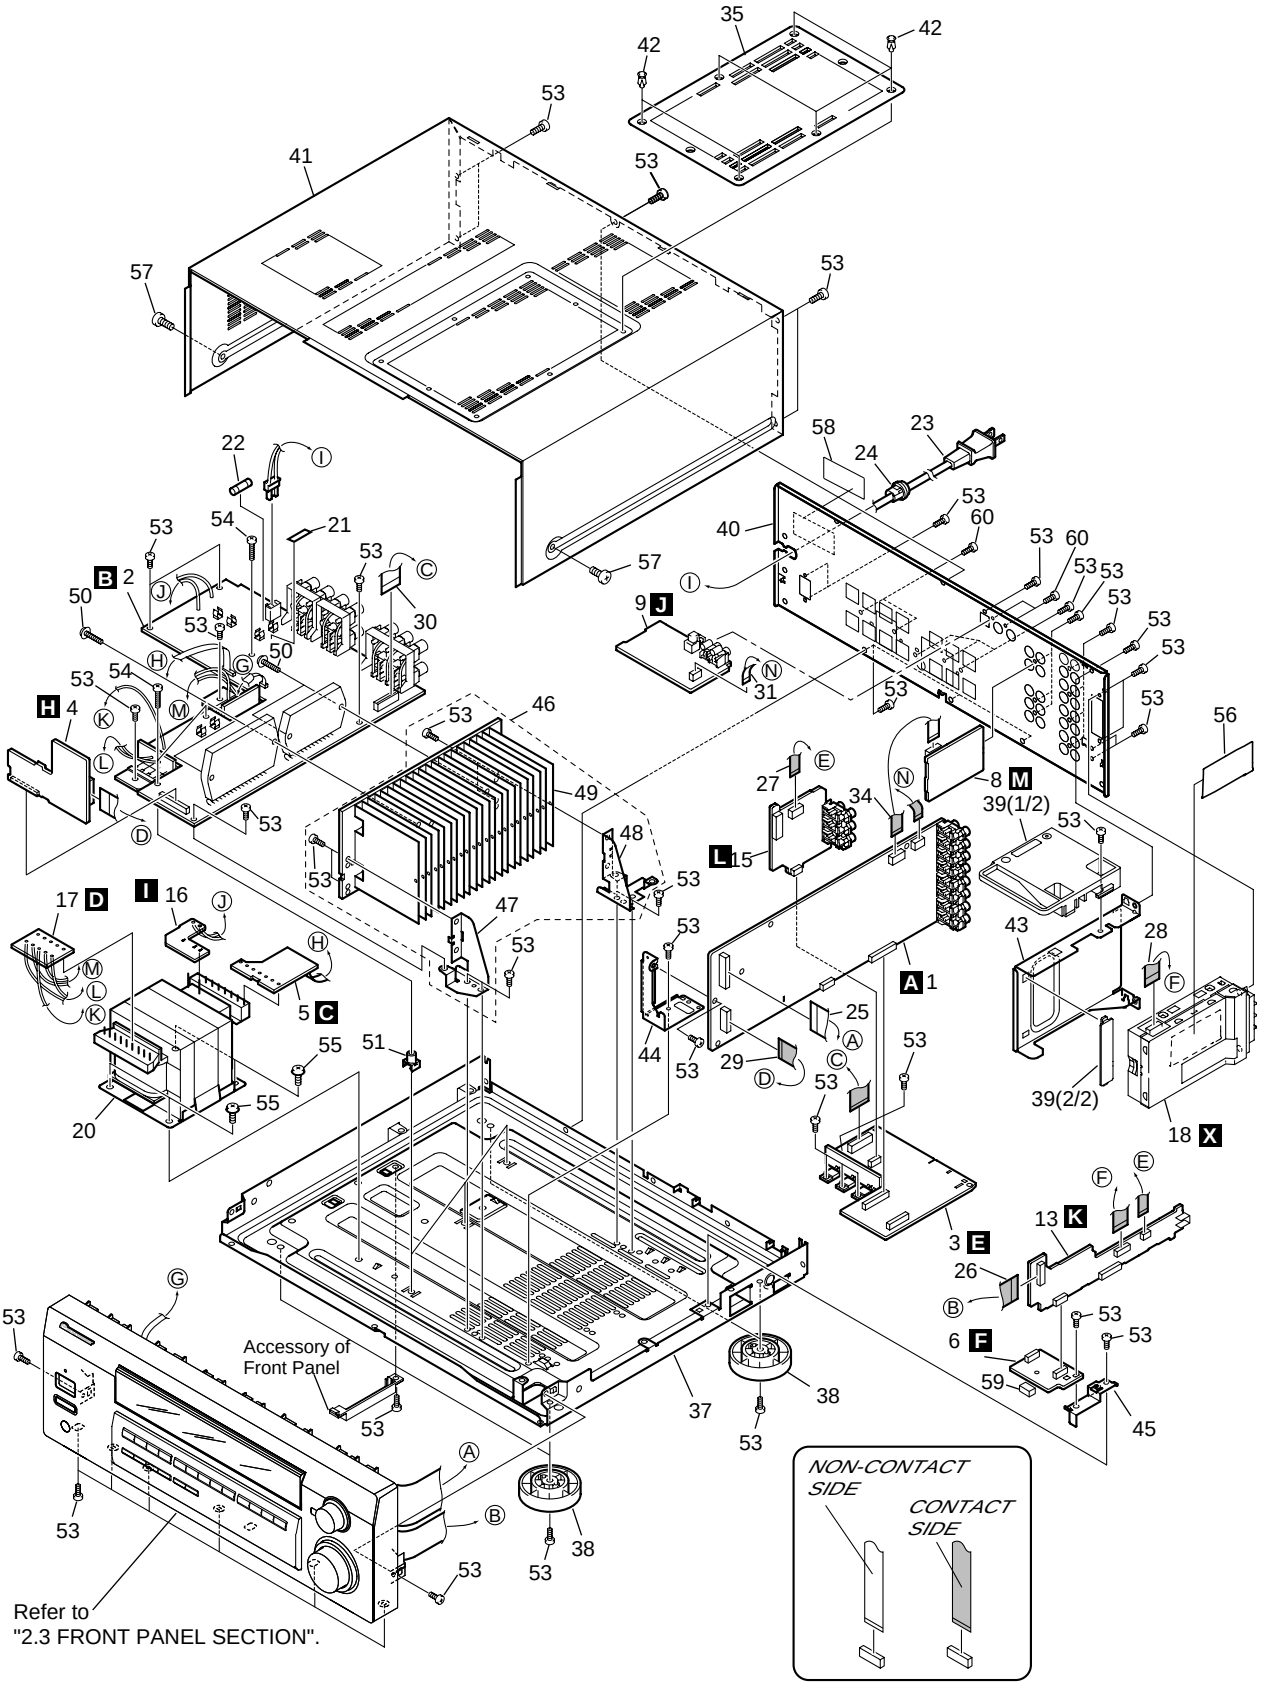

EXTERIOR SECTION parts List

Mark	No.	Description	Part No.
	1	D.D & INPUT ASSY	XWX3044
	2	AMP & PRIMAR ASSY	XWZ3533
	3	REGULATOR ASSY	XWZ3544
	4	AMP INPUT ASSY	XWZ3547
	5	TRANS2 ASSY	XWZ3555
	6	HASHIGETA ASSY	XWZ3566
	7	• • • • •	
	8	6CH IN ASSY	XWZ3507
	9	DIGITAL IN ASSY	XWZ3747
	10	• • • • •	
	11	• • • • •	
	12	• • • • •	
	13	KAWA ASSY	XWZ3529
	14	• • • • •	
	15	VIDEO ASSY	XWZ3490
NSP	16	TRANS1 ASSY	XWZ3552
NSP	17	TRANS3 ASSY	XWZ3560
	18	FM/AM TUNER MODULE	AXQ7232
	19	• • • • •	
⚠	20	Power Transformer (T1)	ATS7259
NSP	21	Fuse Card	AAX7277
⚠	22	Fuse (FU1:T2.5A)	REK1026
⚠	23	Power Cord	See Contrast table(2)
	24	Cord Stopper	CM-22B
	25	28P F•F•C/30V (J31)	XDD3097
		DD CN102 - FRONT CN402	
	26	17P F•F•C/30V (J32)	XDD3098
		KAWA CN5001 - FRONT CN401	
	27	7P F•F•C/30V (J33)	XDD3099
		KAWA CN5004 - VIDEO CN503	
	28	13P F•F•C/30V (J34)	XDD3100
		KAWA CN5005 - FM/AM TUNER CN201	
	29	19P F•F•C/30V (J35)	XDD3101
		DD CN106 - AMP INPUT CN254	
	30	23P F•F•C/30V (J36)	XDD3102
		AMP CN53 - REGULATOR CN801	
	31	7P F•F•C/30V (J37)	XDD3103
		DD CN9101 - DIGITAL IN CN1901	
	32	• • • • •	
	33	• • • • •	
	34	9P F•F•C/30V (J48)	XDD3106
		DD CN104 - 6CH IN CN307	
	35	Top Cover	See Contrast table(2)
	36	• • • • •	
NSP	37	Under Base 409	ANA7094
	38	Insulator	PNW2766
	39	FFC Cover R5	XMR3047
	40	Rear Panel	XNC3191
	41	Bonnet D510	See Contrast table(2)
	42	Push Rivet	See Contrast table(2)
	43	Tuner Shield R5	XNG3072
	44	PCB Angle R5	XNG3073
	45	Reg Support R5	XNG3074
NSP	46	Heat Sink Assy 0.8	ANH7118
	47	Heat Sink Angle F	ANG7251
	48	Heat Sink Angle R	ANG7252
NSP	49	Heat Sink 0.8	ANH7110
	50	Screw 3x23	ABA7043
	51	PCB Mold	AMR2533
	52	• • • • •	
	53	Screw	BBZ30P080FMC
	54	Screw	BBZ30P200FMC
	55	Screw	FBT40P080FZK
	56	Tuner Sheet	XEC3031
	57	Screw	See Contrast table(2)
NSP	58	N Label 512/MY	See Contrast table(2)
	59	Spacer R5(Rub)	XEB3029
	60	Screw	BBT30P100FCC

(2) CONTRAST TABLE

VSX-D512-S/MVXJI, /MYXJIEW, /MYXJIFG and VSX-D512-K/MYXJIEW are constructed the same except for the following :

Mark	NO	Symbol and Description	VSX-D512-K/ MYXJIEW	VSX-D512-S/ MVXJI	VSX-D512-S/ MYXJIEW	VSX-D512-S/ MYXJIFG
⚠	23	AC Power Cord	VDG1077	VDG1076	VDG1077	VDG1077
	35	Top Cover	XME3004	XME3006	XME3006	XME3006
	41	Bonnet	XZN3111	XZN3122	XZN3122	XZN3122
	42	Push Rivet	AEC7025	XEC3026	XEC3026	XEC3026
	57	Screw	FBT40P080FZK	FBT40P080FNI	FBT40P080FNI	FBT40P080FNI
NSP	58	N Label 512	Not used	XAL3150	XAL3150	XAL3150

2.3 FRONT PANEL SECTION

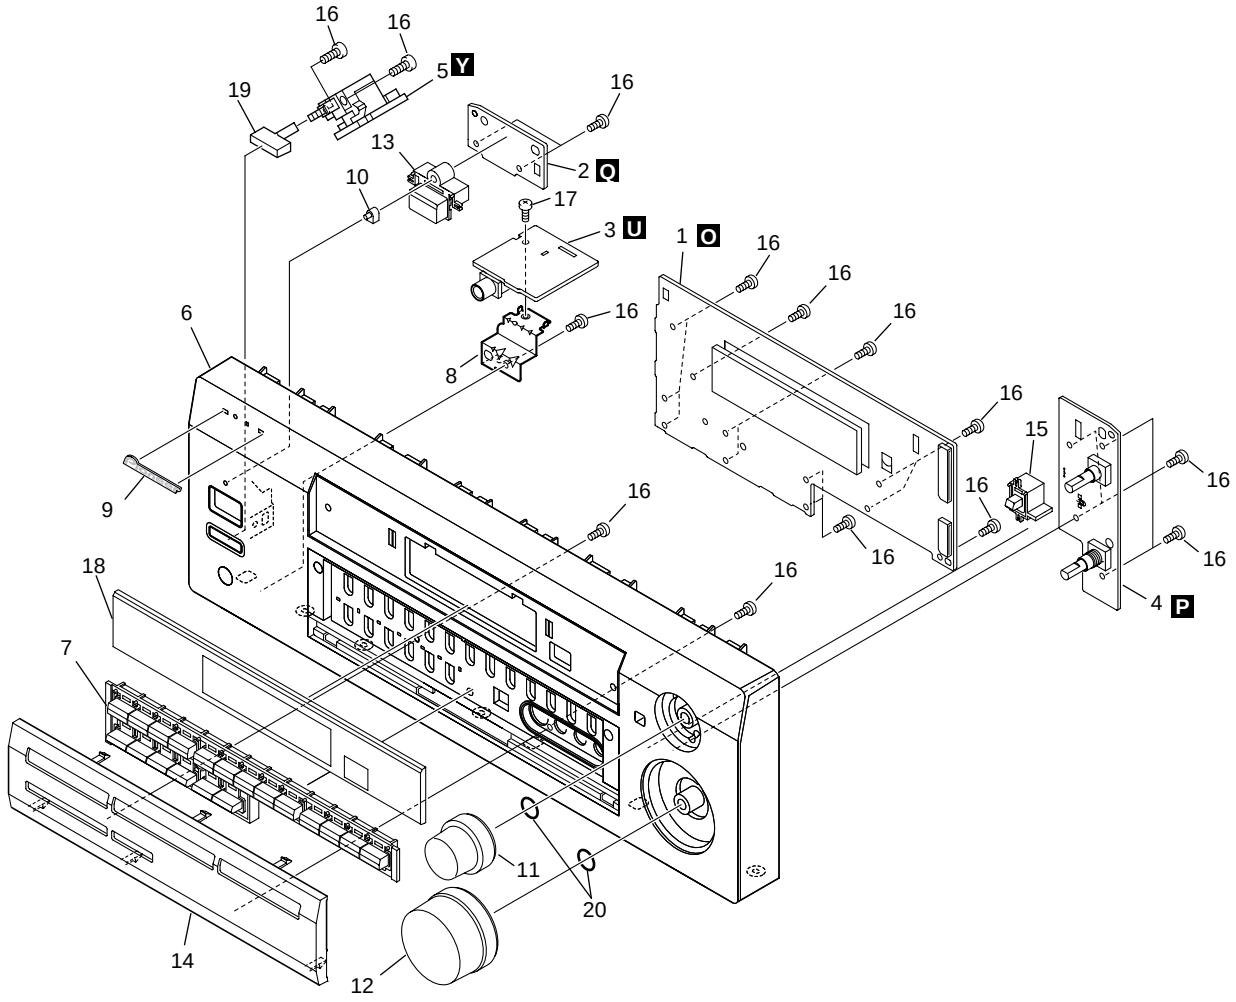

FRONT PANEL SECTION parts List

Mark No.	Description	Part No.
1	FRONT ASSY	XWZ3493
2	POWER SW ASSY	XWZ3510
3	H.P. ASSY	XWZ3513
4	R. ENCODER ASSY	XWZ3511
5	MECH SW ASSY	XWZ3514
6	Front Panel	See Contrast table(2)
7	Sub Button	See Contrast table(2)
8	Earth Plate R5 HP	XNG3066
9	Pioneer Badge	See Contrast table(2)
10	LED Lens 1.6	XAK3308
11	Select Knob	See Contrast table(2)
12	Volume Knob	See Contrast table(2)
13	Power Button	See Contrast table(2)
14	Sub Panel	See Contrast table(2)
15	Jog Button	See Contrast table(2)
16	Screw	PPZ30P080FMC
17	Screw	BBZ30P080FMC
18	D Panel R5 W	XAK3320
19	Power Button M	See Contrast table(2)
20	C Ring DIA8.1	XBH3016

(2) CONTRAST TABLE

VSX-D512-S/MVXJI, /MYXJIEW, /MYXJIFG and VSX-D512-K/MYXJIEW are constructed the same except for the following :

Mark	NO	Symbol and Description	VSX-D512-K/ MYXJIEW	VSX-D512-S/ MVXJI	VSX-D512-S/ MYXJIEW	VSX-D512-S/ MYXJIGR
	6	Front Panel	XMB3113	XMB3114	XMB3114	XMB3114
	7	Sub Button	XAD3125	XAD3133	XAD3133	XAD3133
	9	Pioneer Badge	XAM3006	VAM1129	VAM1129	VAM1129
	11	Select Knob	XAB3023	XAB3024	XAB3024	XAB3024
	12	Volume Knob	XAB3025	XAB3026	XAB3026	XAB3026
	13	Power Button	XAD3123	XAD3129	XAD3129	XAD3129
	14	Sub Panel	XAK3273	XAK3385	XAK3385	XAK3385
	15	Jog Button	XAD3124	XAD3131	XAD3131	XAD3131
	19	Power Button M	XAD3127	XAD3137	XAD3137	XAD3137

3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

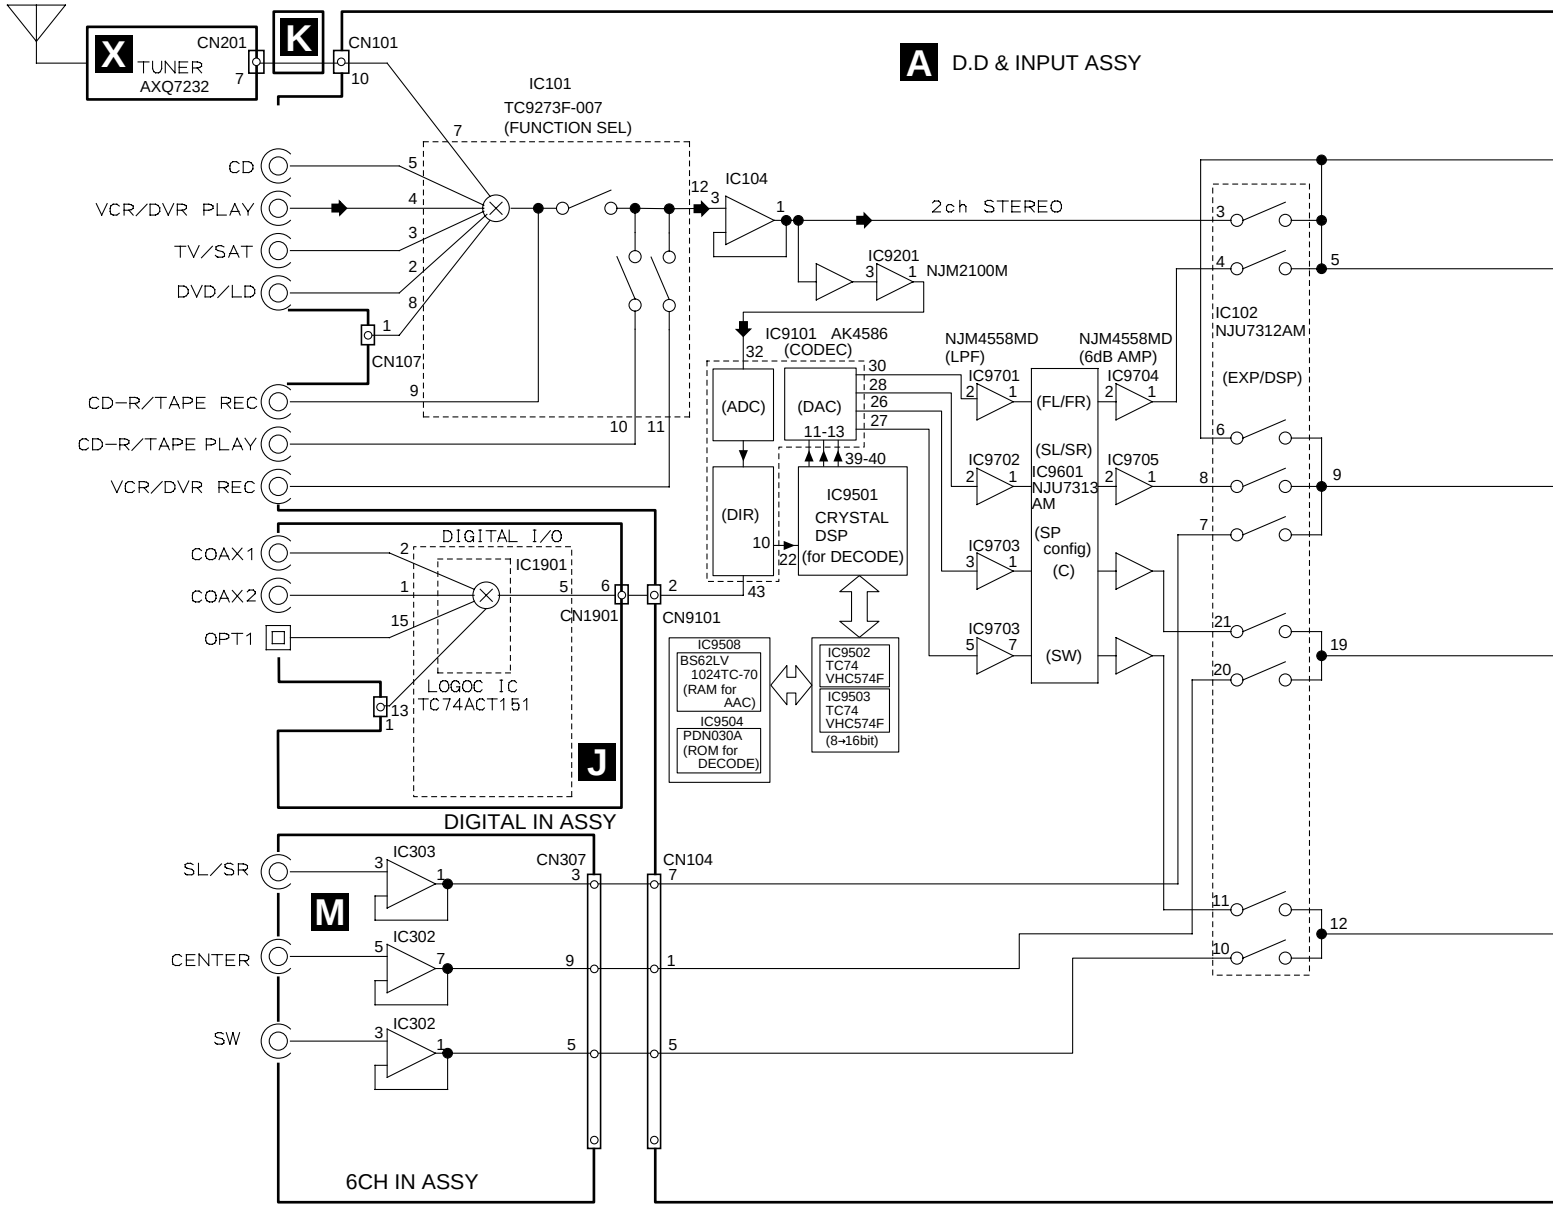

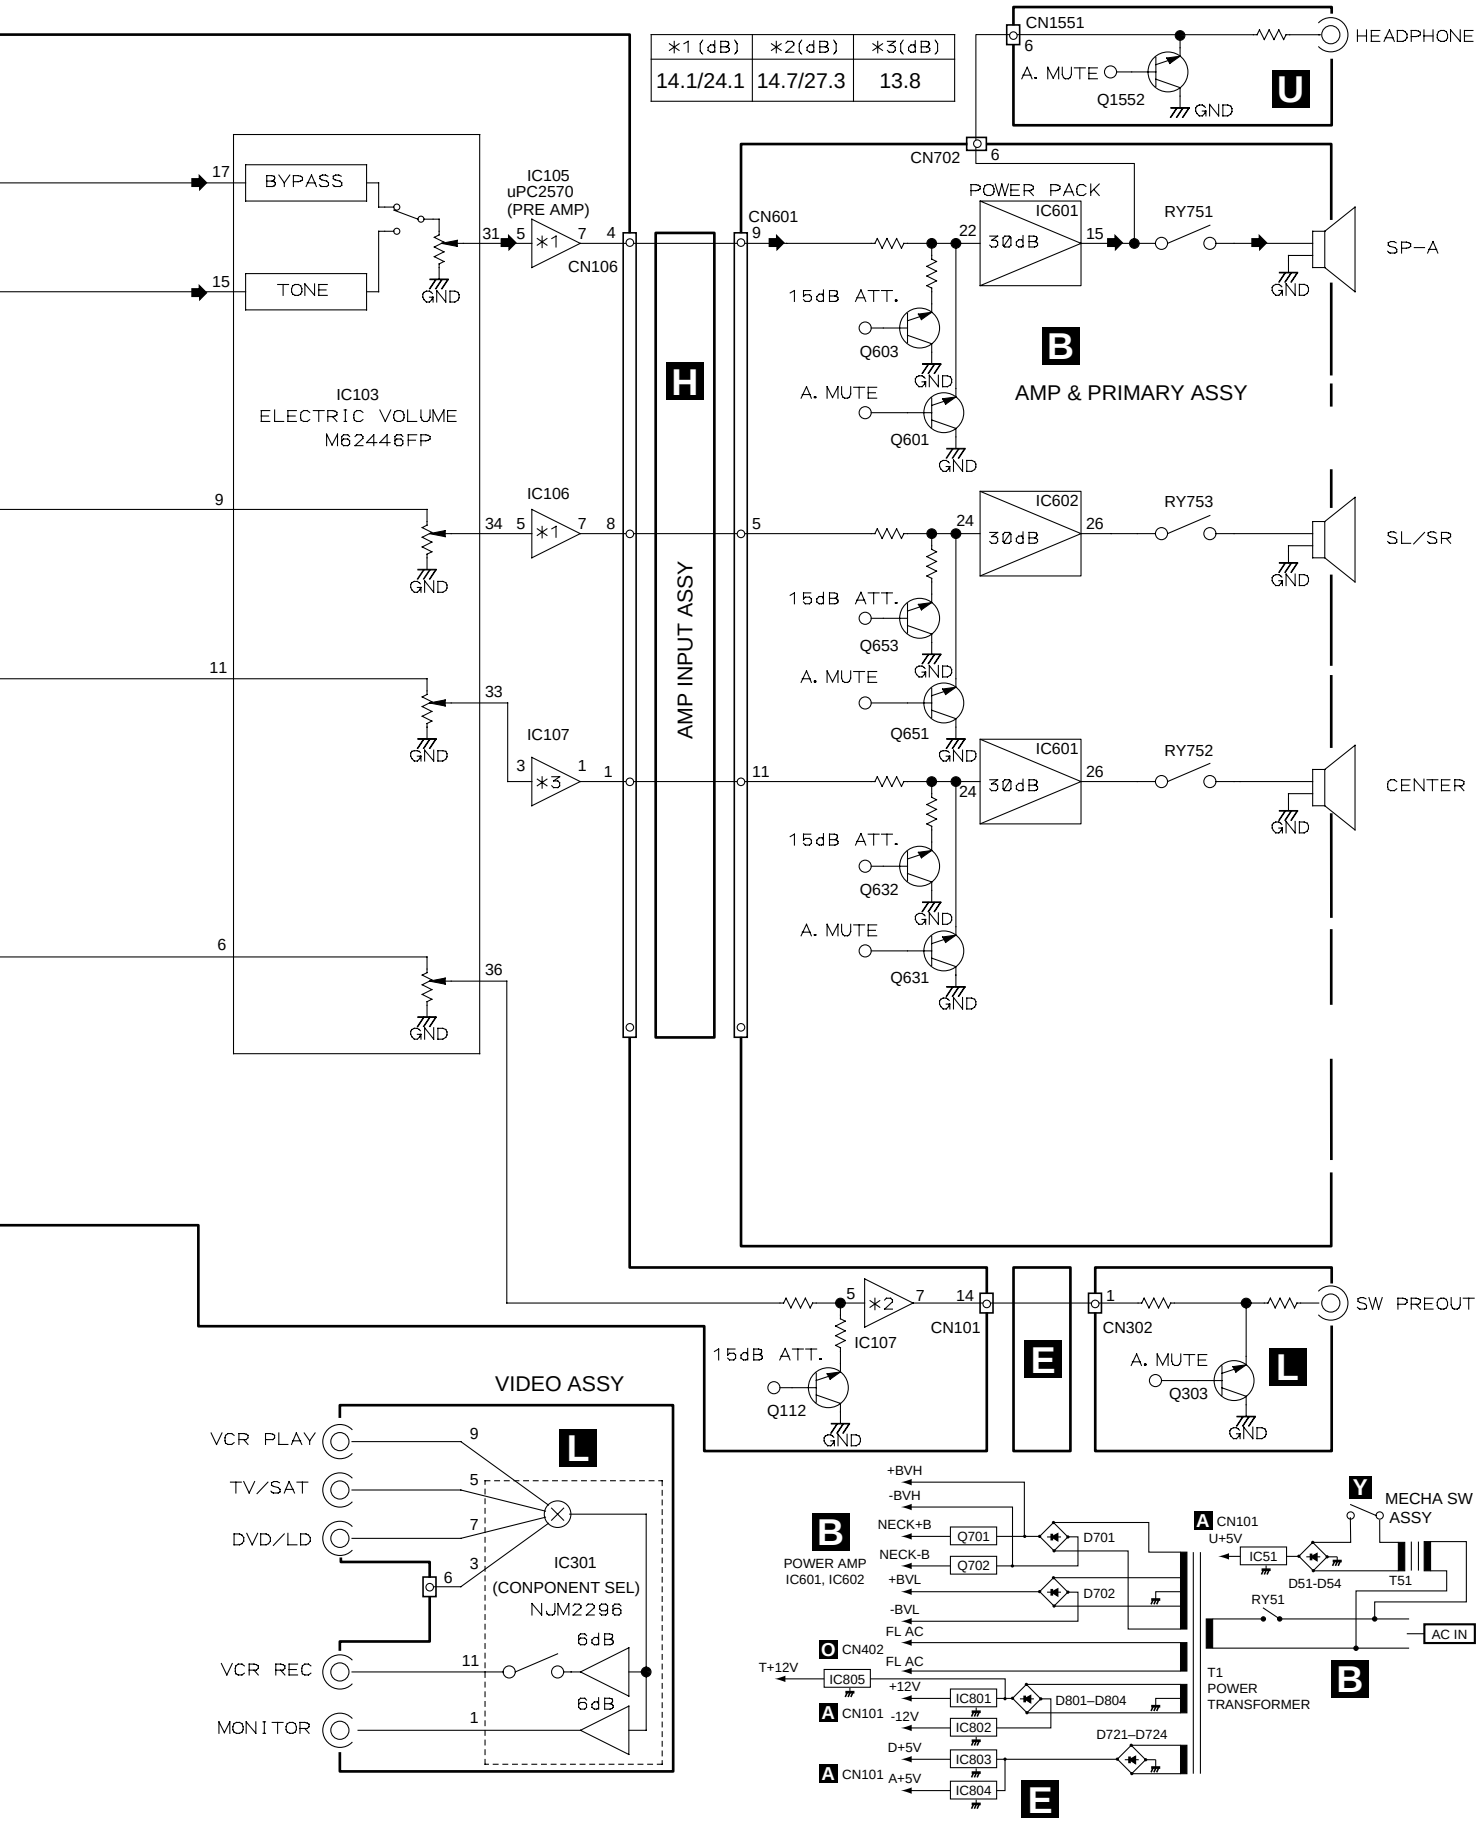
∗1 (dB) ∗2(dB) ∗3(dB)
14.1/24.1 14.7/27.3 13.8
CN1551
HEADPHONE
A. MUTE
Q1552
GND
U
CN702
POWER PACK
IC601
RY751
SP–A
BYPASS
TONE
IC105
uPC2570
(PRE AMP)
CN106
CN601
15dB ATT.
Q603
A. MUTE
Q601
B
AMP & PRIMARY ASSY
H
AMP INPUT ASSY
IC103
ELECTRIC VOLUME
M62446FP
IC106
IC602
RY753
SL/SR
Q653
Q651
IC107
IC601
RY752
CENTER
Q632
Q631
∗2
CN101
Q112
E
CN302
SW PREOUT
Q303
L
VIDEO ASSY
VCR PLAY
TV/SAT
DVD/LD
VCR REC
MONITOR
IC301
(CONPONENT SEL)
NJM2296
6dB
+BVH
-BVH
NECK+B
NECK-B
+BVL
-BVL
FL AC
Q701
Q702
D701
D702
POWER AMP
IC601, IC602
CN402
T+12V
IC805
+12V
-12V
IC801
IC802
D801–D804
D+5V
A+5V
IC803
IC804
D721–D724
CN101
U+5V
IC51
D51-D54
T51
RY51
AC IN
T1
POWER
TRANSFORMER
Y
MECHA SW
ASSY

3.2 OVERALL WIRING CONNECTION DIAGRAM

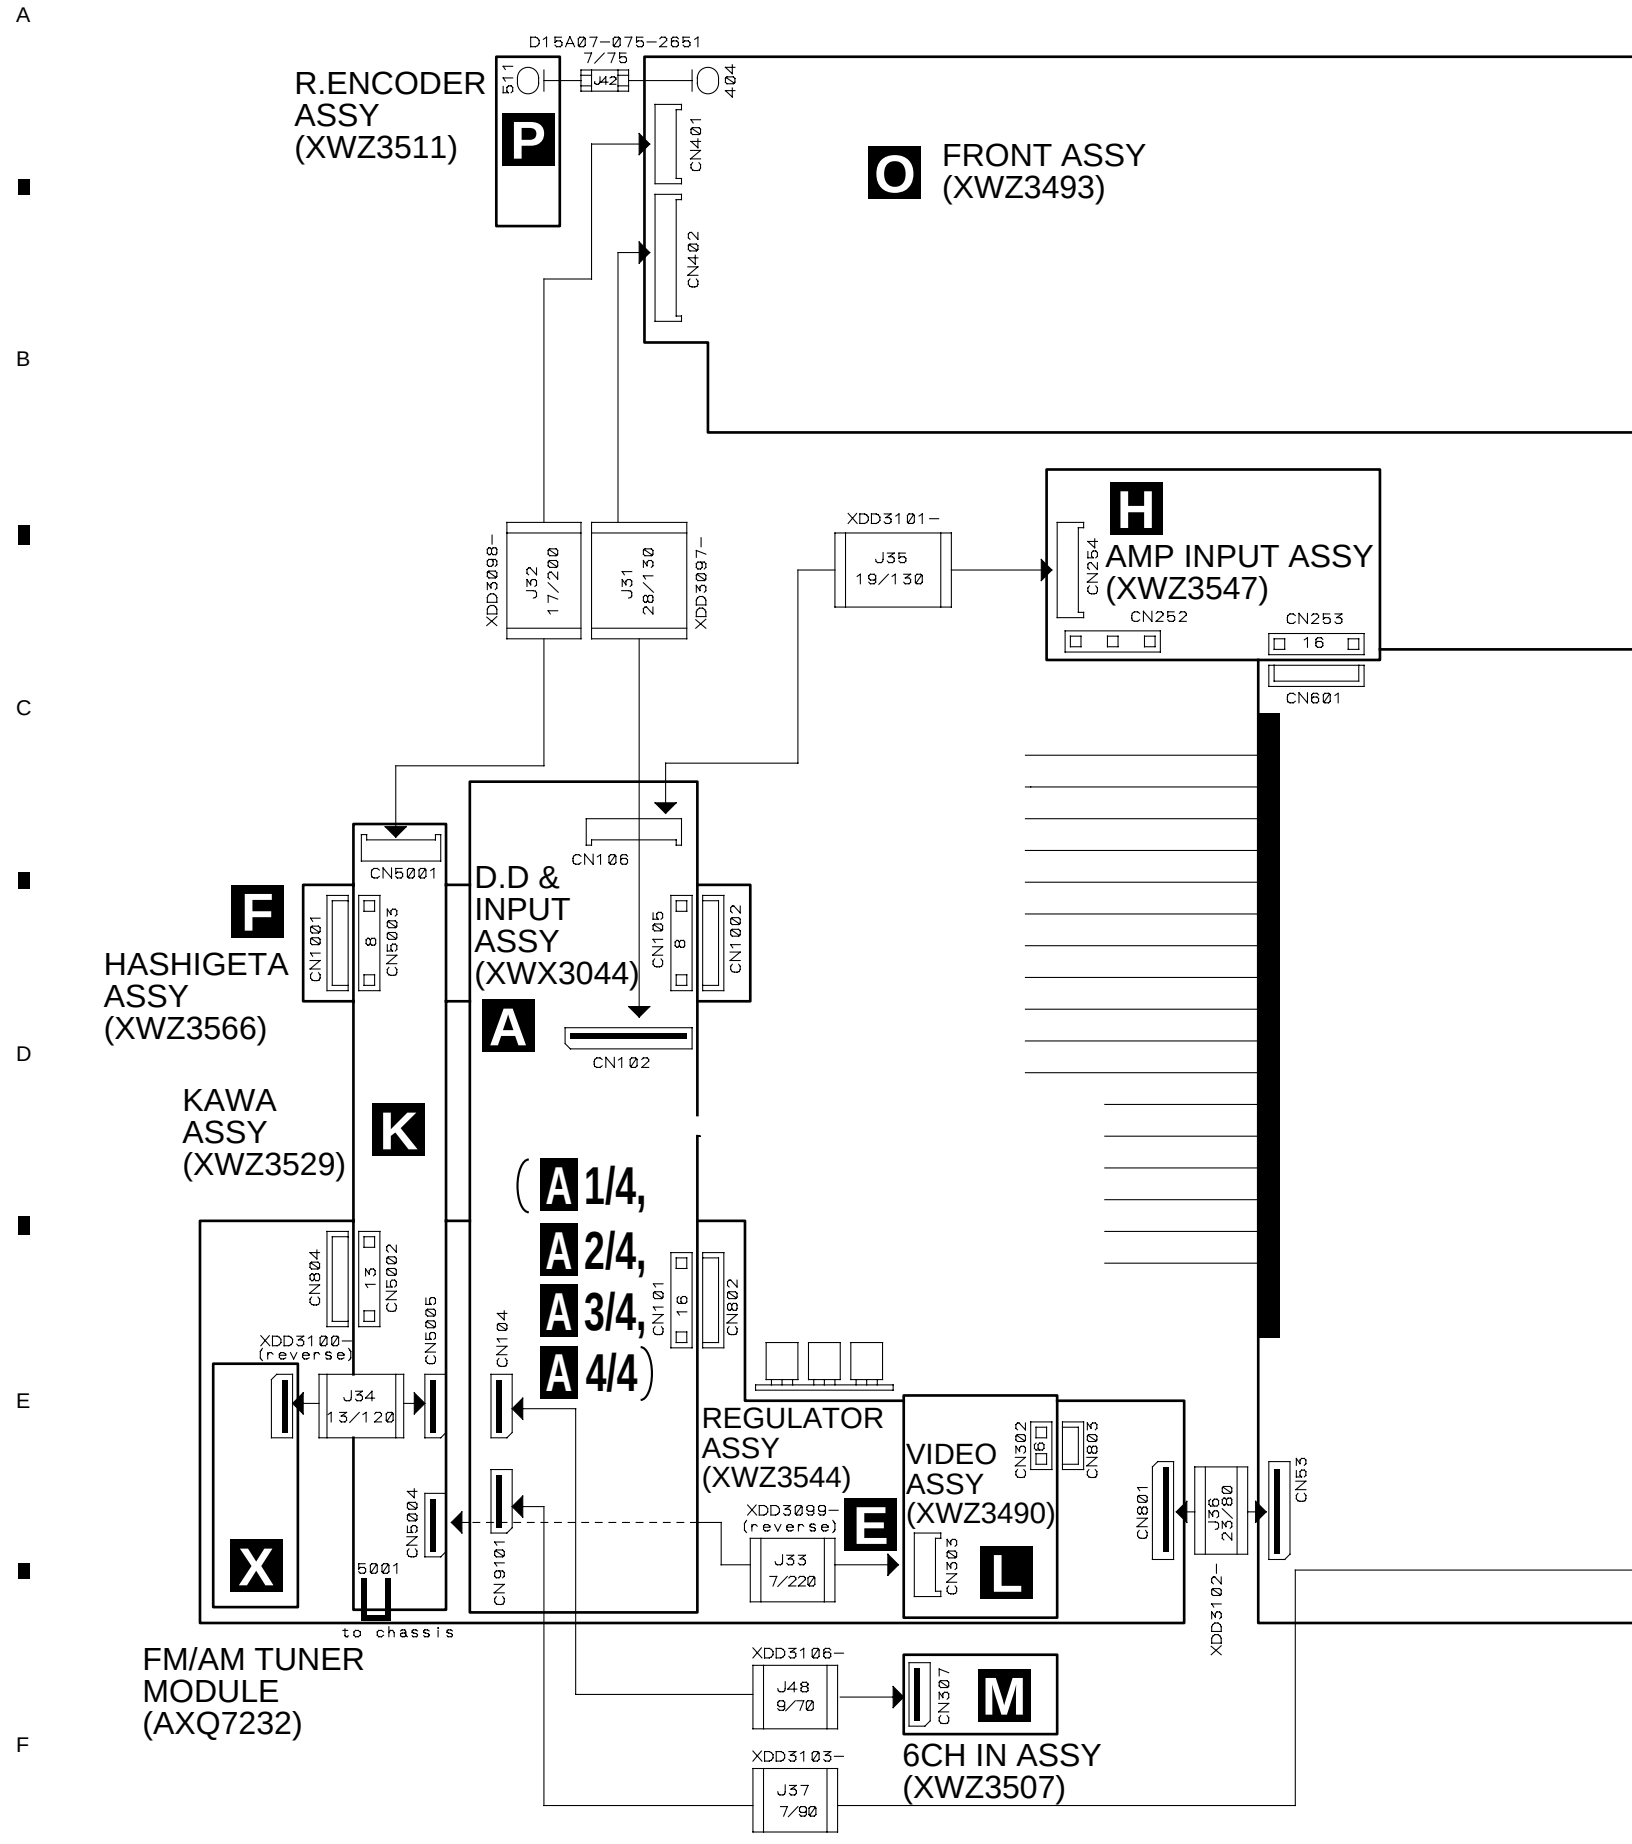

Note : When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".

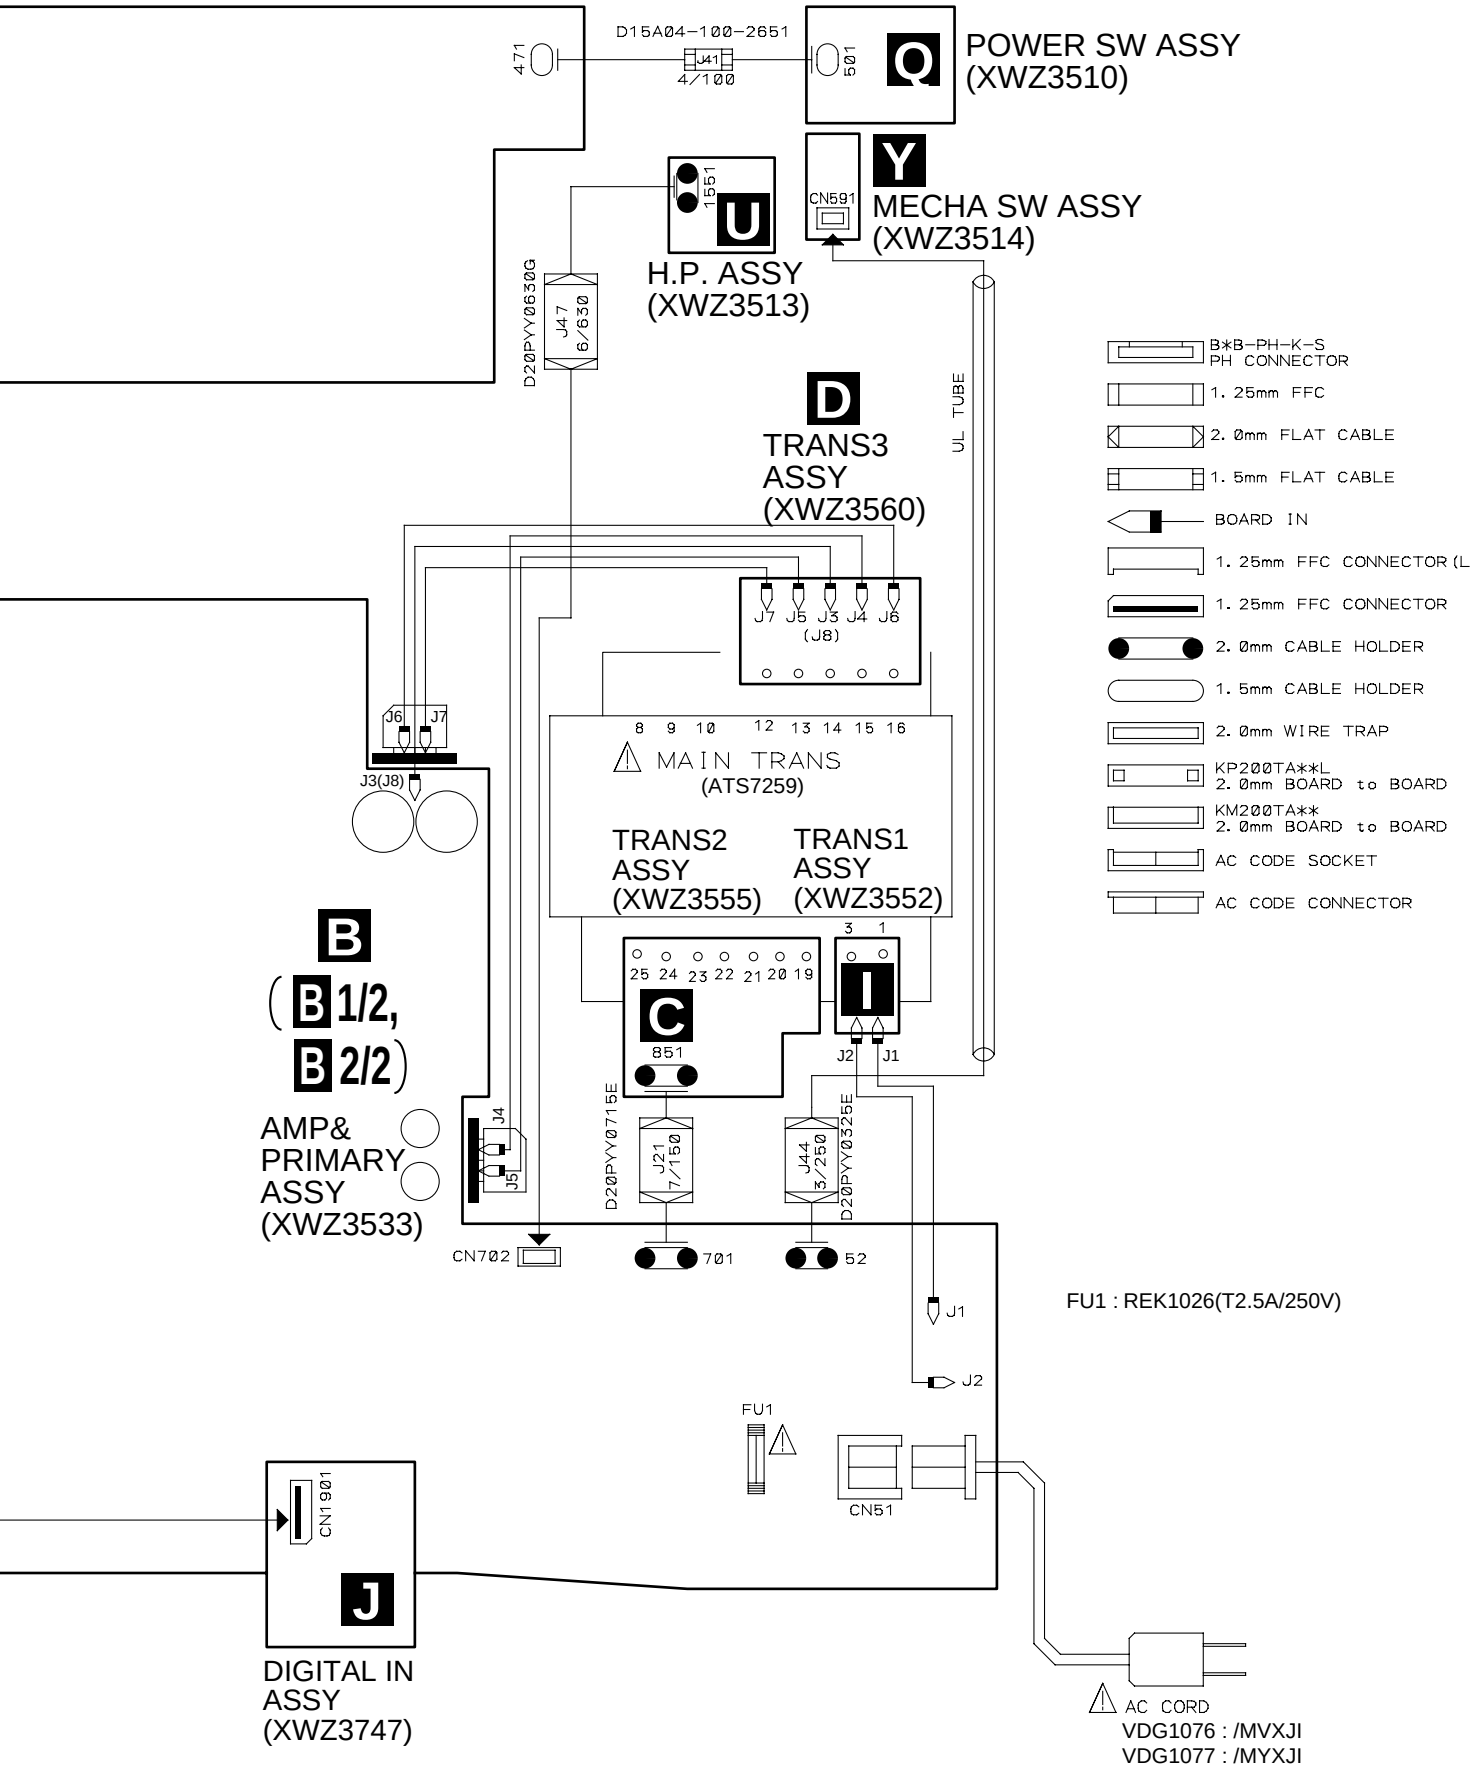

FU1 : REK1026(T2.5A/250V)

3.3 D.D & INPUT(1/4) ASSY

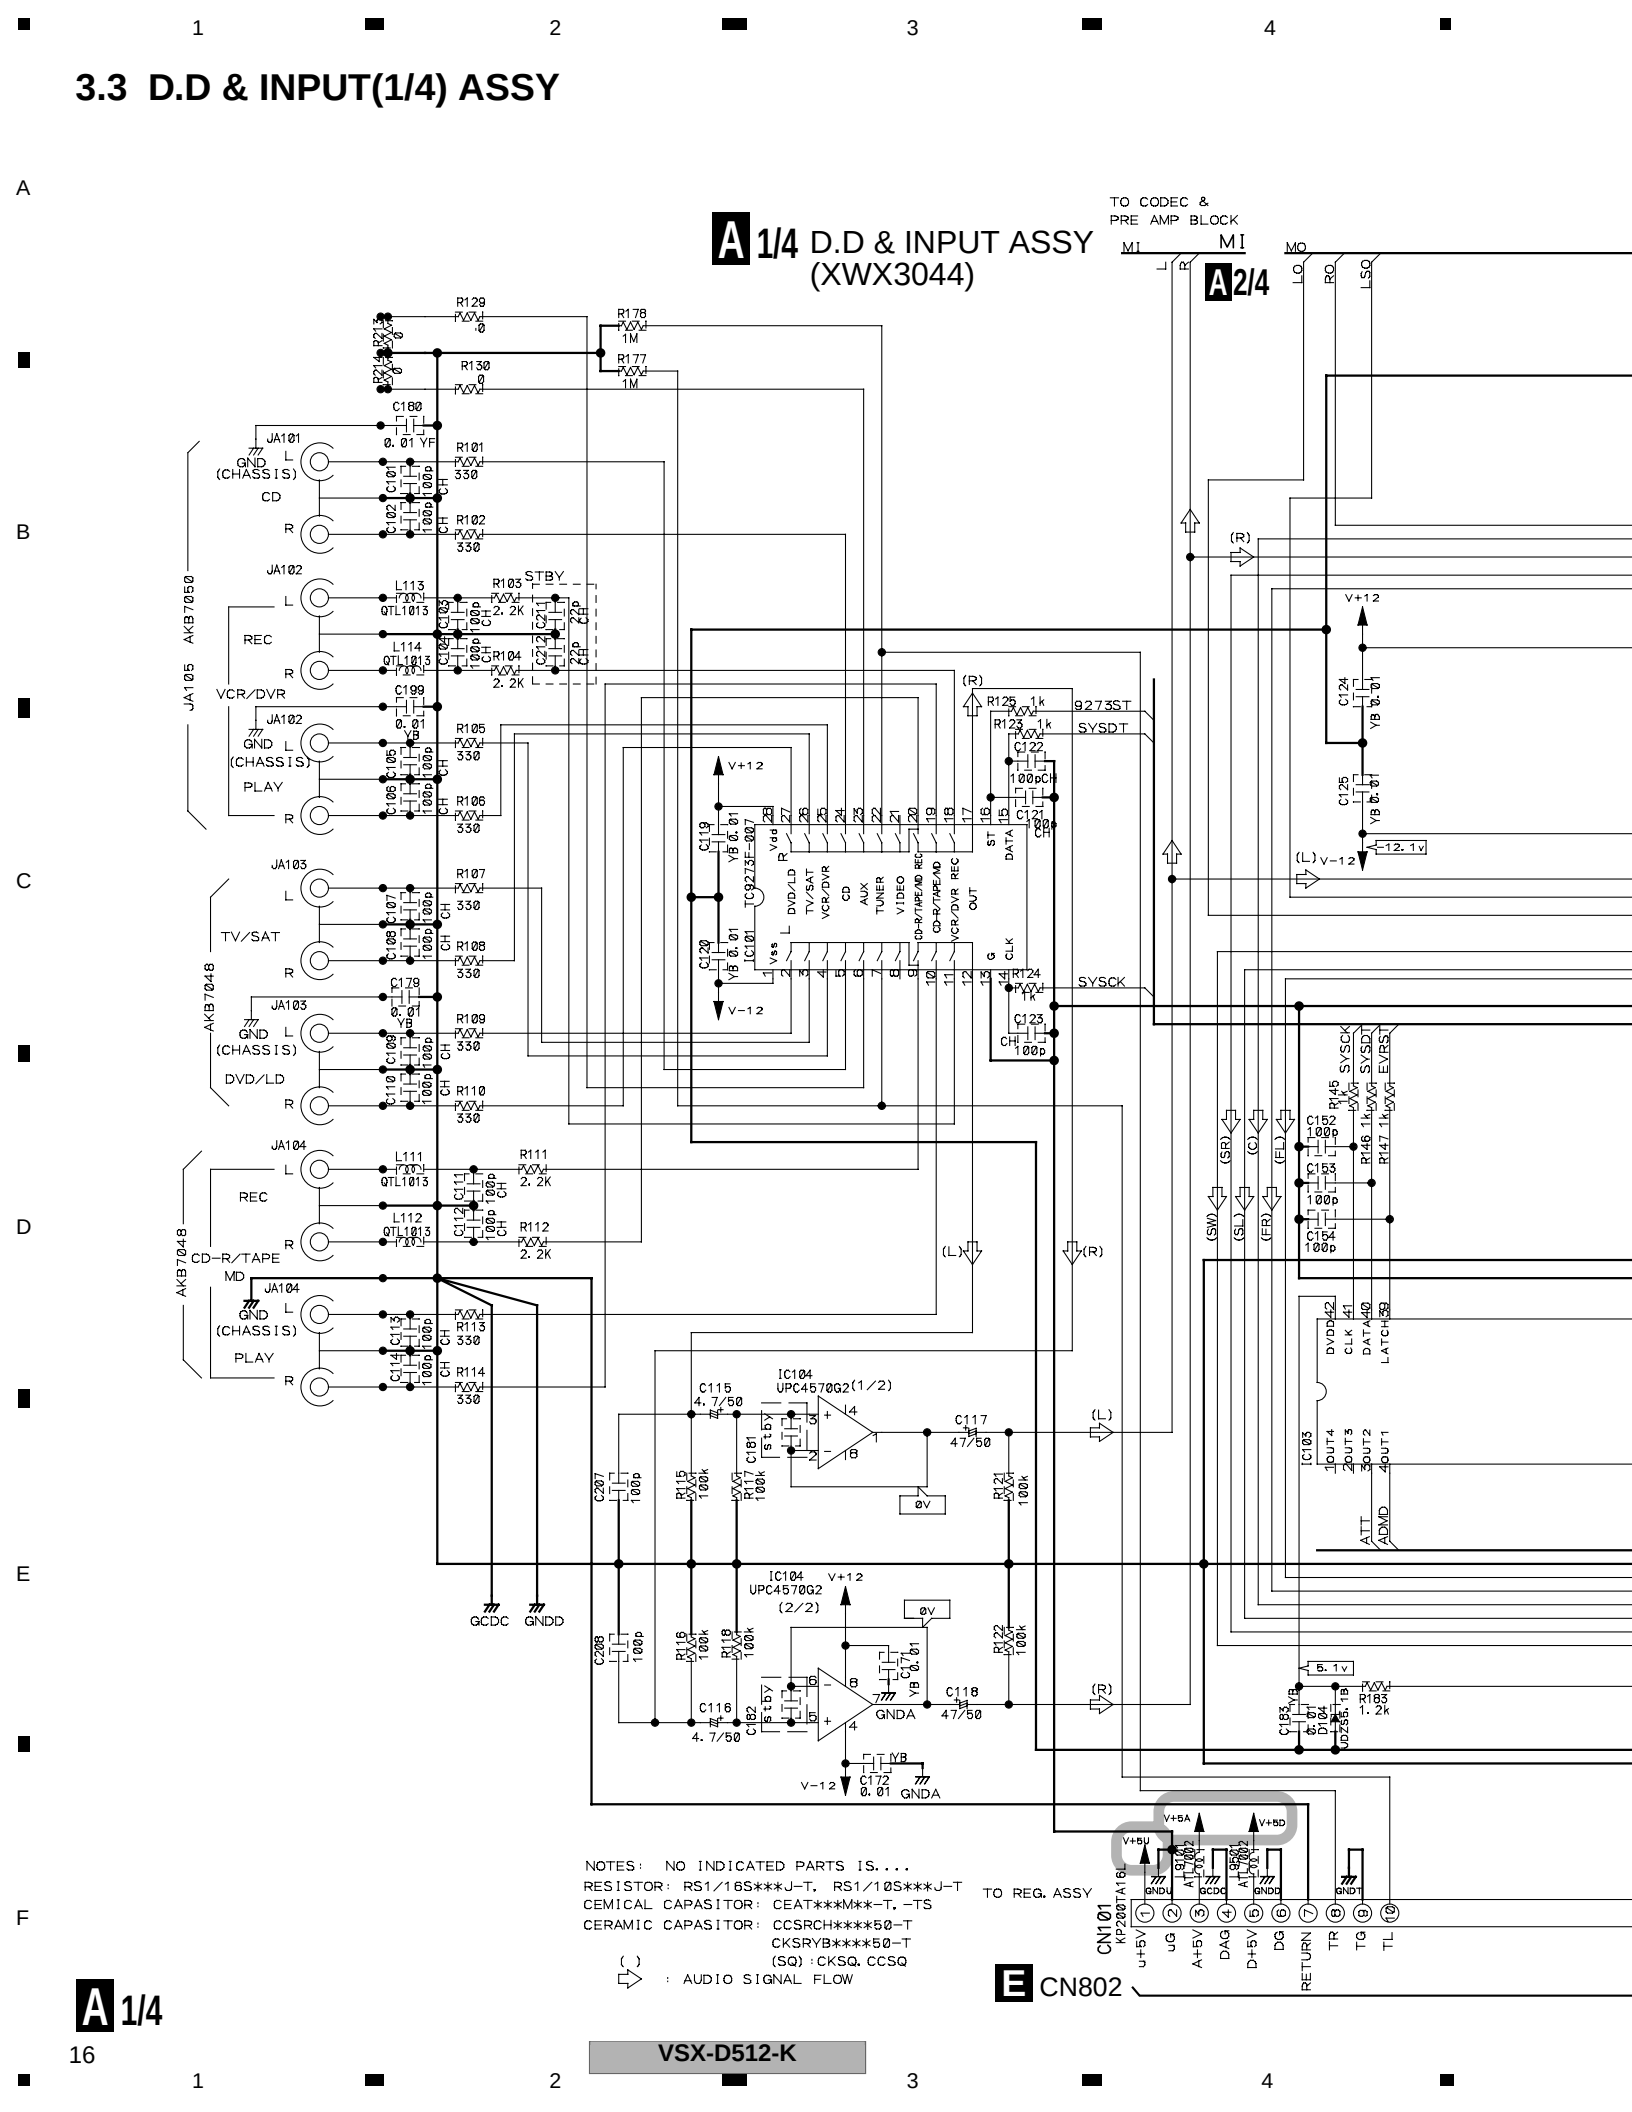

: The power supply is shown with the marked box.

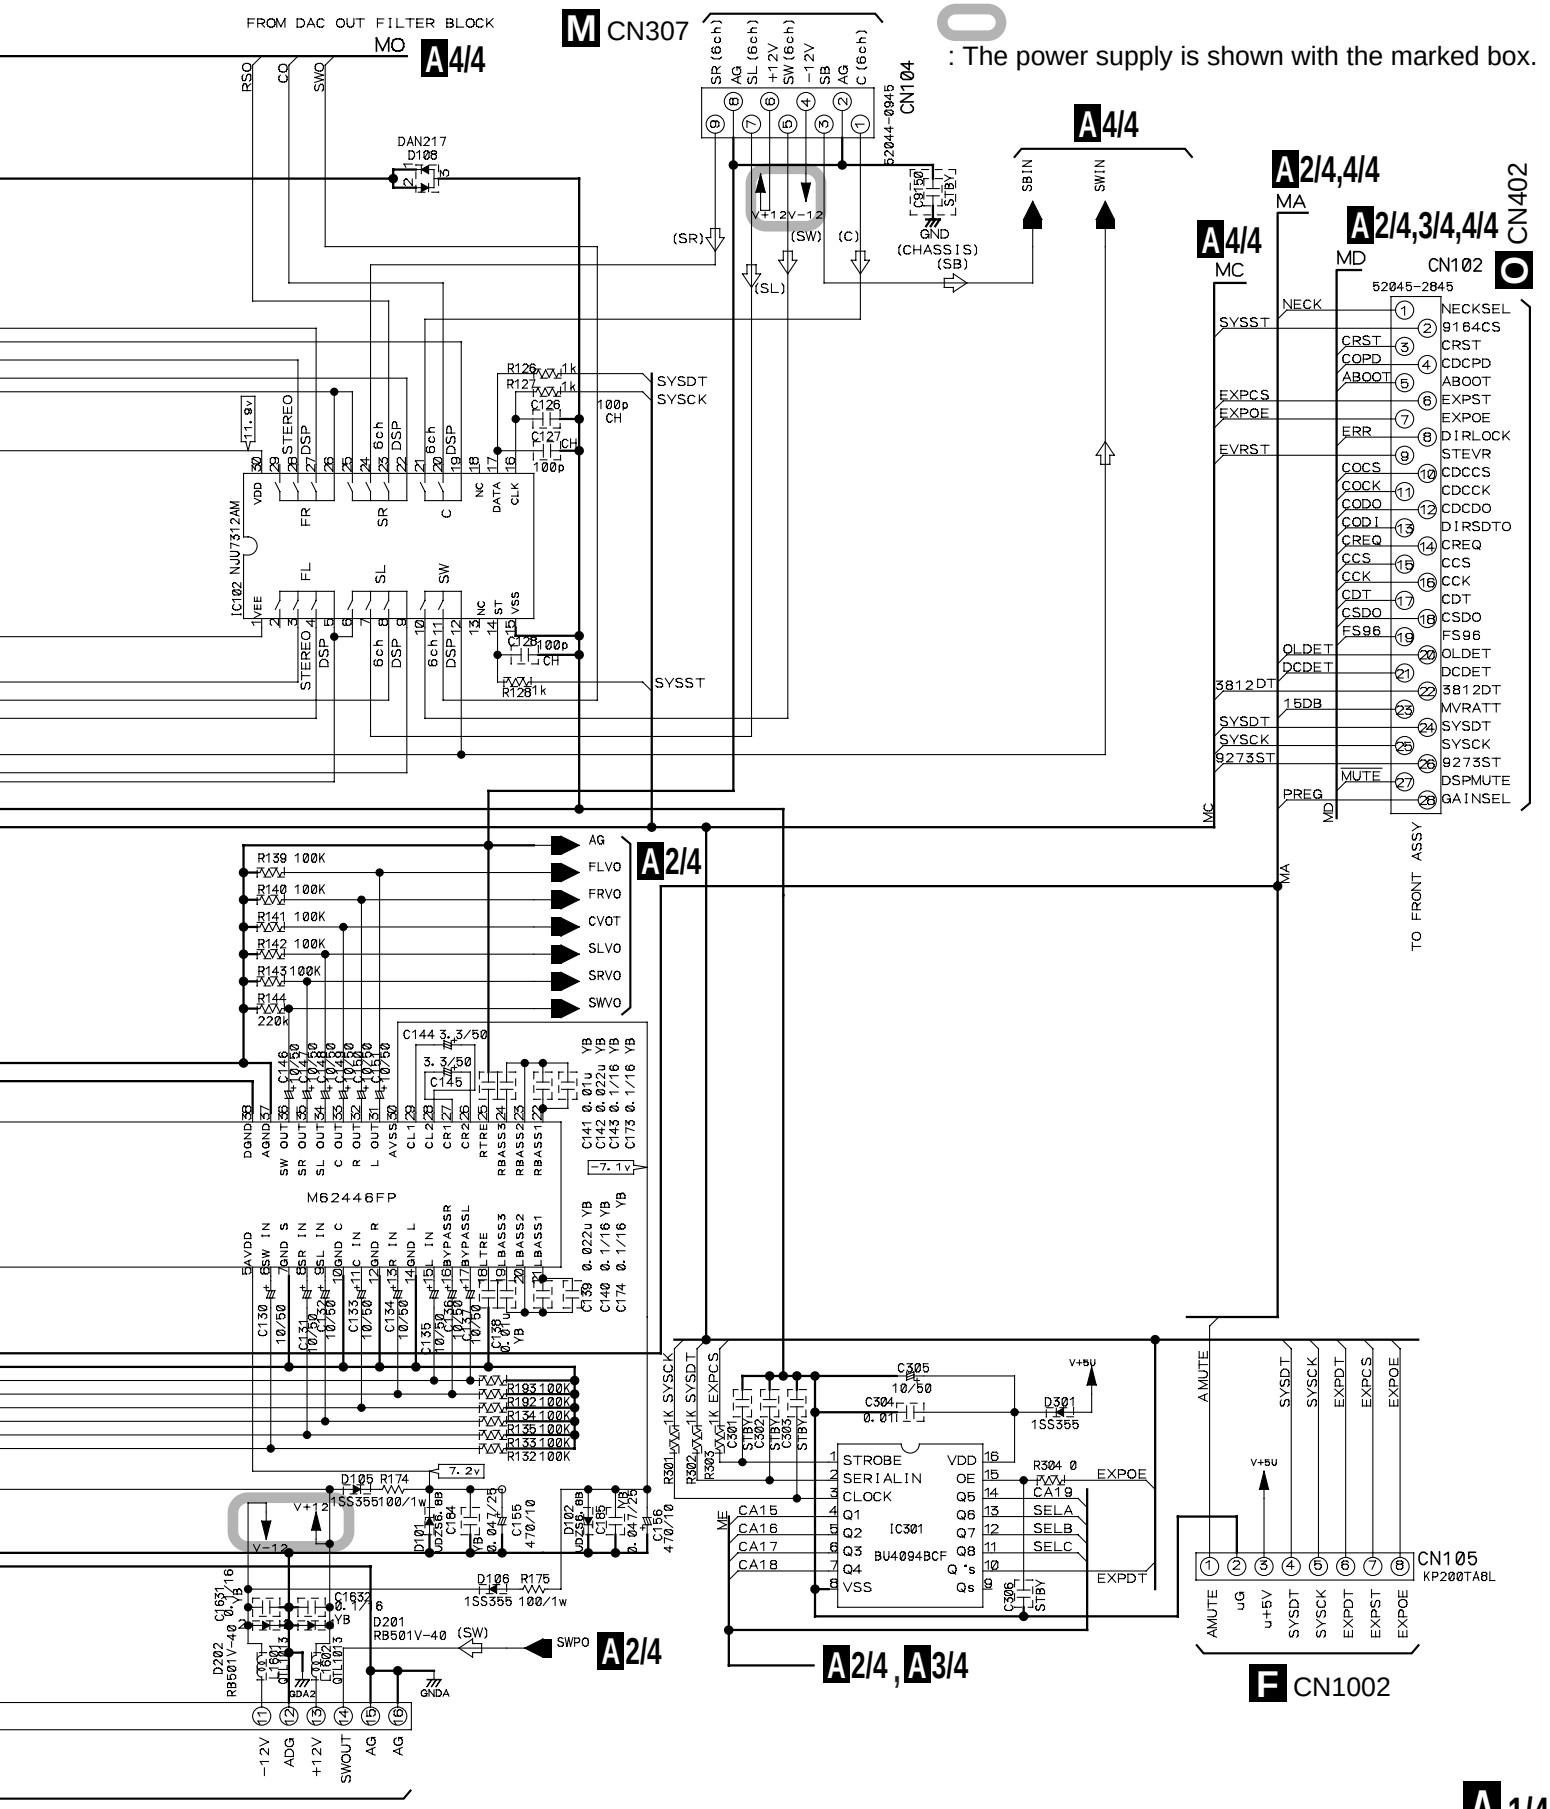

3.4 D.D & INPUT(2/4) ASSY

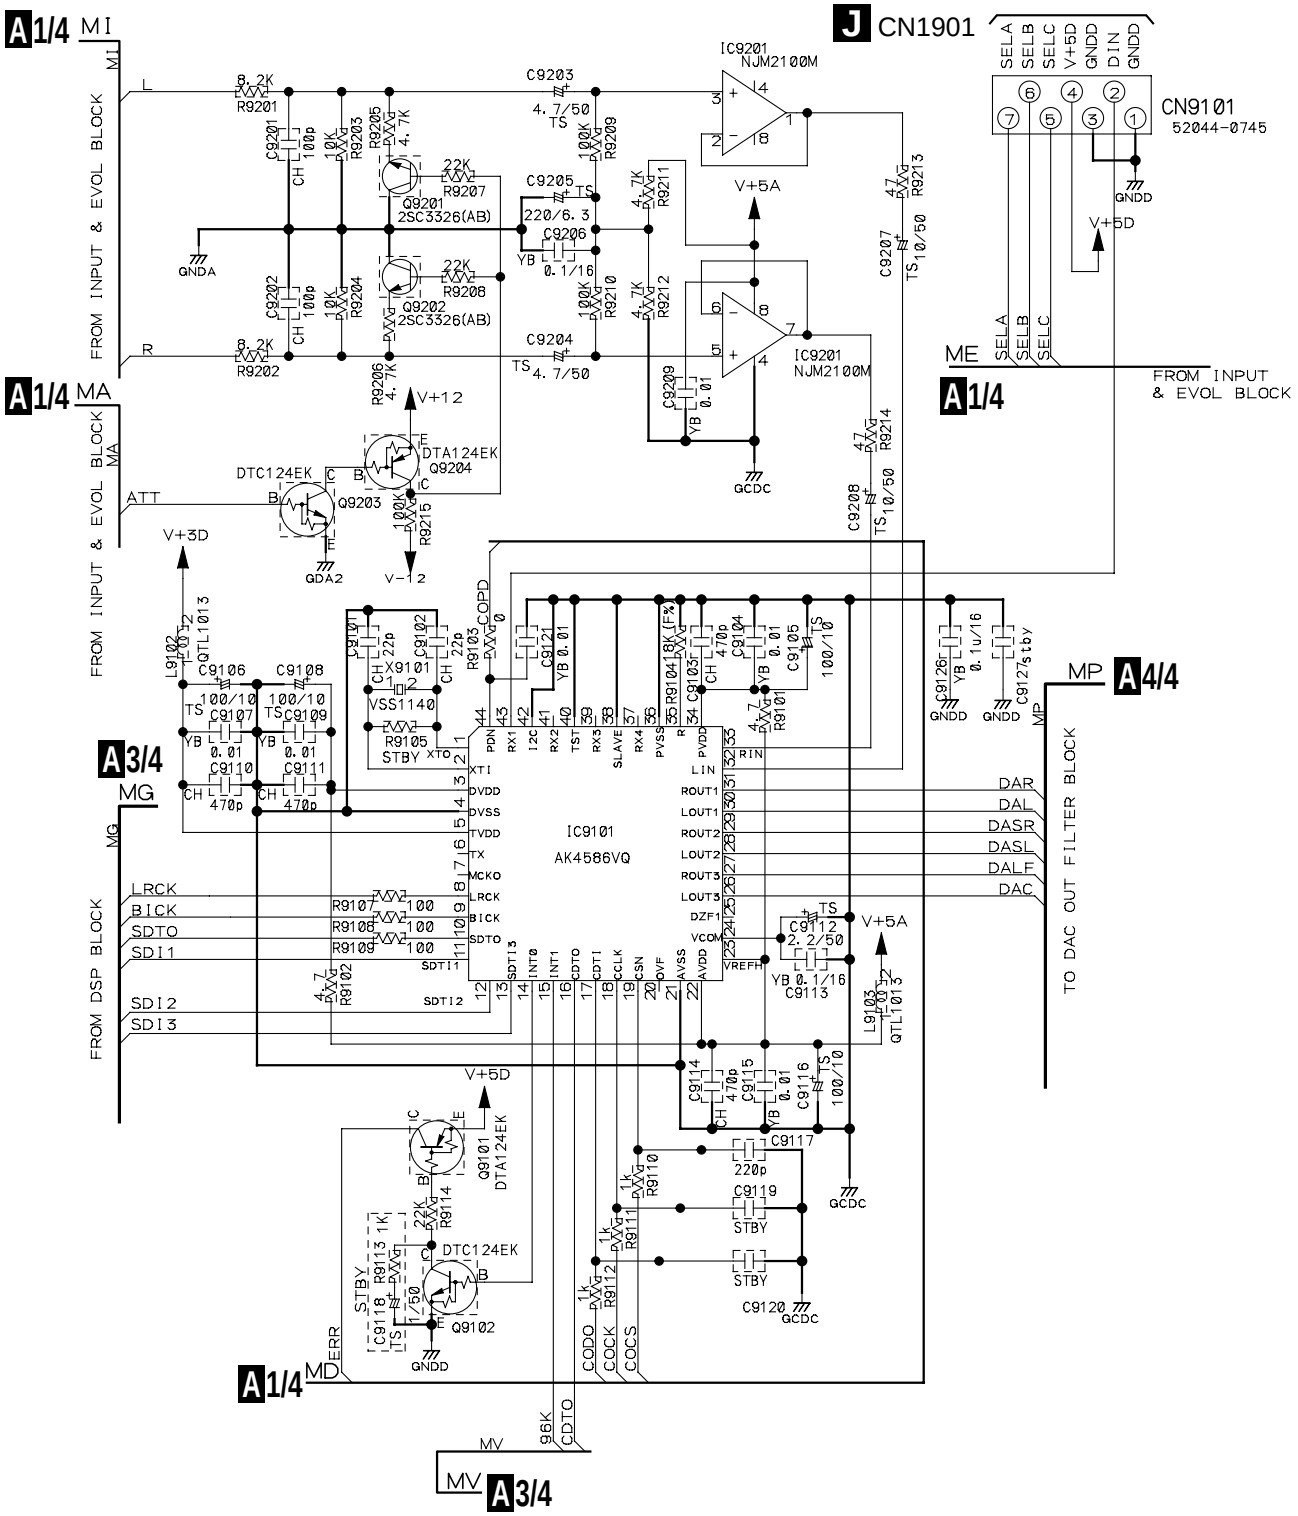

A 2/4 D.D & INPUT ASSY
(XWX3044)

A 2/4

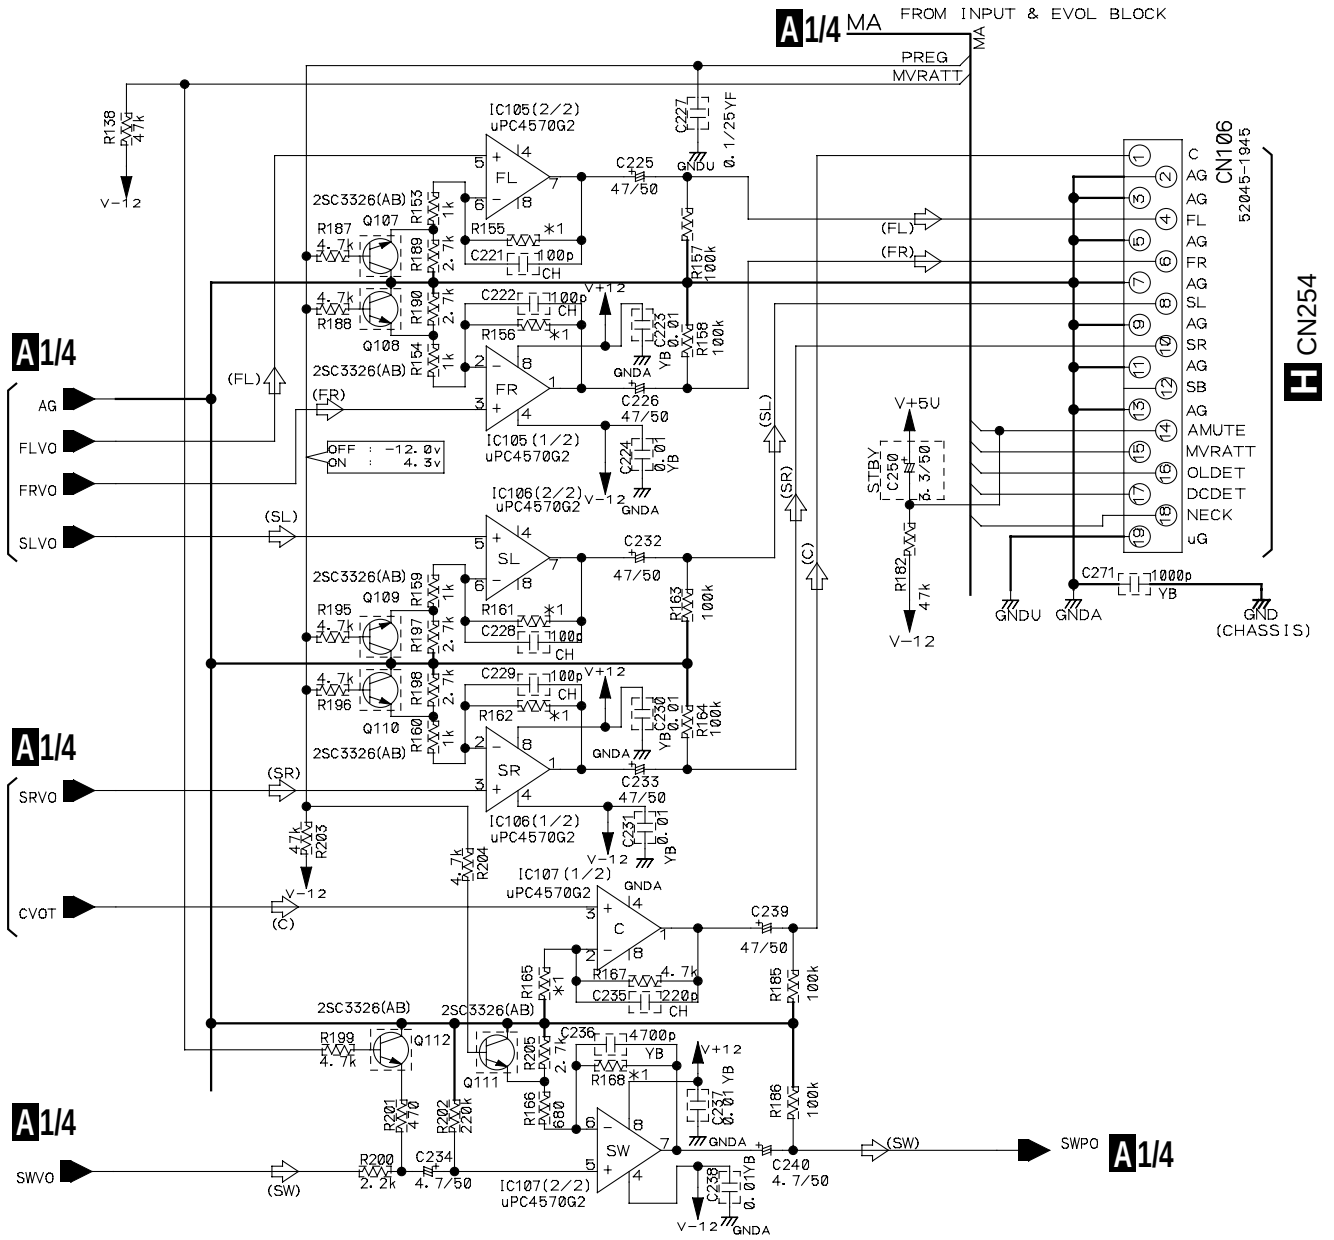

*1	FRONT, SURROUND		SW		CENTER, SB	
	R155 R156 R161 R162 (Ω)	GAIN (dB)	R168 (Ω)	GAIN (dB)	R165 (Ω)	GAIN (dB)
	15k	14.1/24.1	15k	14.7/27.3	1.2k	13.8

A2/4

3.5 D.D & INPUT(3/4) ASSY

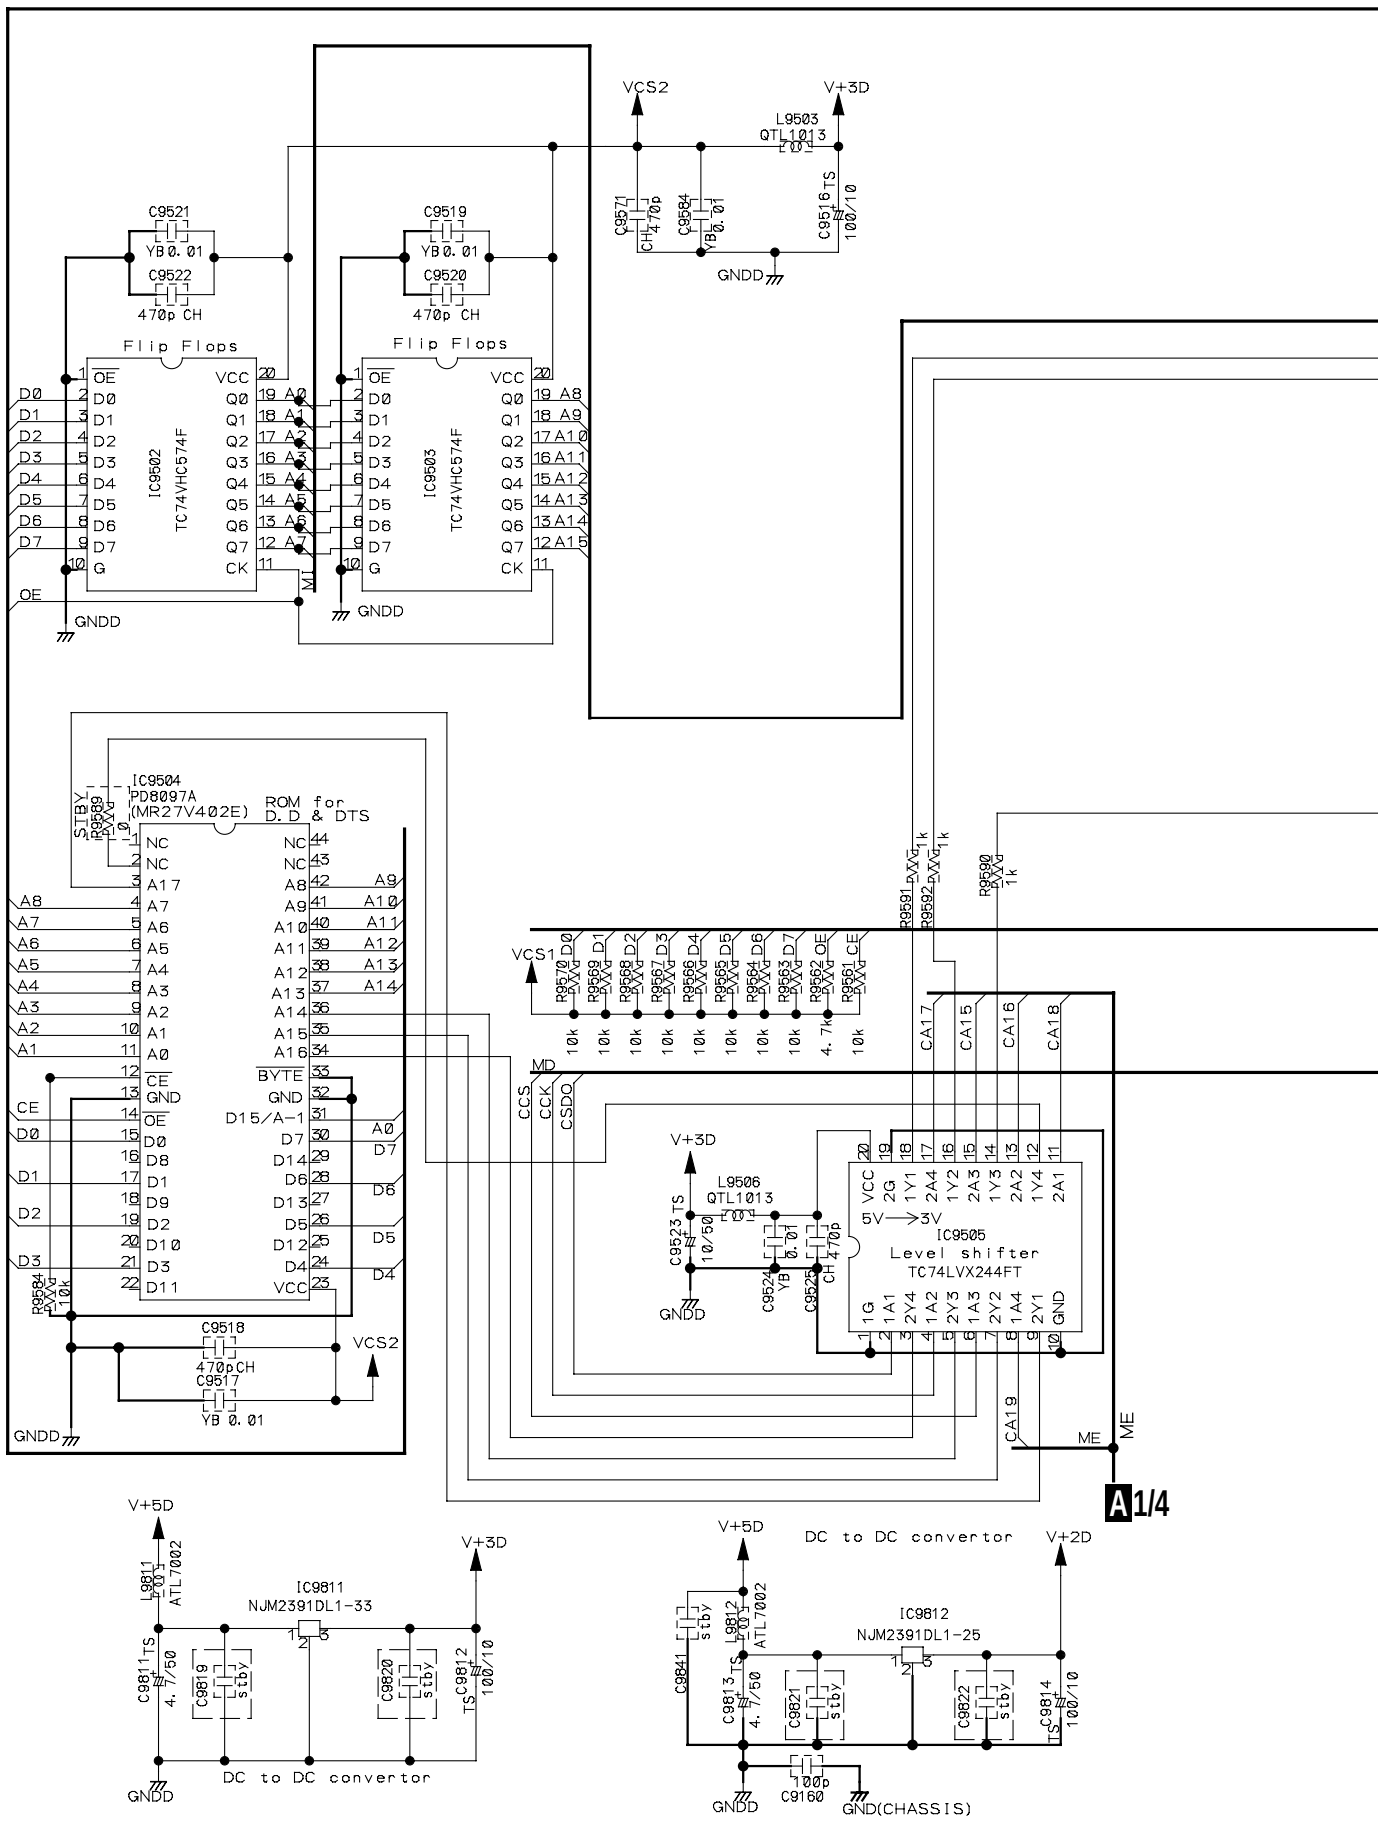

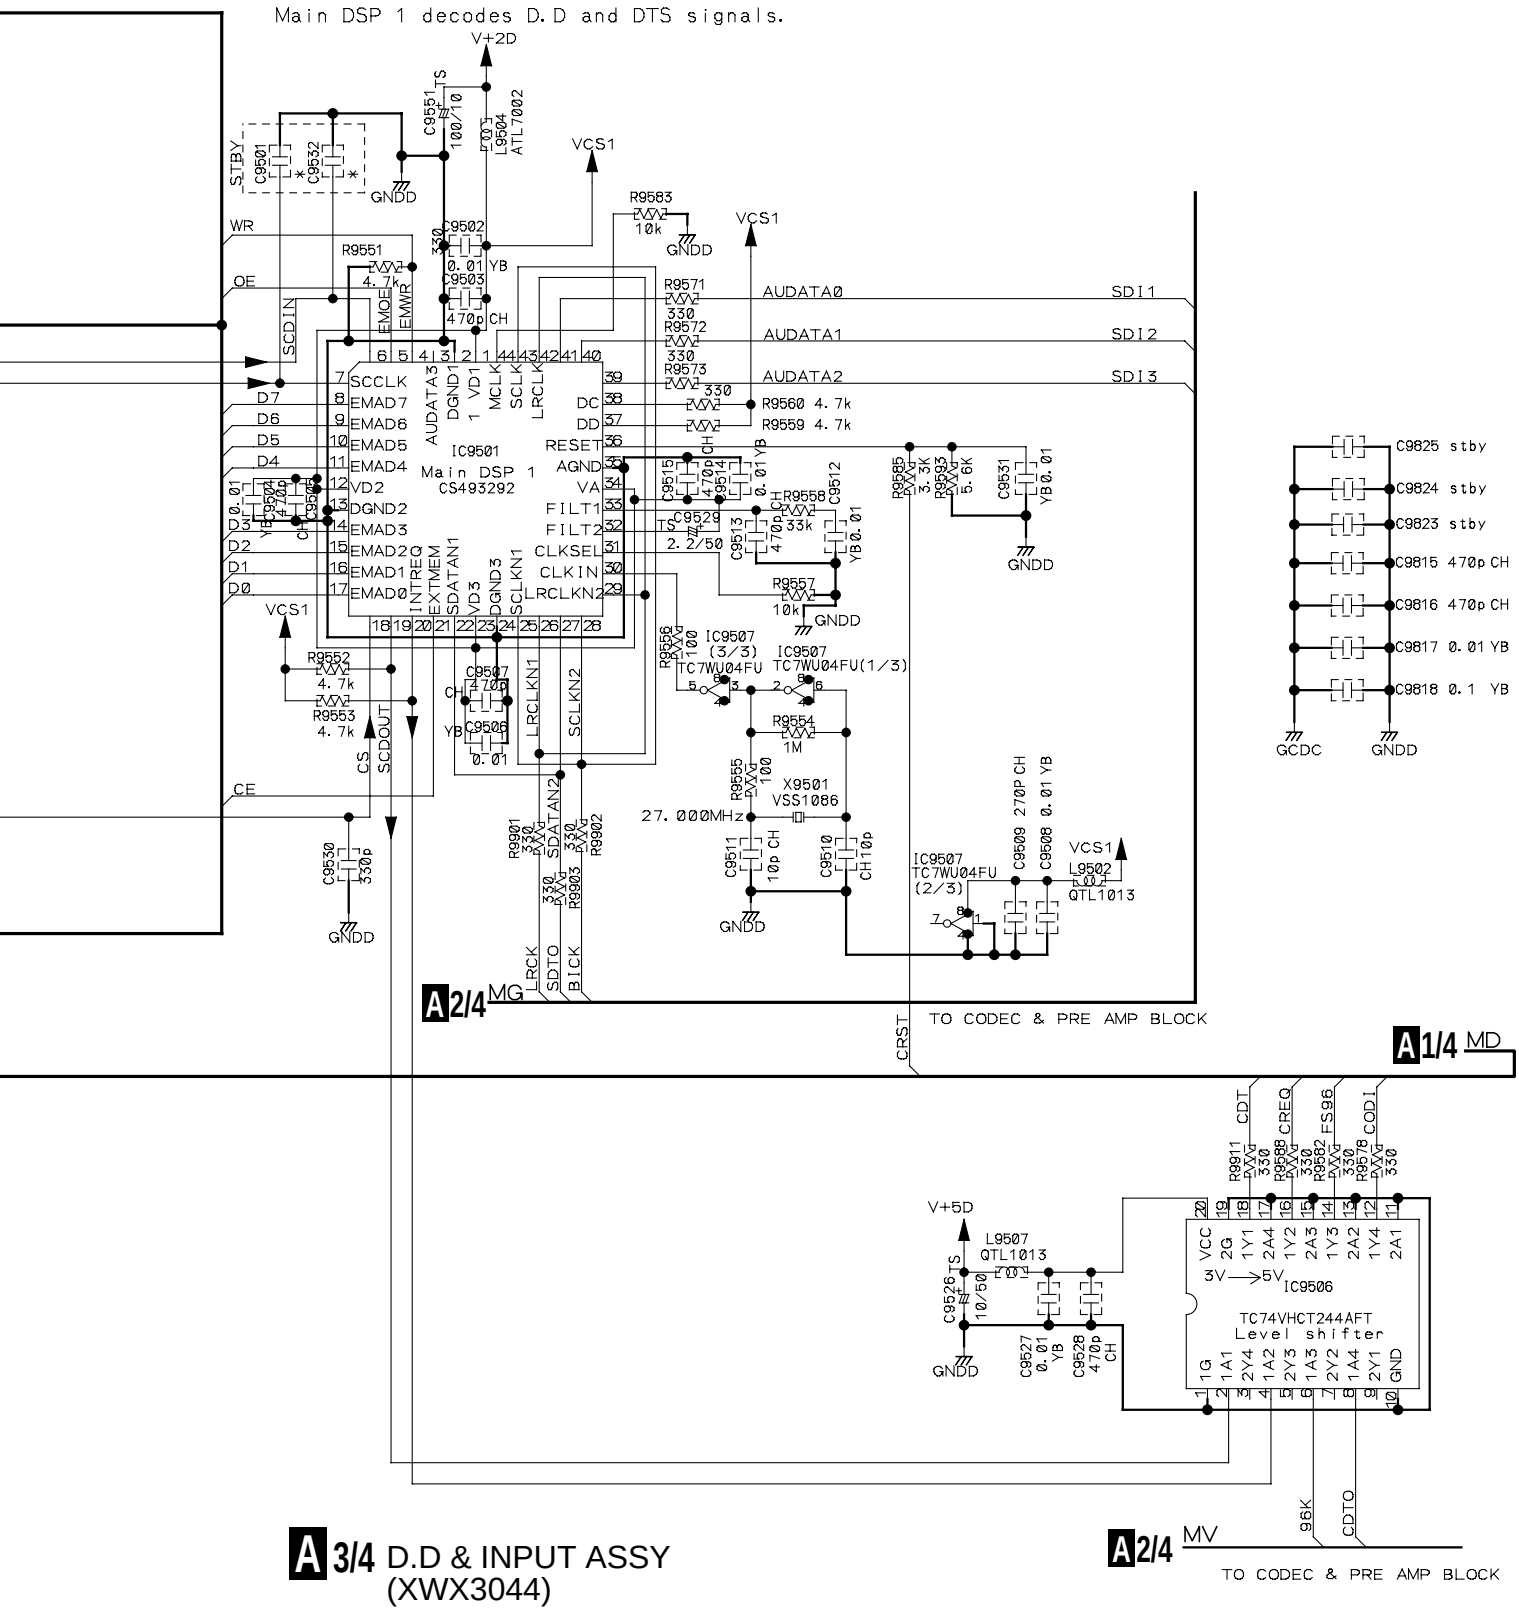

A 3/4 D.D & INPUT ASSY
(XWX3044)

3.6 D.D & INPUT(4/4) ASSY

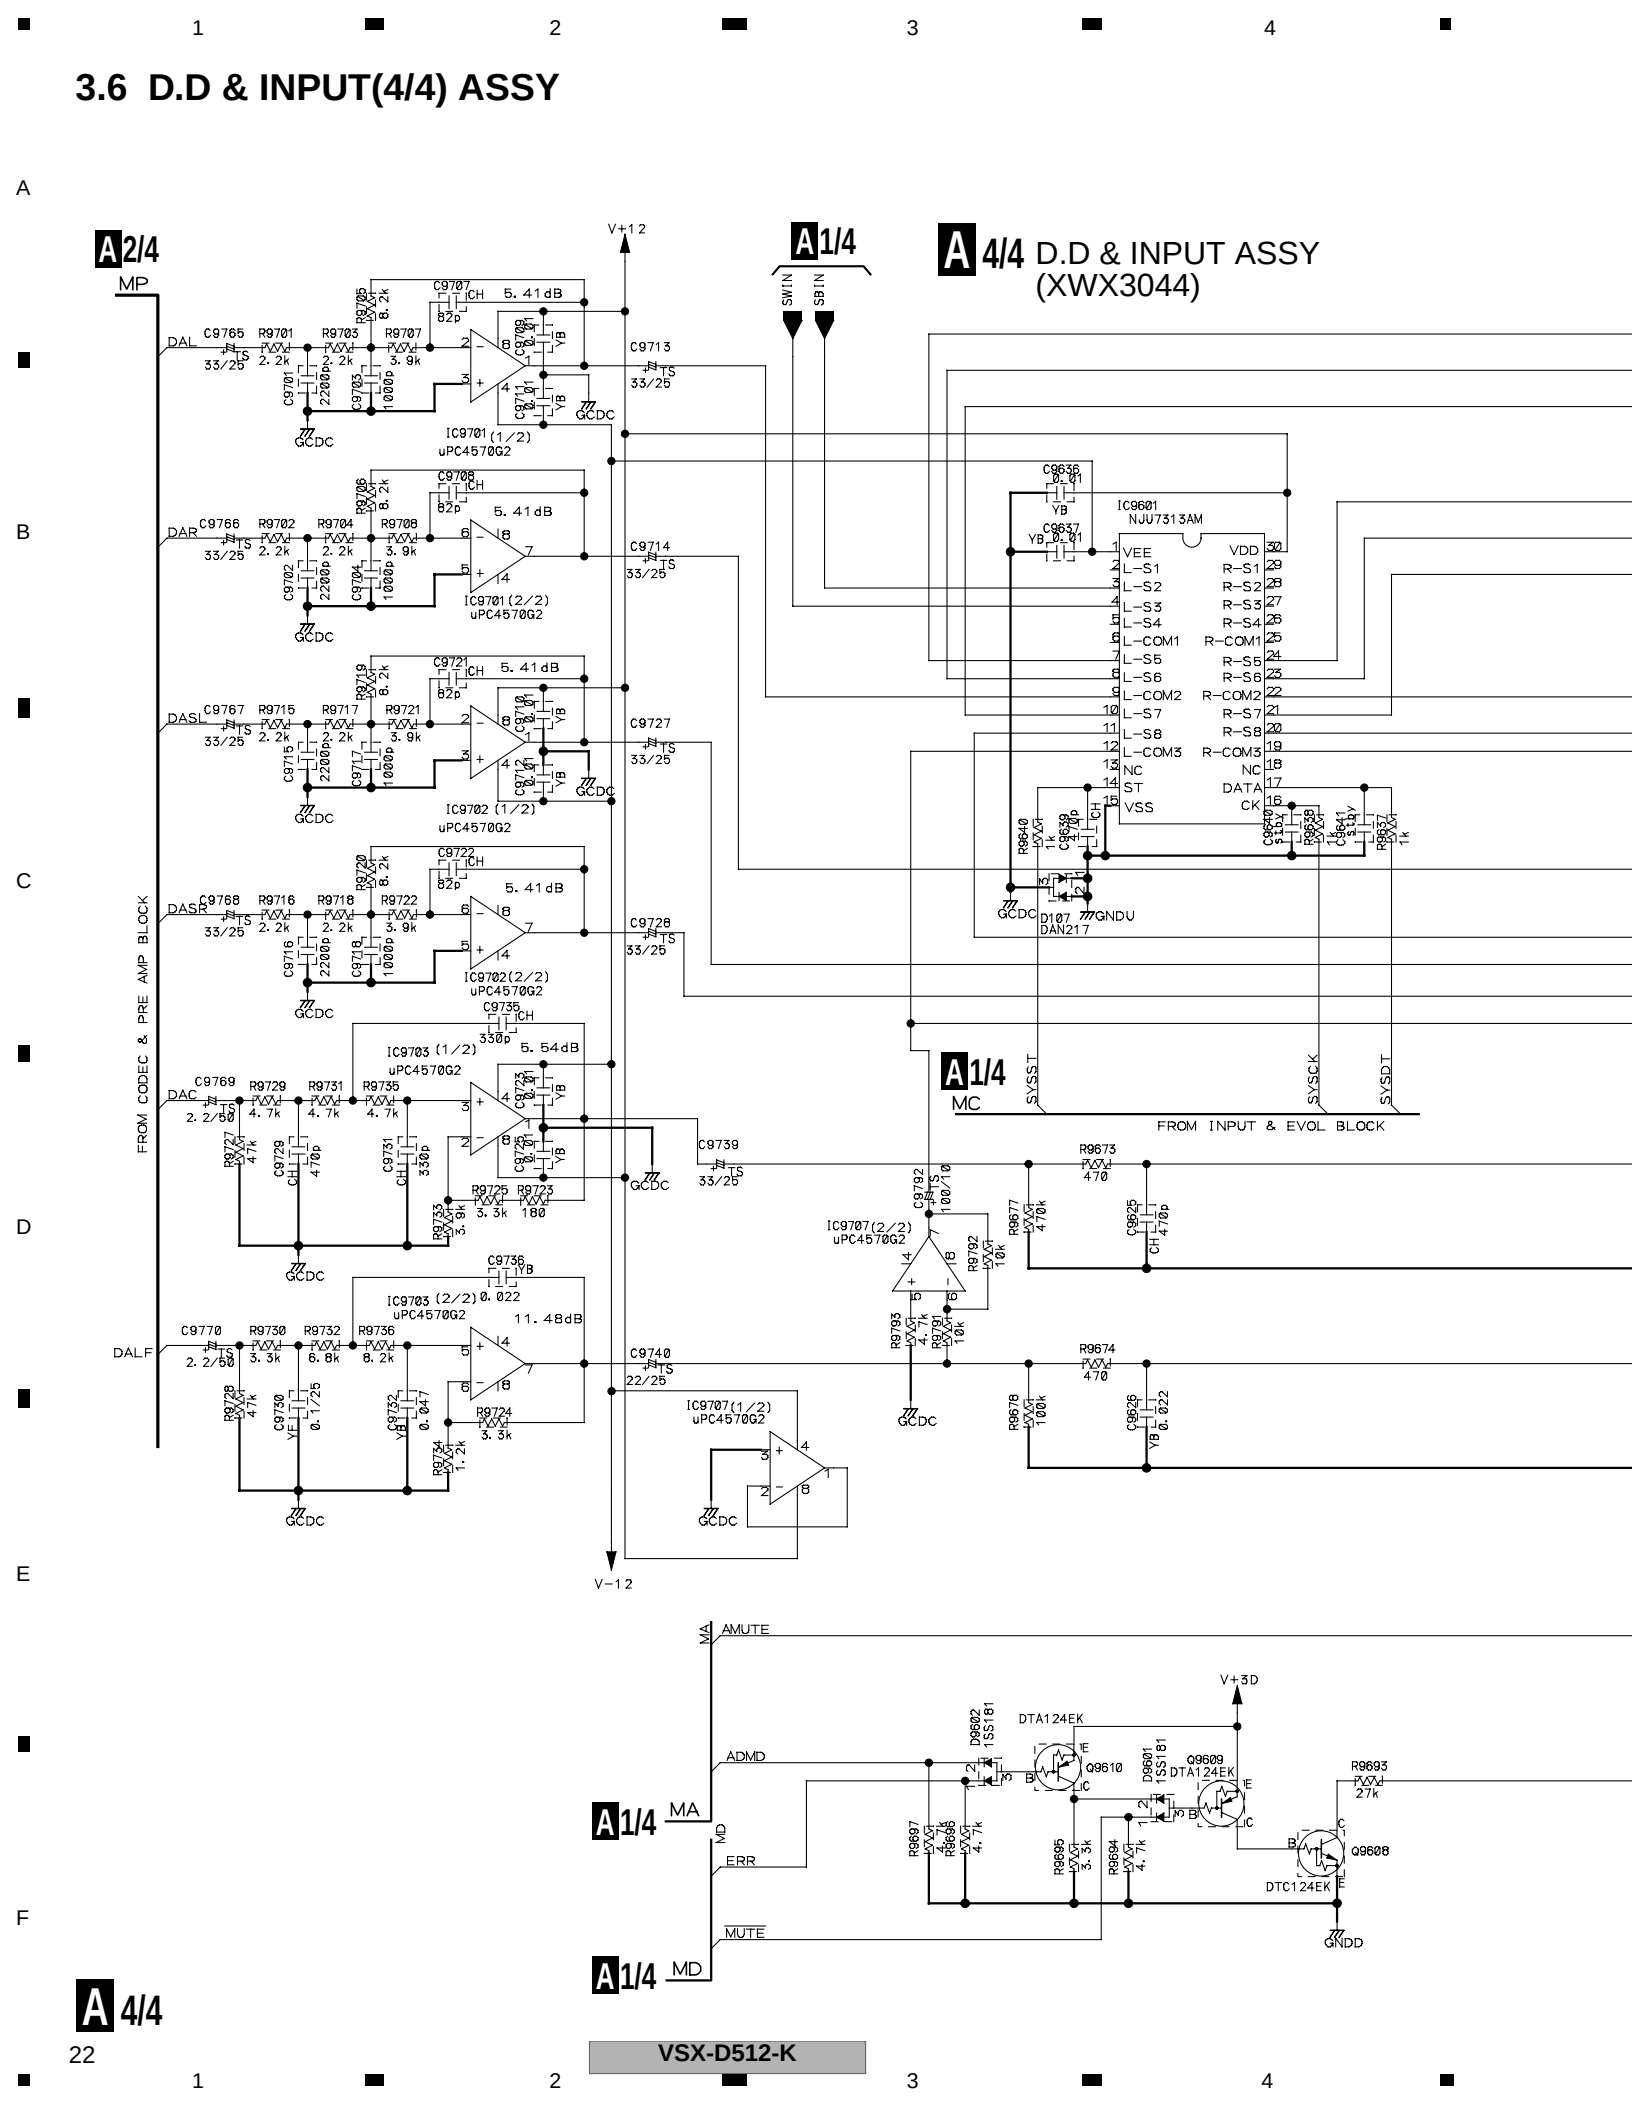

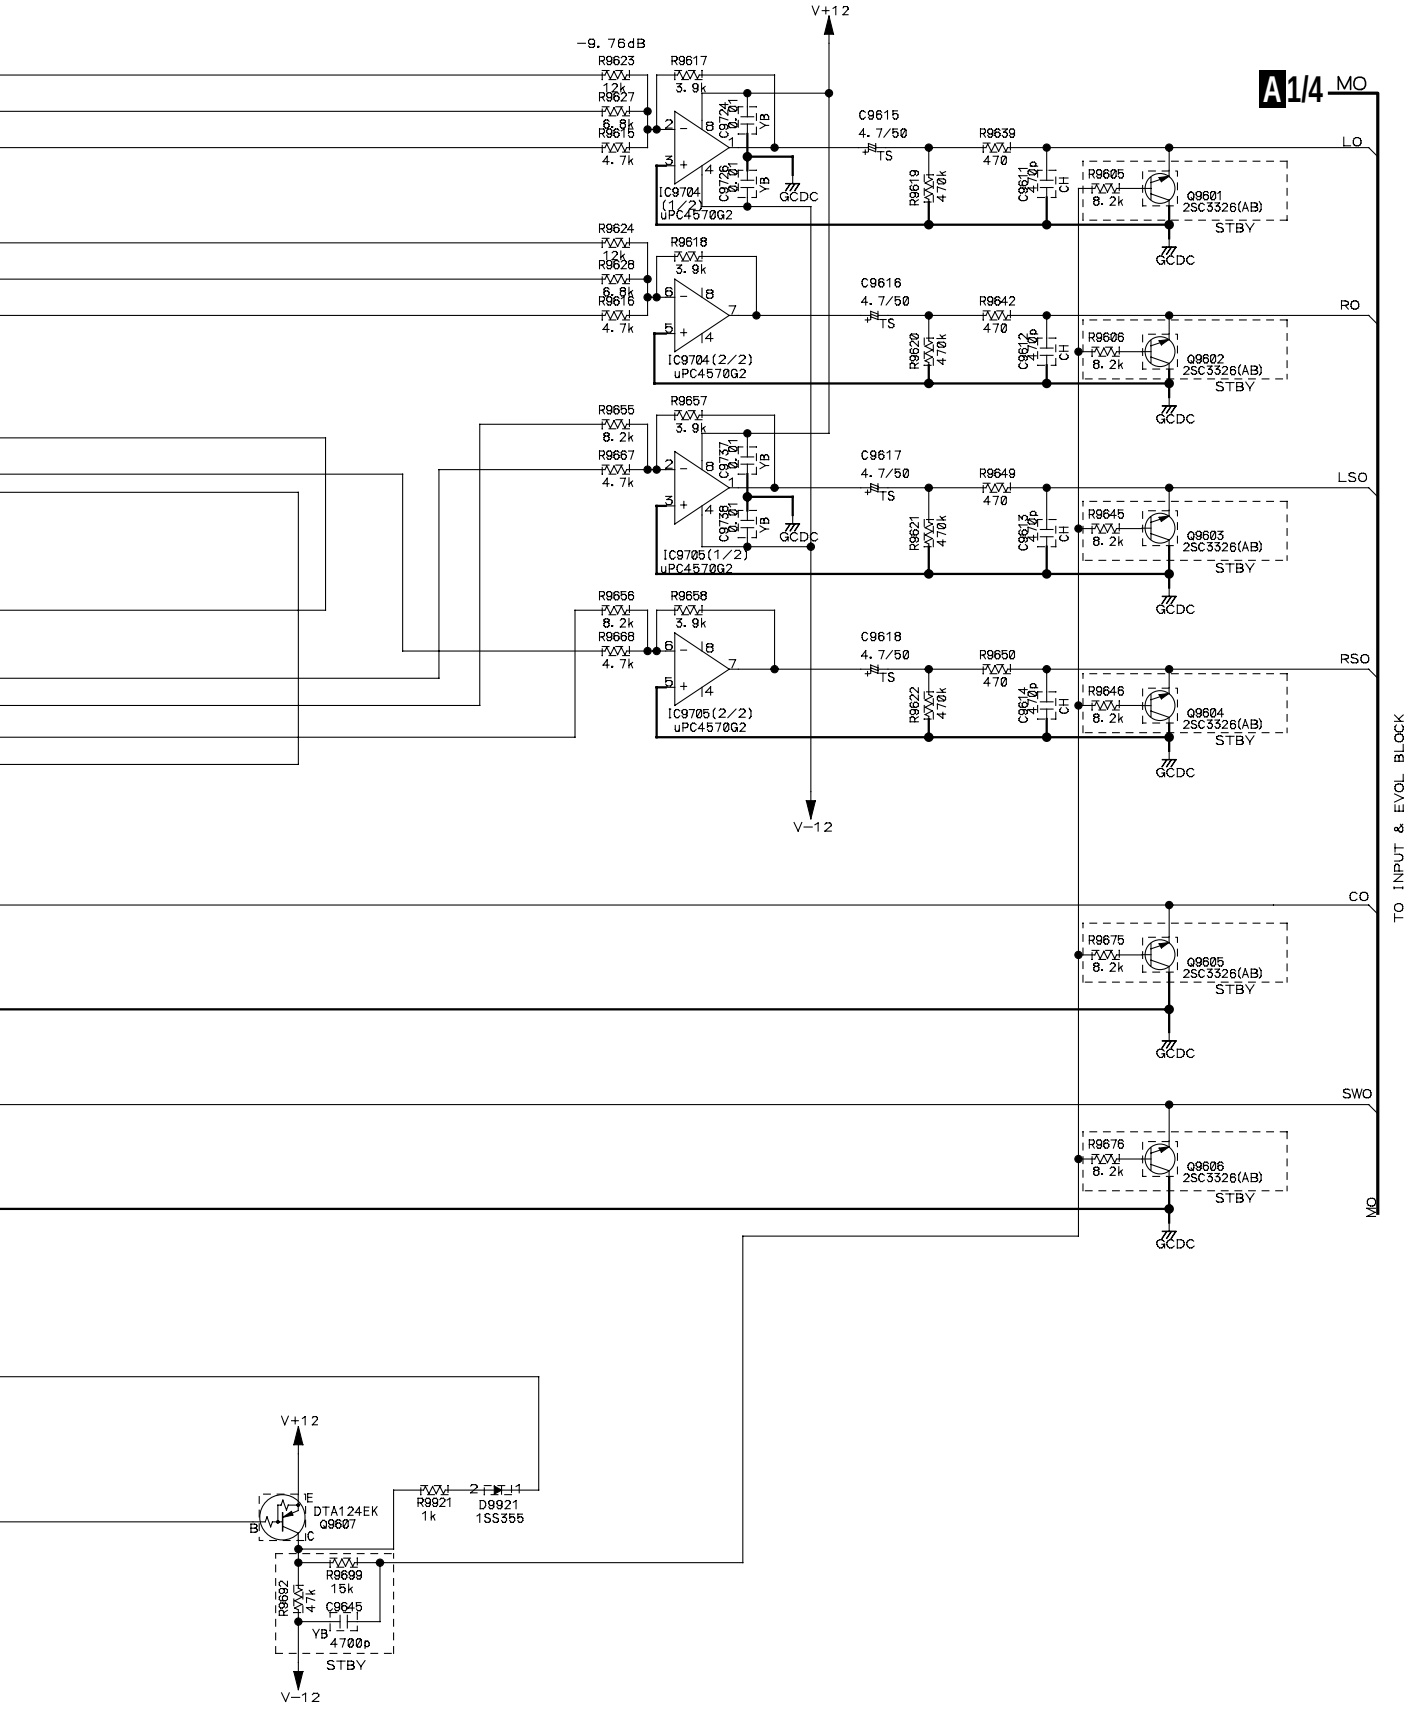
A1/4 MO
V+12
V-12
-9.76dB
R9623 12k
R9627 8.2k
R9615 4.7k
R9617 3.9k
C9724 2.2/1
C9726 2.2/1
IC9704 (1/2) uPC4570G2
GCDC
C9615 4.7/50
TS
R9619 470k
R9639 470
C9611 470p
CH
R9605 8.2k
Q9601 2SC3326(AB)
STBY
LO
R9624 12k
R9628 8.2k
R9616 4.7k
R9618 3.9k
IC9704(2/2) uPC4570G2
C9616 4.7/50
R9620 470k
R9642 470
C9612 470p
R9606 8.2k
Q9602 2SC3326(AB)
RO
R9655 8.2k
R9667 4.7k
R9657 3.9k
C9737 2.2/1
C9738 2.2/1
IC9705(1/2) uPC4570G2
C9617 4.7/50
R9621 470k
R9649 470
C9613 470p
R9645 8.2k
Q9603 2SC3326(AB)
LSO
R9656 8.2k
R9668 4.7k
R9658 3.9k
IC9705(2/2) uPC4570G2
C9618 4.7/50
R9622 470k
R9650 470
C9614 470p
R9646 8.2k
Q9604 2SC3326(AB)
RSO
TO INPUT & EVOL BLOCK
MO
CO
R9675 8.2k
Q9605 2SC3326(AB)
SWO
R9676 8.2k
Q9606 2SC3326(AB)
V+12
DTA124EK Q9607
R9921 1k
D9921 1SS355
R9699 15k
R9692 47k
C9645 4700p
YB
STBY
V-12

3.7 AMP & PRIMARY(1/2), TRANS2 and TRANS3 ASSYS

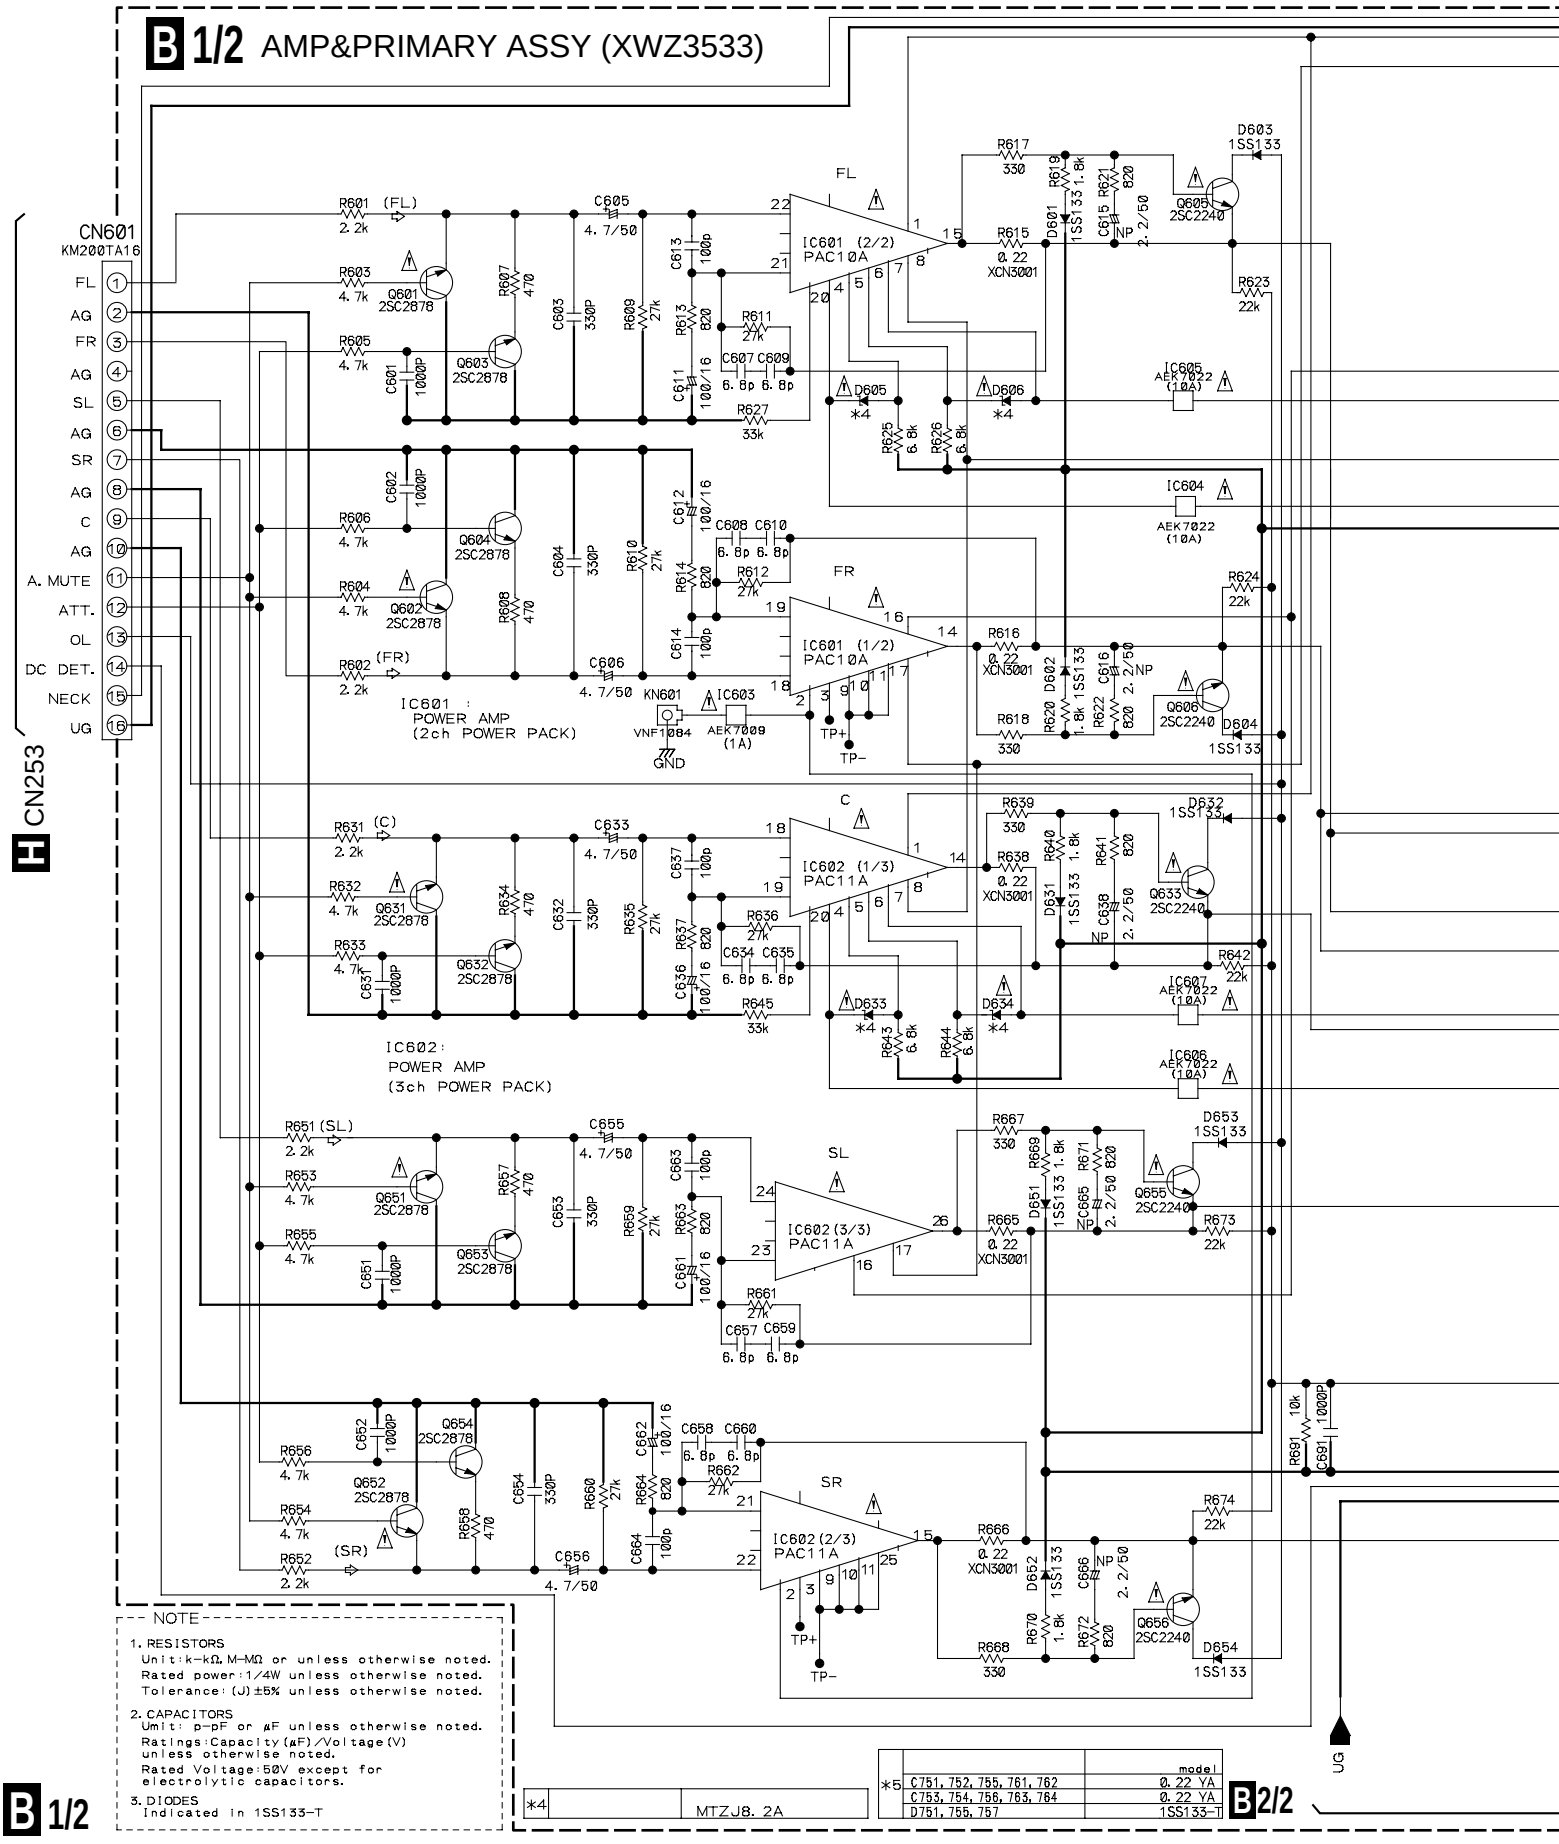

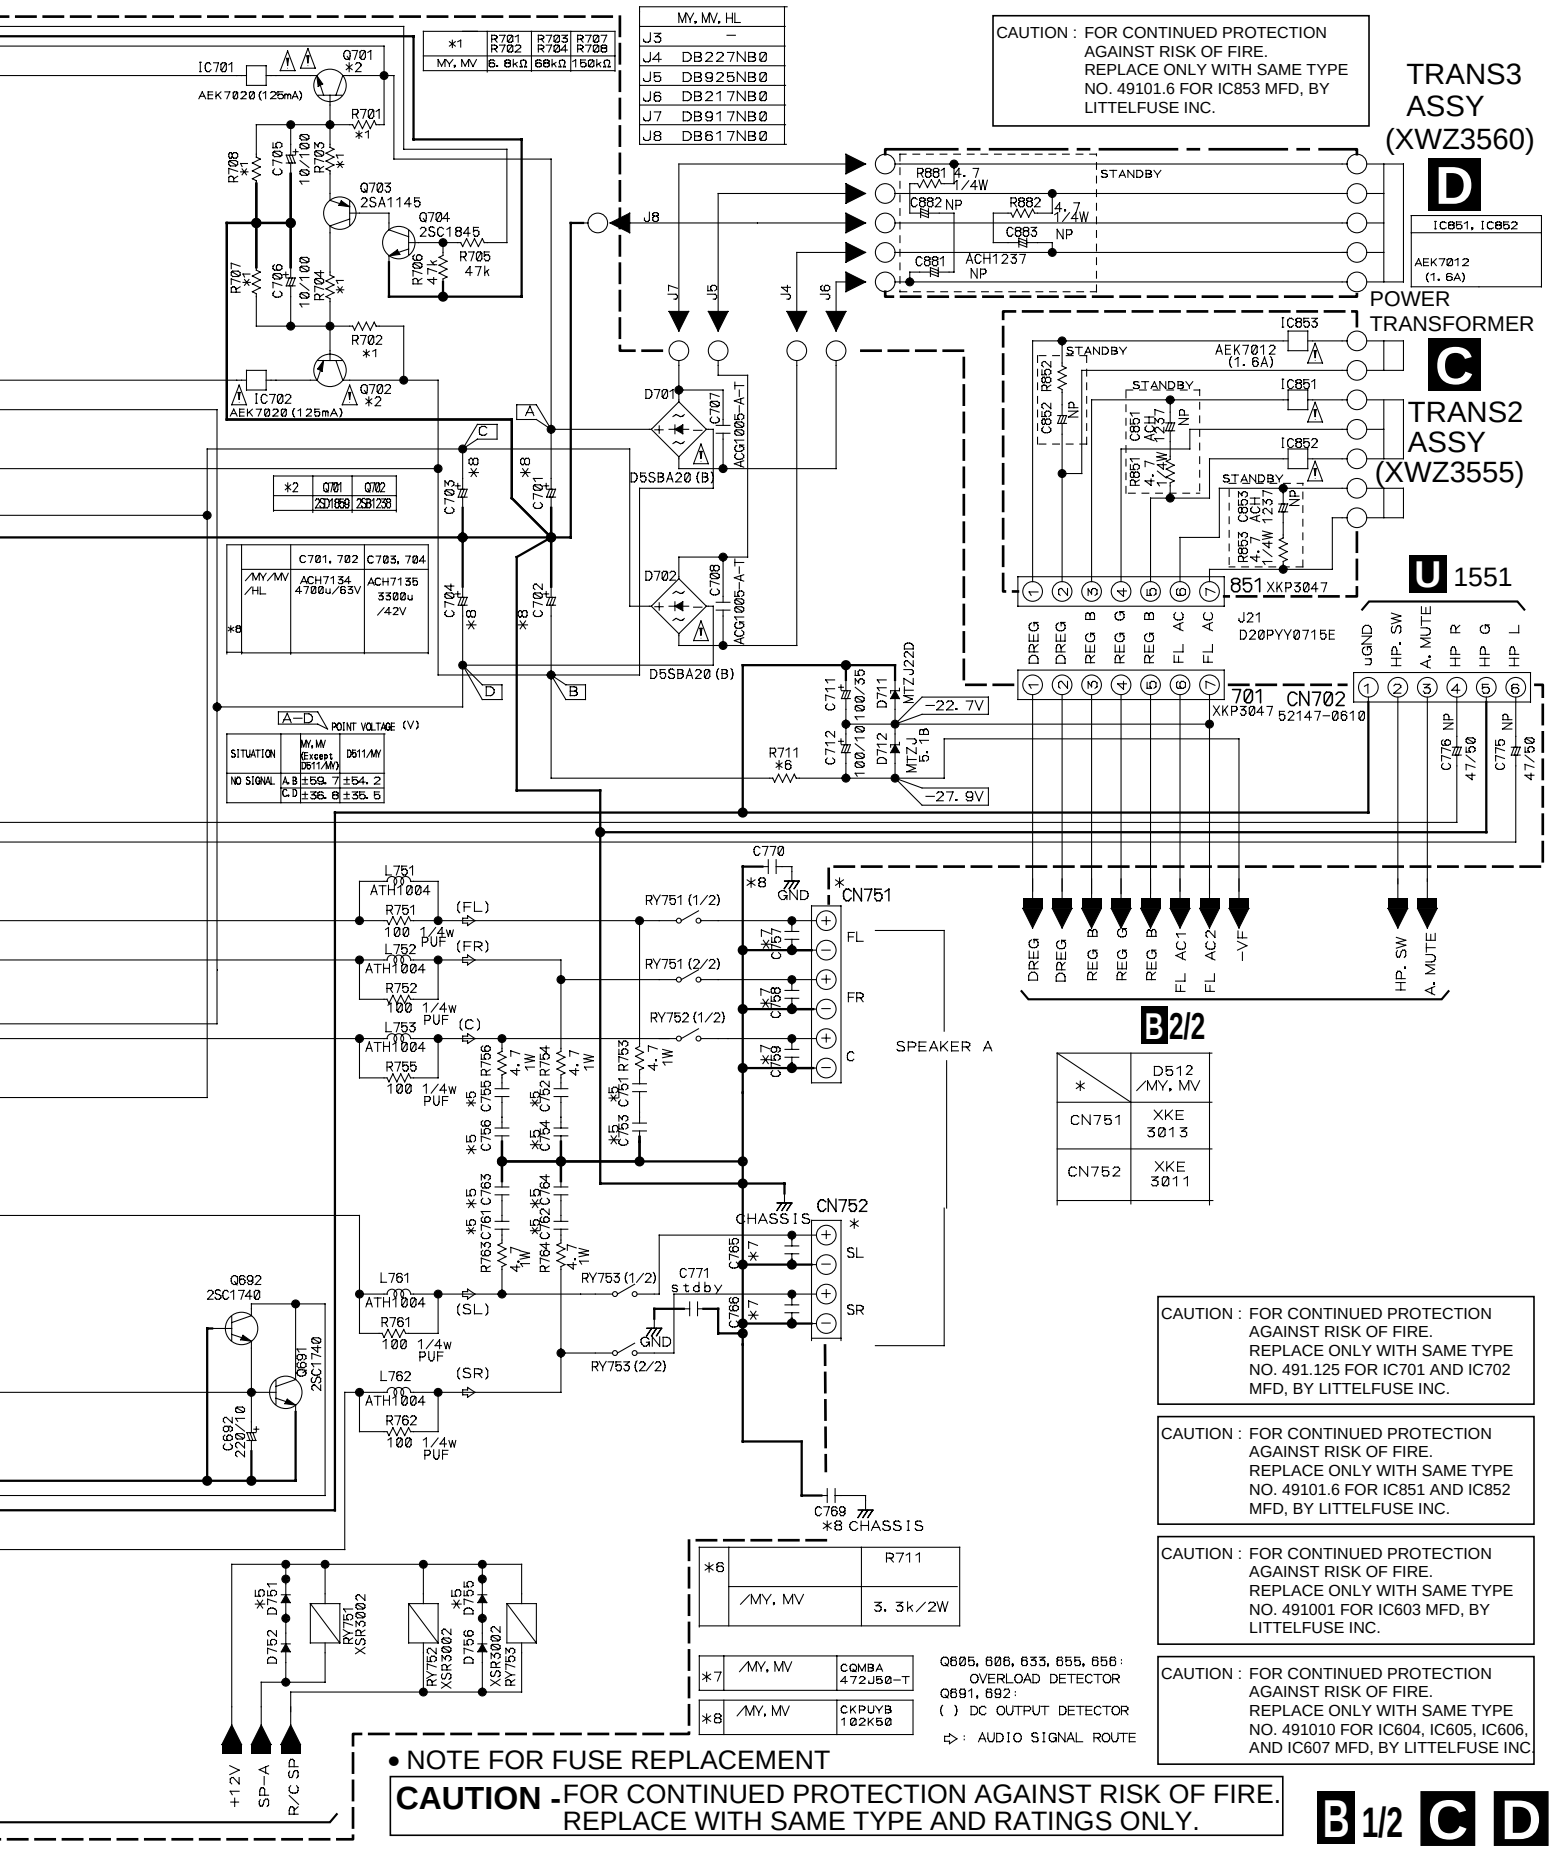
CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 49101.6 FOR IC853 MFD, BY LITTELFUSE INC.
TRANS3 ASSY (XWZ3560)
POWER TRANSFORMER
TRANS2 ASSY (XWZ3555)
IC701 AEK7020(125mA)
IC702 AEK7020(125mA)
IC851, IC852 AEK7012 (1.6A)
IC853 AEK7012 (1.6A)
J8
J7 J5 J4 J6
D701 D5SBA20(B)
D702 D5SBA20(B)
ACG1005-A-T
851 XKP3047
J21 D20PYY0715E
701 XKP3047
CN702 52147-0610
DREG DREG REG B REG G REG B FL AC FL AC
uGND HP. SW A. MUTE HP R HP G HP L
-22. 7V
-27. 9V
POINT VOLTAGE (V)
SPEAKER A
CN751
CN752
CHASSIS
RY751 (1/2)
RY751 (2/2)
RY752 (1/2)
RY753 (1/2)
RY753 (2/2)
Q692 2SC1740
Q691 2SC1740
+12V SP-A R/C SP
CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 491.125 FOR IC701 AND IC702 MFD, BY LITTELFUSE INC.
CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 49101.6 FOR IC851 AND IC852 MFD, BY LITTELFUSE INC.
CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 491001 FOR IC603 MFD, BY LITTELFUSE INC.
CAUTION : FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE ONLY WITH SAME TYPE NO. 491010 FOR IC604, IC605, IC606, AND IC607 MFD, BY LITTELFUSE INC.
• NOTE FOR FUSE REPLACEMENT
CAUTION - FOR CONTINUED PROTECTION AGAINST RISK OF FIRE. REPLACE WITH SAME TYPE AND RATINGS ONLY.
Q605, 606, 633, 655, 656: OVERLOAD DETECTOR
Q691, 692: ( ) DC OUTPUT DETECTOR
⇨ : AUDIO SIGNAL ROUTE
U 1551
B 2/2
B 1/2 C D

3.8 AMP & PRIM.(2/2), REG., HASHIGETA and MECH SW ASSYS

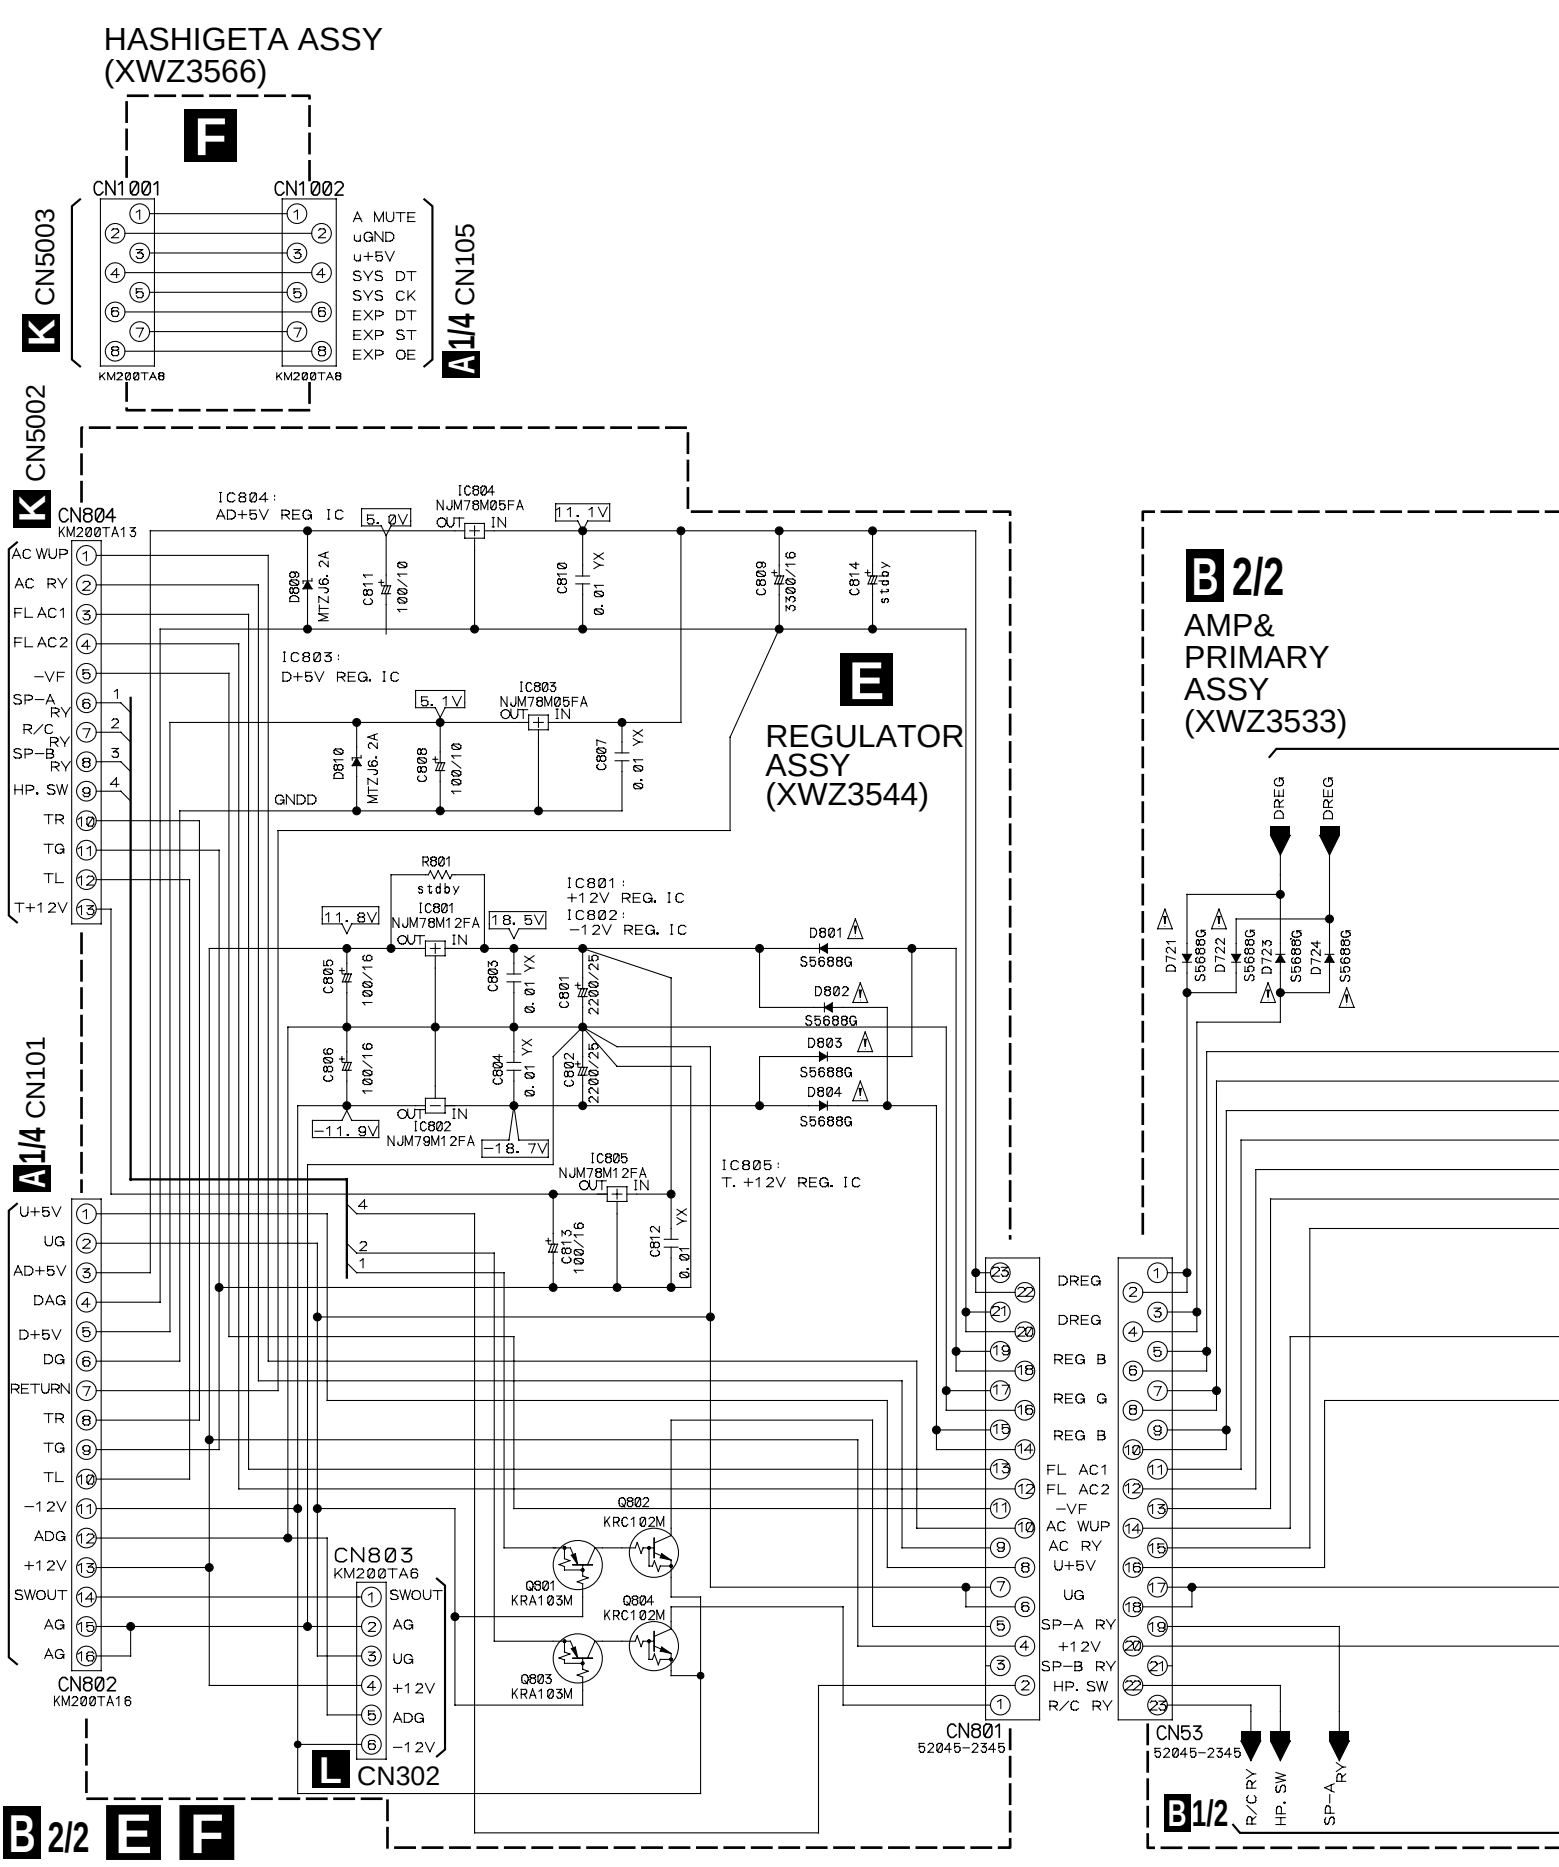

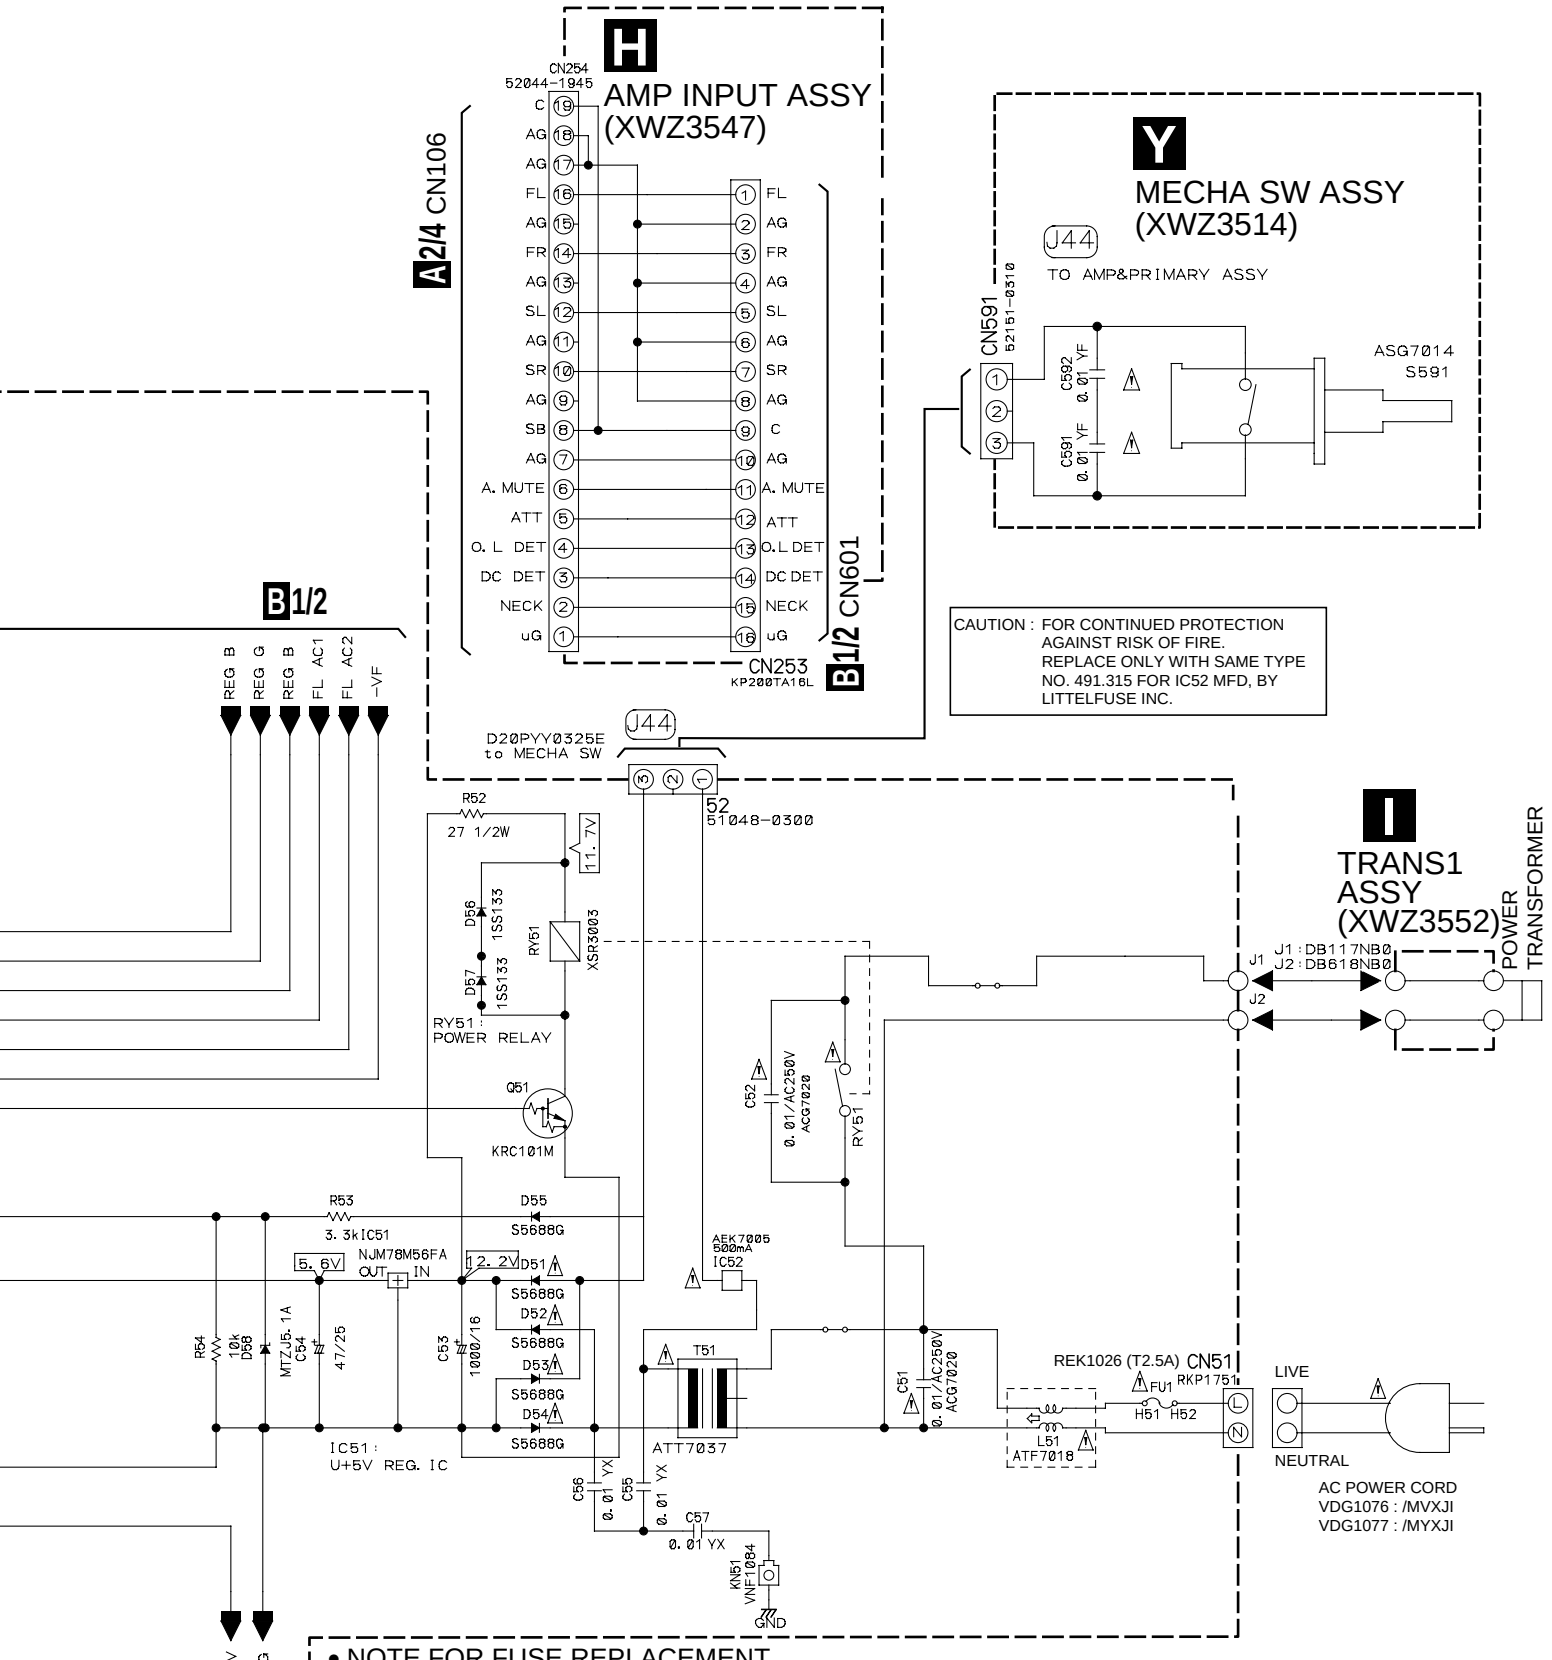
H
AMP INPUT ASSY
(XWZ3547)
CN254
52044-1945
A2/4 CN106
B1/2 CN601
CN253
KP200TA16L
Y
MECHA SW ASSY
(XWZ3514)
J44
TO AMP&PRIMARY ASSY
CN591
52151-0310
ASG7014
S591
C592
0.01 YF
C591
0.01 YF
CAUTION : FOR CONTINUED PROTECTION
AGAINST RISK OF FIRE.
REPLACE ONLY WITH SAME TYPE
NO. 491.315 FOR IC52 MFD, BY
LITTELFUSE INC.
B1/2
REG B
REG G
REG B
FL AC1
FL AC2
-VF
D20PYY0325E
to MECHA SW
J44
52
51048-0300
R52
27 1/2W
11.7V
D56
1SS133
D57
1SS133
RY51
XSR3003
RY51 :
POWER RELAY
Q51
KRC101M
I
TRANS1
ASSY
(XWZ3552)
POWER TRANSFORMER
J1 : DB117NB0
J2 : DB618NB0
J1
J2
C52
0.01/AC250V
ACG7020
RY51
R53
3.3kIC51
D55
S5688G
5.6V
NJM78M56FA
OUT
IN
12.2V
D51
S5688G
D52
S5688G
D53
S5688G
D54
S5688G
IC51 :
U+5V REG. IC
AEK7005
500mA
IC52
T51
ATT7037
C51
0.01/AC250V
ACG7020
L51
ATF7018
REK1026 (T2.5A)
CN51
FU1
RKP1751
H51 H52
LIVE
NEUTRAL
AC POWER CORD
VDG1076 : /MVXJI
VDG1077 : /MYXJI
R54
10k
D58
MTZJ5.1A
C54
47/25
C53
1000/16
C56
0.01 YX
C55
0.01 YX
C57
0.01 YX
KN51
VNF1084
GND
+12V
UG
• NOTE FOR FUSE REPLACEMENT
CAUTION - FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.
REPLACE WITH SAME TYPE AND RATINGS ONLY.
B 2/2 H I Y

3.9 VIDEO and 6CH IN ASSYS

VIDEO ASSY
(XWZ3490)

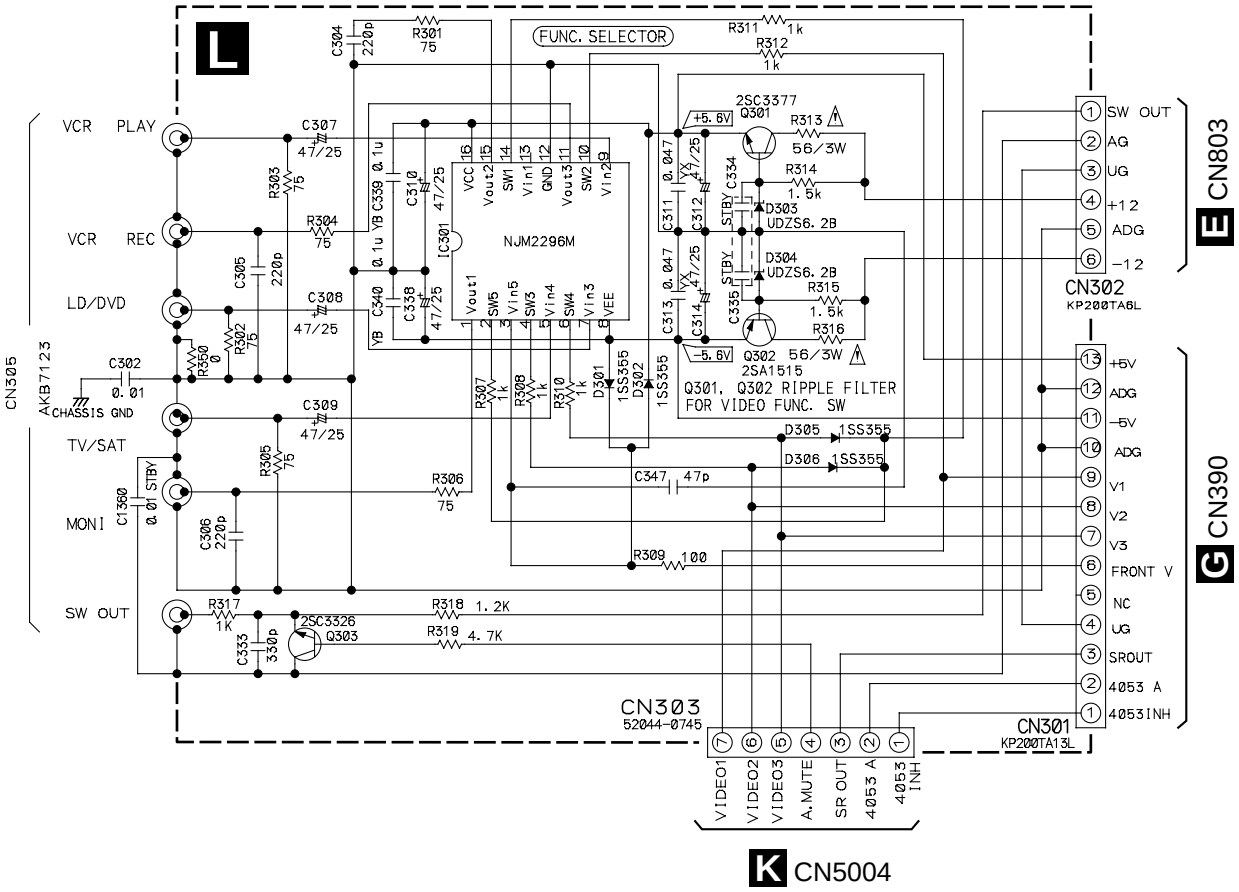

NJM2296D control port status

SW1	SW2	SW3	SW4	SW5	Vout1	Vout2	Vout3
1	0	(1)	0	1	Vin2	Vin2	mute
1	1	(1)	0	1	Vin3	Vin3	Vin3
1	1	0	1	1	Vin4	Vin4	Vin4
1	1	1	1	1	Vin5	Vin5	Vin5
0	0	(0)	(0)	0	mute	mute	mute

VIN 2. VCR
VIN 3. DVD/LD
VIN 4. TV/SAT
VIN 5. FRONT
Vout1. MON out
Vout2.
Vout3. VCR out

NOTE

1. RESISTORS
   Unit: k-kΩ, M-MΩ or Ω unless otherwise noted.
   Rated power: 1/10W unless otherwise noted.
   Tolerance: (J)±5% unless otherwise noted.
2. CAPACITORS
   Unit: p-pF or μF unless otherwise noted.
   Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.
   Rated Voltage: 50V expect for electrolytic capacitors.
3. DIODES
   Indicated in 1SS355-TRB

⇨ : AUDIO SIGNAL ROUTE
(FL) ⇨ : AUDIO SIGNAL ROUTE (Front L ch)
(SL) ⇨ : AUDIO SIGNAL ROUTE (Rear L ch)
(SW) ⇨ : AUDIO SIGNAL ROUTE (Sub Woofer)
(C) ⇨ : AUDIO SIGNAL ROUTE (Center)

6CH IN ASSY (XWZ3507)

A 1/4

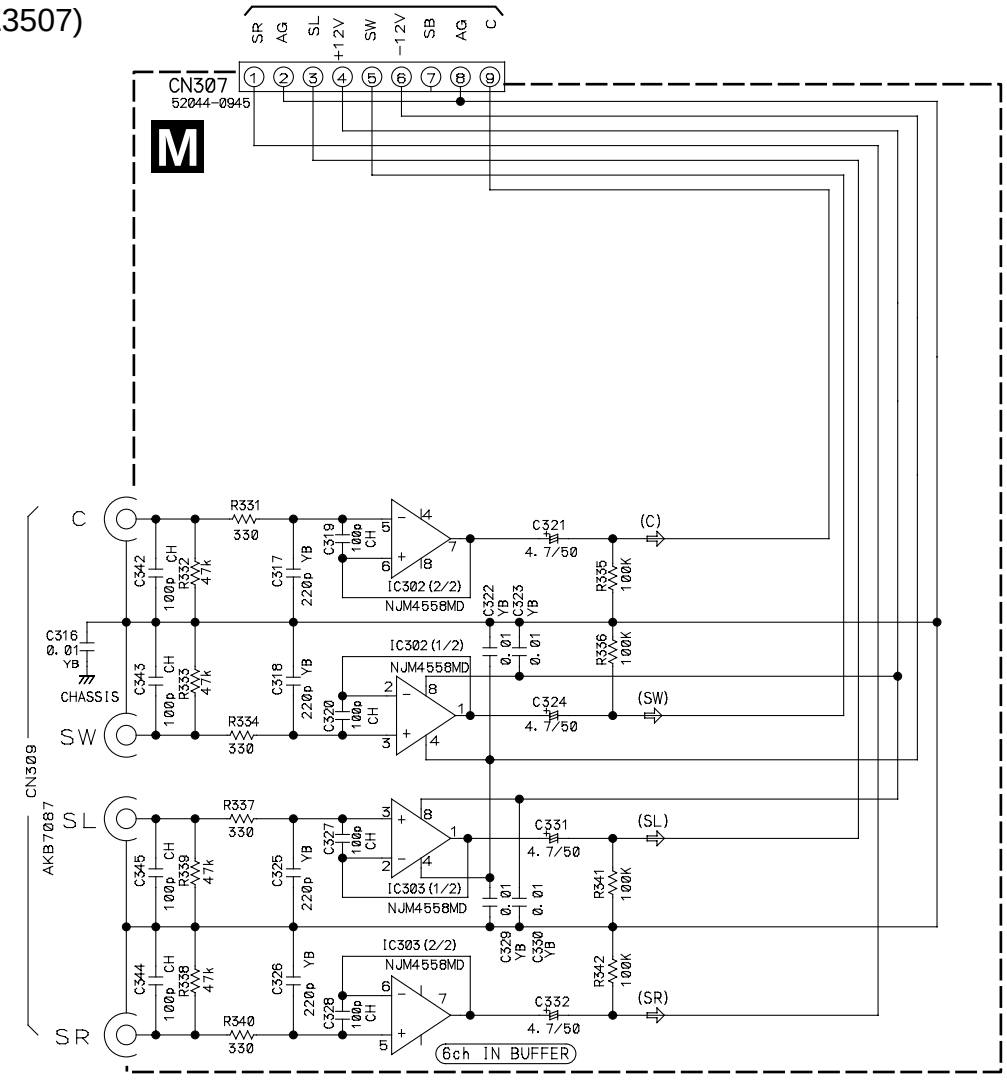

3.10 FRONT, R.ENCODER and POWER SW ASSYS

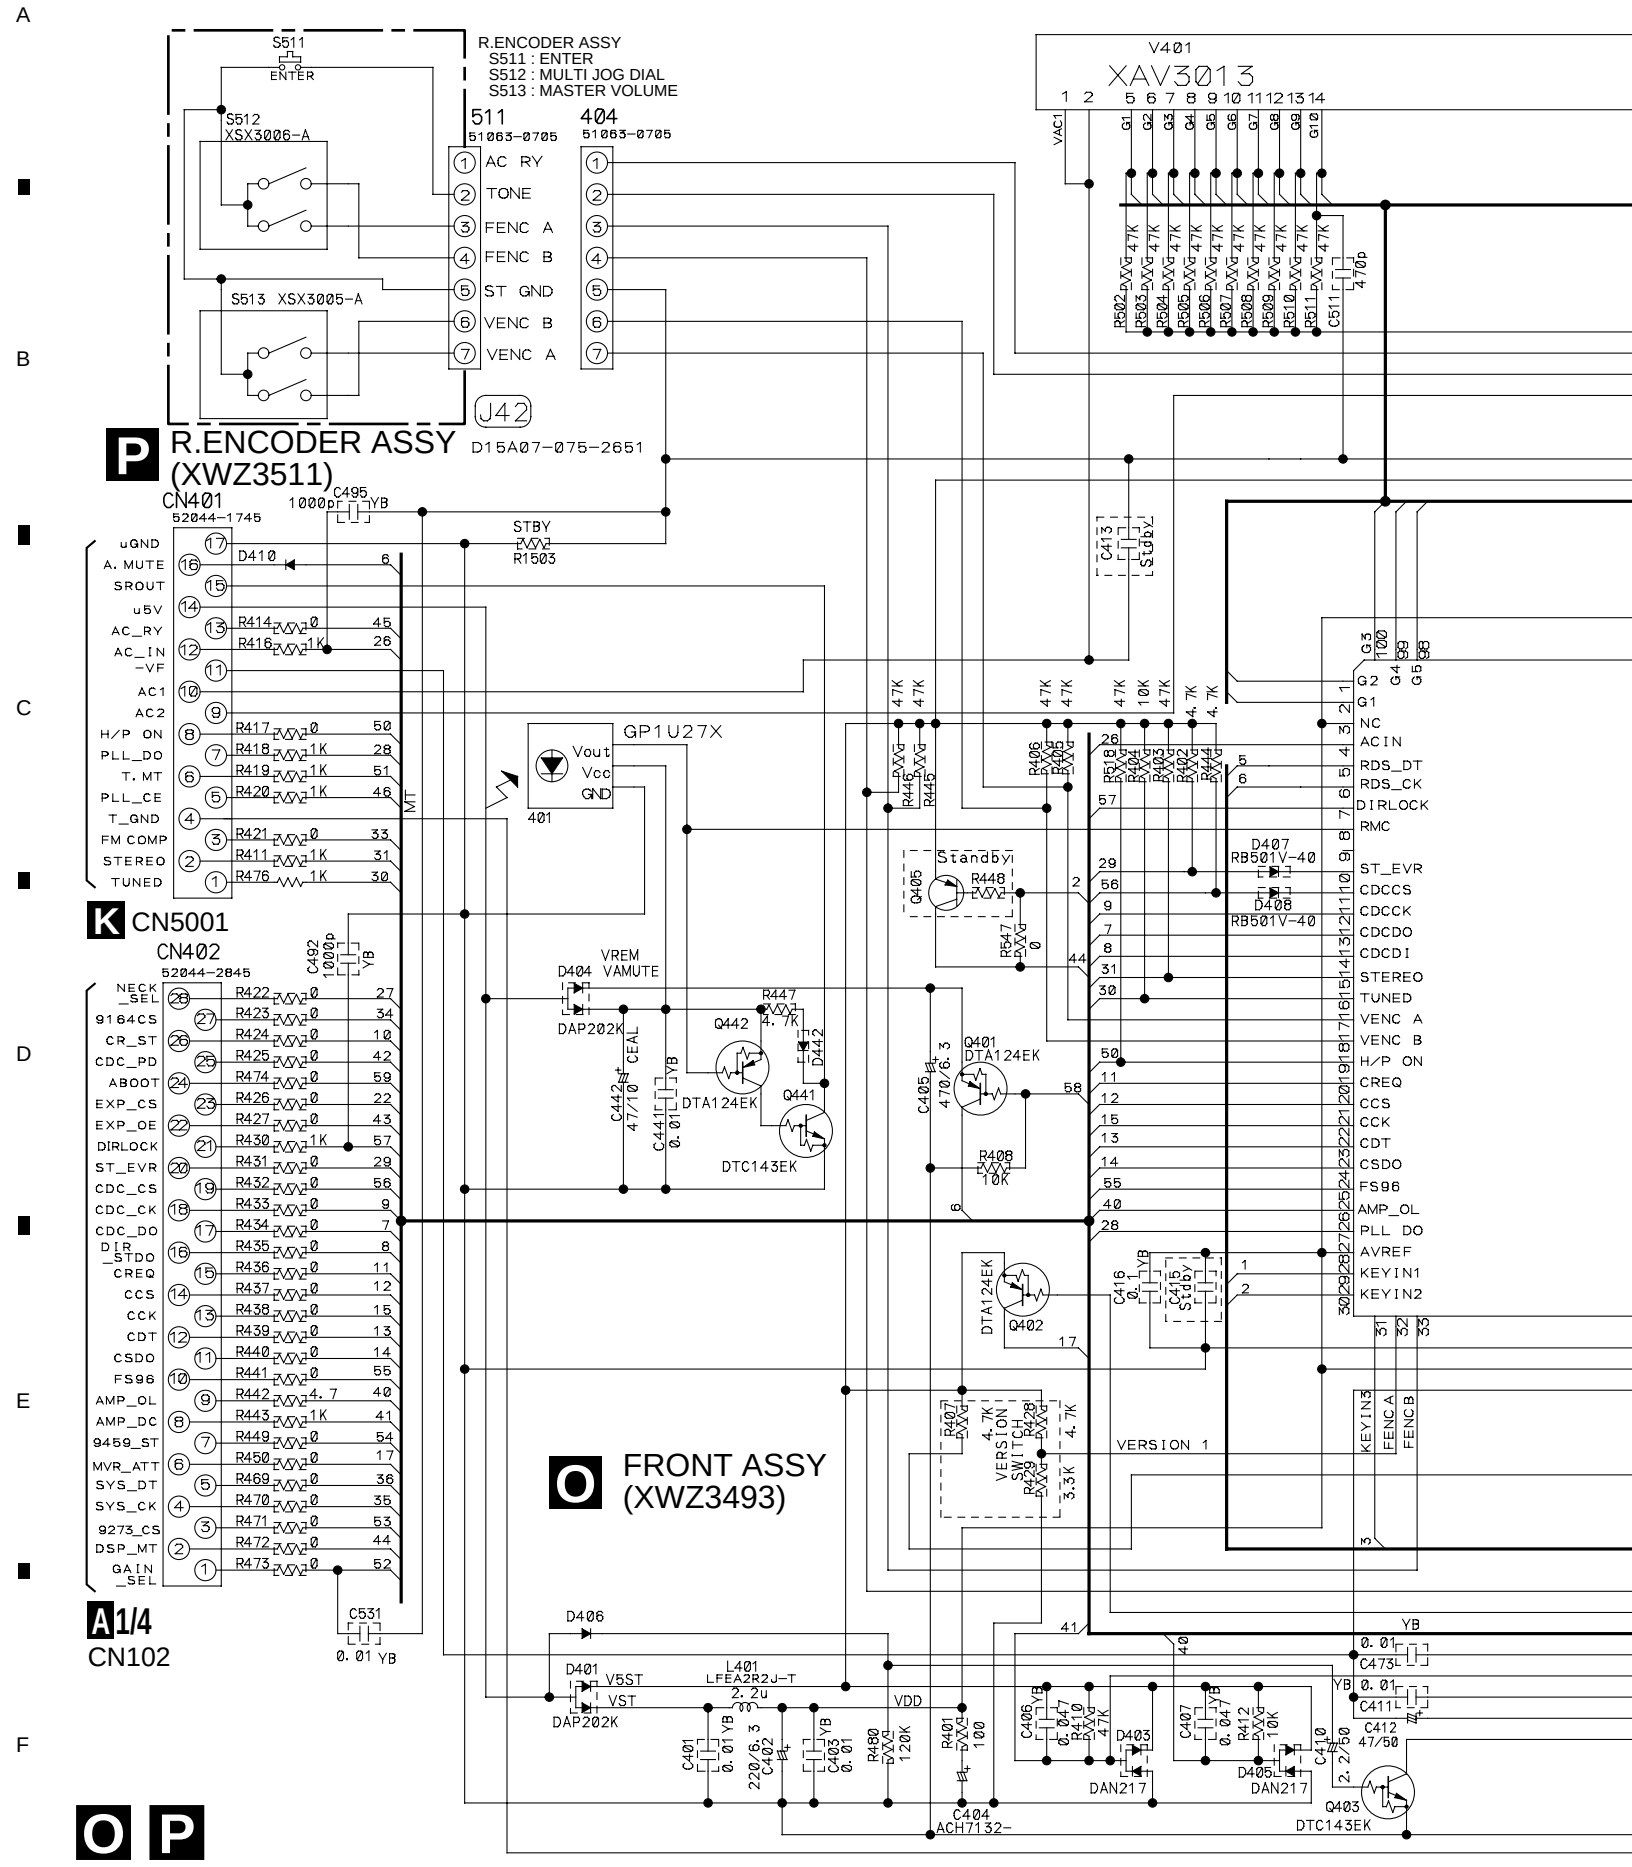

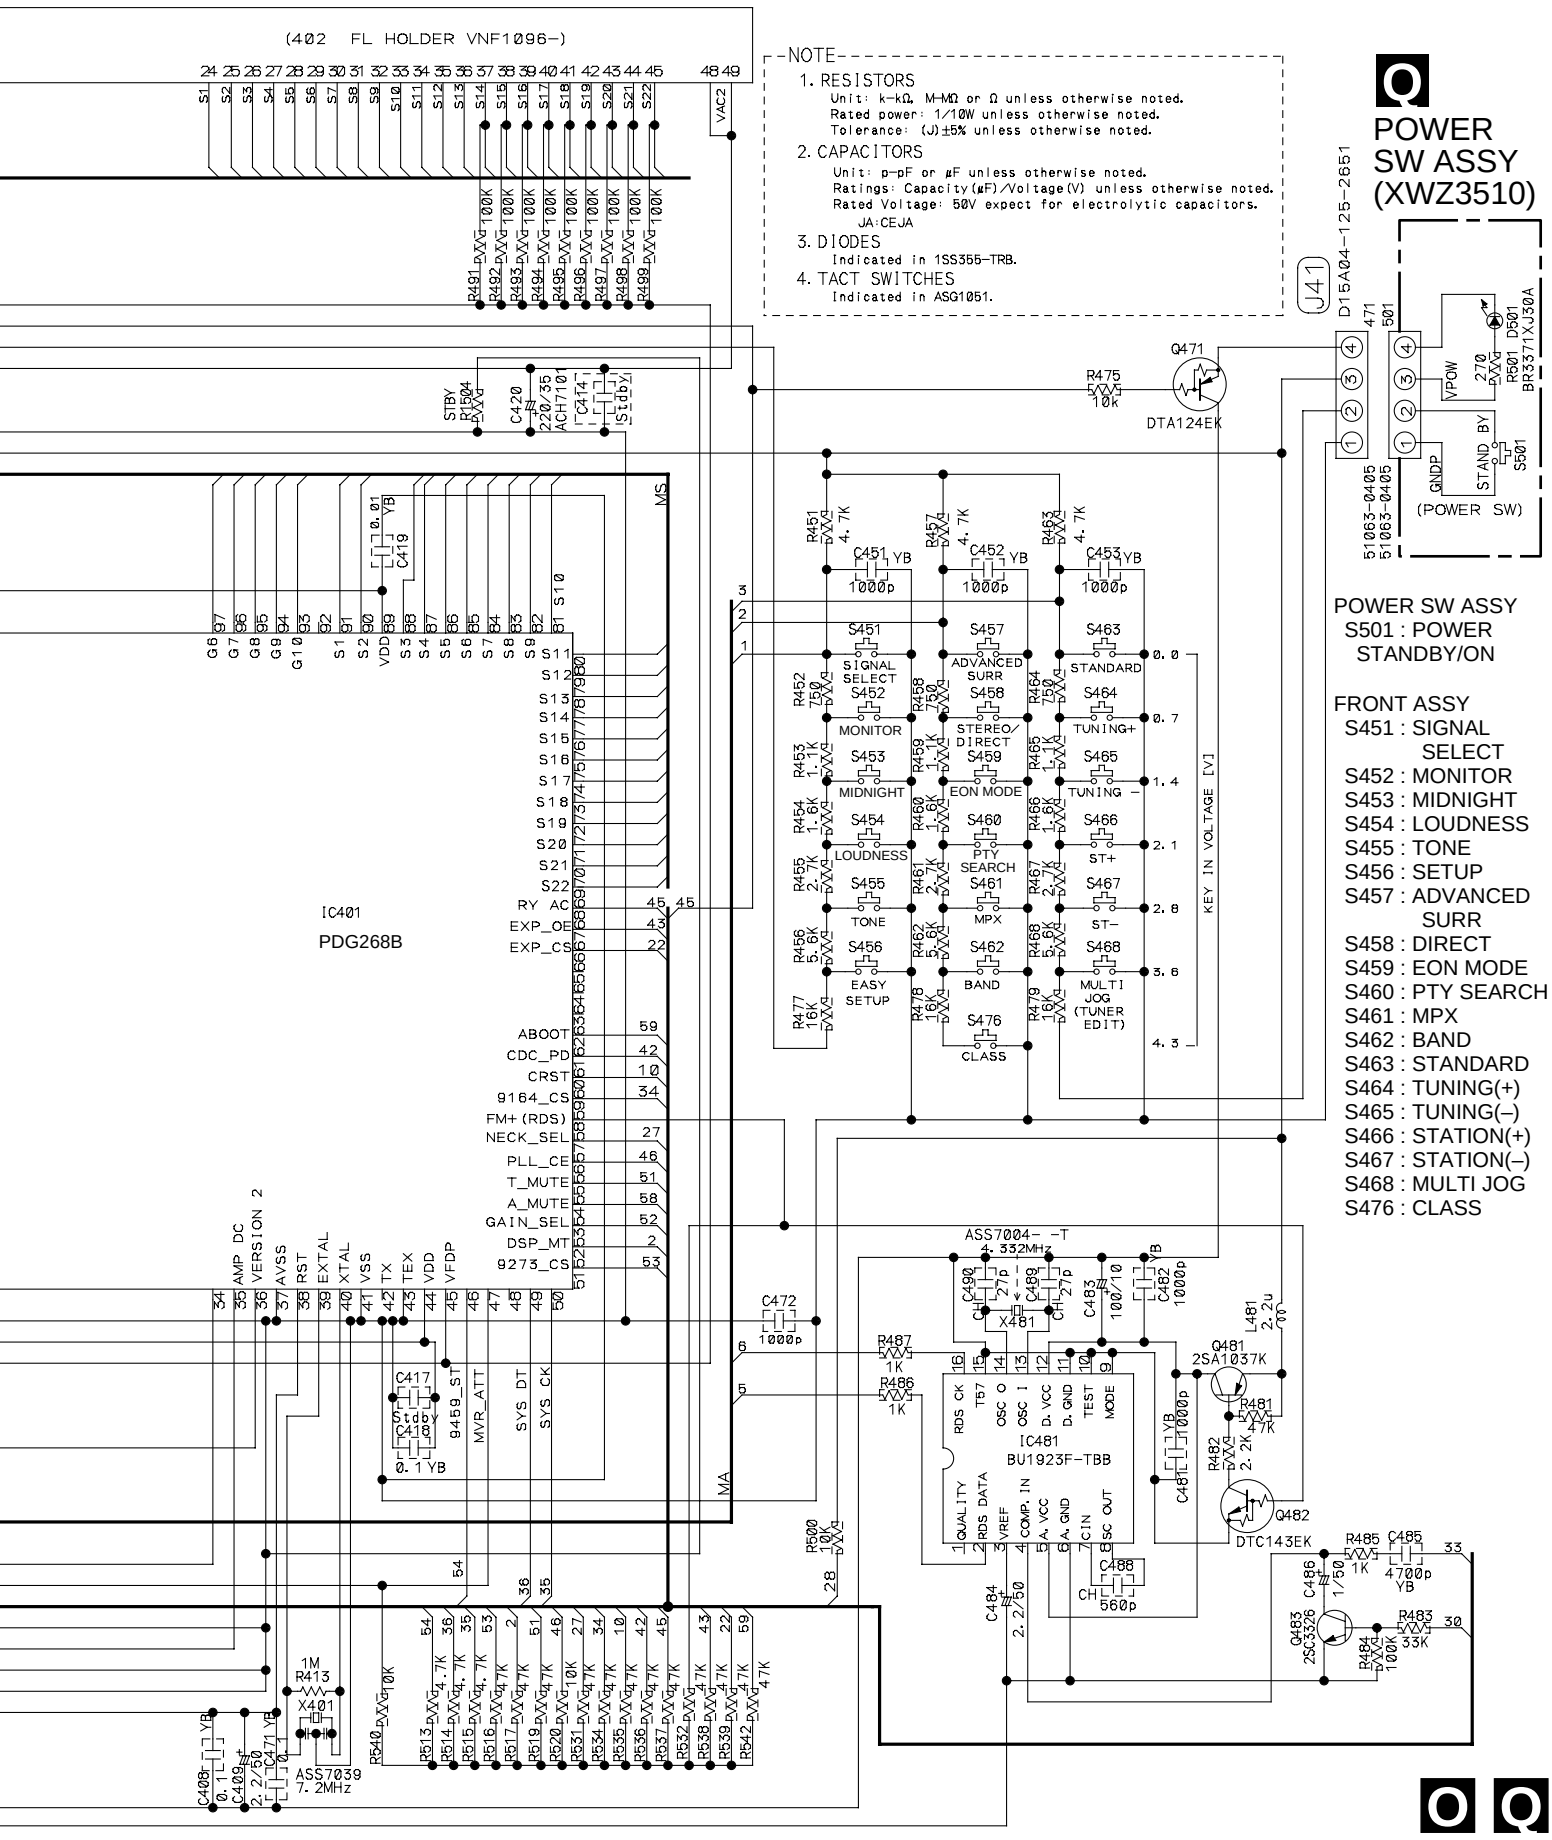
(402 FL HOLDER VNF1096-)
NOTE
1. RESISTORS
Unit: k-kΩ, M-MΩ or Ω unless otherwise noted.
Rated power: 1/10W unless otherwise noted.
Tolerance: (J)±5% unless otherwise noted.
2. CAPACITORS
Unit: p-pF or μF unless otherwise noted.
Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V expect for electrolytic capacitors.
JA:CEJA
3. DIODES
Indicated in 1SS355-TRB.
4. TACT SWITCHES
Indicated in ASG1051.
POWER
SW ASSY
(XWZ3510)
J41
D15A04-125-2651
(POWER SW)
51063-0405
51063-0405
Q471
DTA124EK
R475
10k
STBY
C420
220/35
C414
Stdby
IC401
PDG268B
RY AC
EXP_OE
EXP_CS
ABOOT
CDC_PD
CRST
9164_CS
FM+ (RDS)
NECK_SEL
PLL_CE
T_MUTE
A_MUTE
GAIN_SEL
DSP_MT
9273_CS
SIGNAL SELECT
MONITOR
MIDNIGHT
LOUDNESS
TONE
EASY SETUP
ADVANCED SURR
STEREO/ DIRECT
EON MODE
PTY SEARCH
MPX
BAND
CLASS
STANDARD
TUNING+
TUNING –
ST+
ST–
MULTI JOG (TUNER EDIT)
KEY IN VOLTAGE [V]
POWER SW ASSY
S501 : POWER STANDBY/ON
FRONT ASSY
S451 : SIGNAL SELECT
S452 : MONITOR
S453 : MIDNIGHT
S454 : LOUDNESS
S455 : TONE
S456 : SETUP
S457 : ADVANCED SURR
S458 : DIRECT
S459 : EON MODE
S460 : PTY SEARCH
S461 : MPX
S462 : BAND
S463 : STANDARD
S464 : TUNING(+)
S465 : TUNING(–)
S466 : STATION(+)
S467 : STATION(–)
S468 : MULTI JOG
S476 : CLASS
ASS7004- -T
4.332MHz
X481
IC481
BU1923F-TBB
Q481
2SA1037K
Q482
DTC143EK
Q483
2SC3326
X401
ASS7039
7.2MHz

3.11 DIGITAL IN, H.P. and KAWA ASSYS

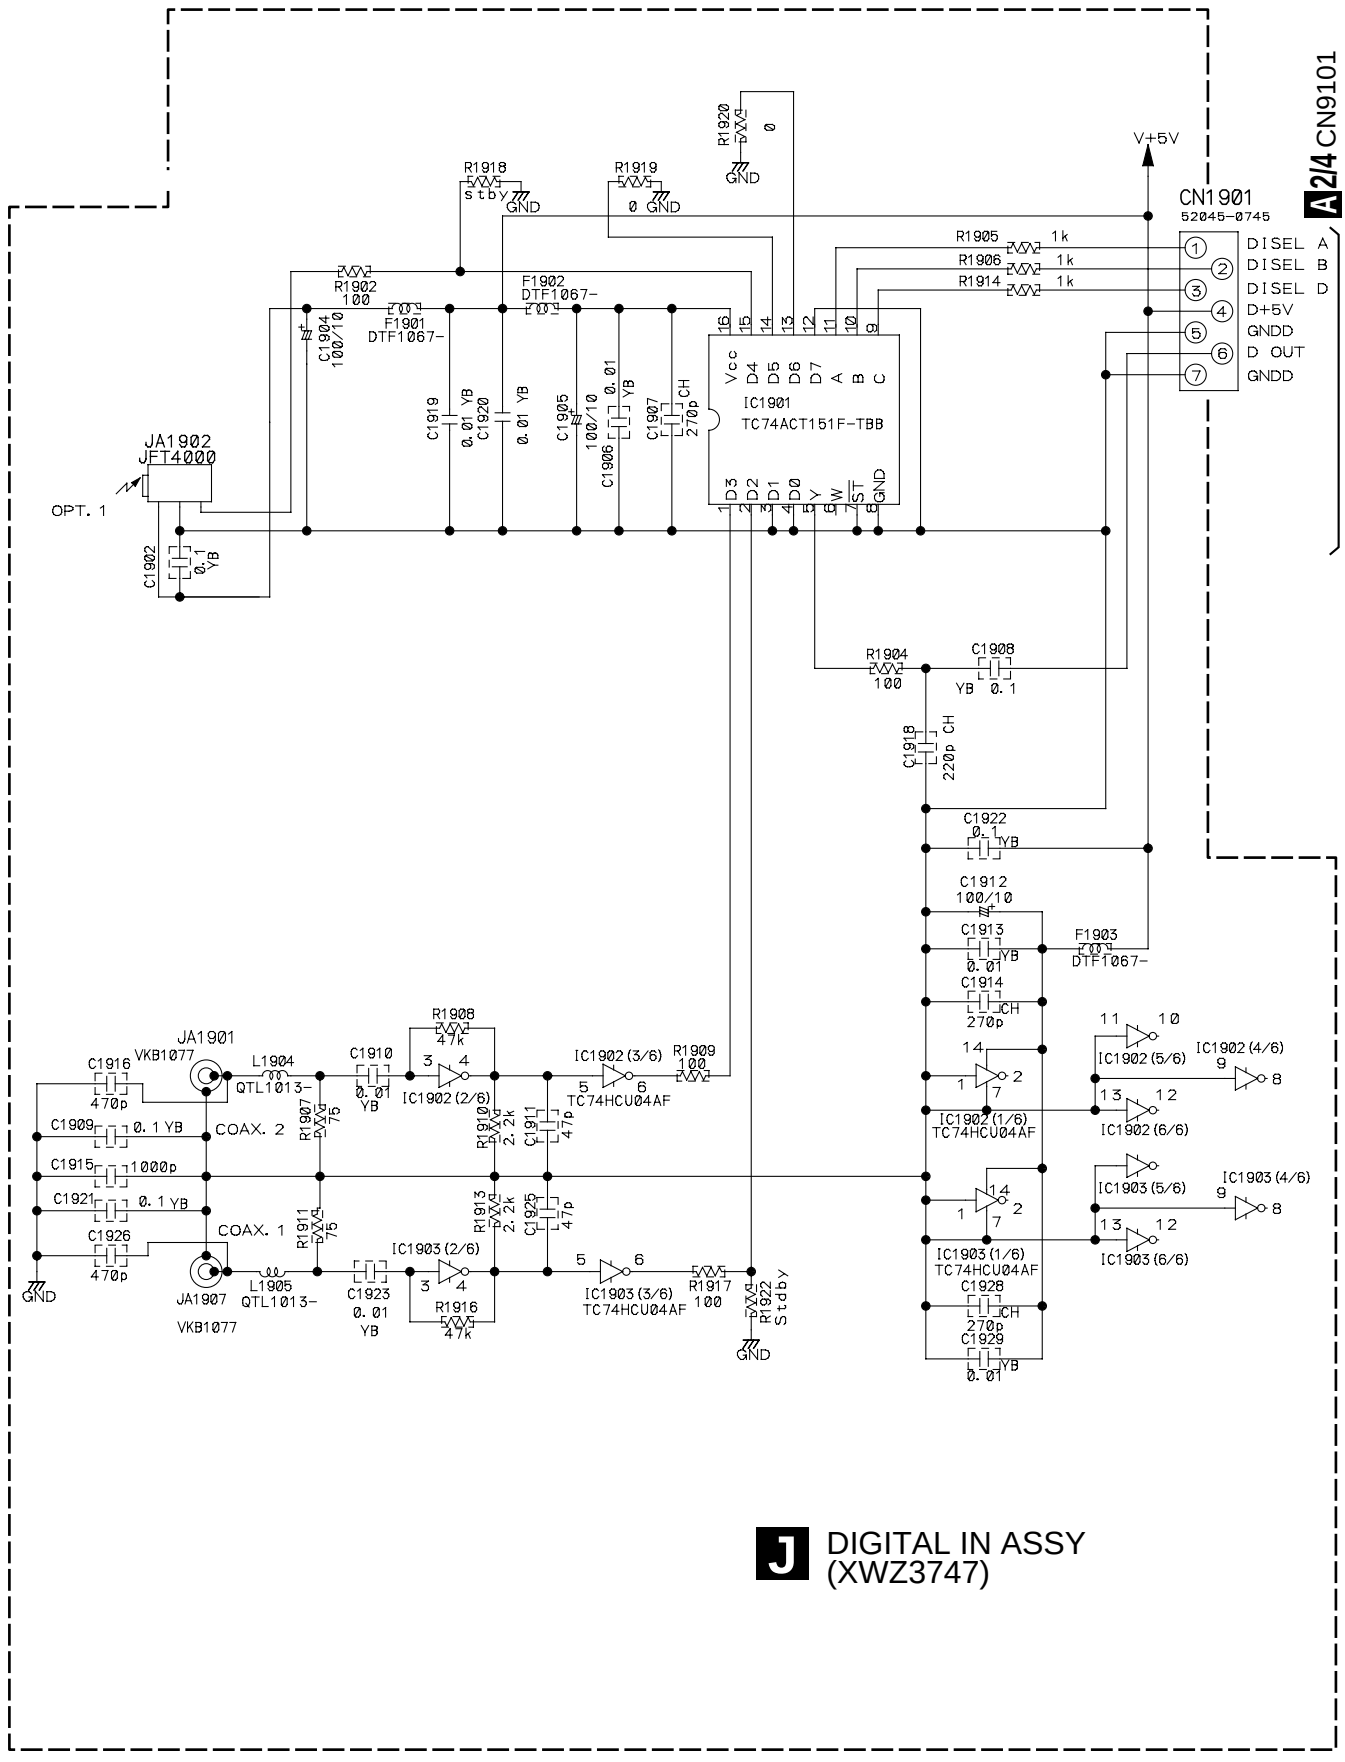

J DIGITAL IN ASSY
(XWZ3747)

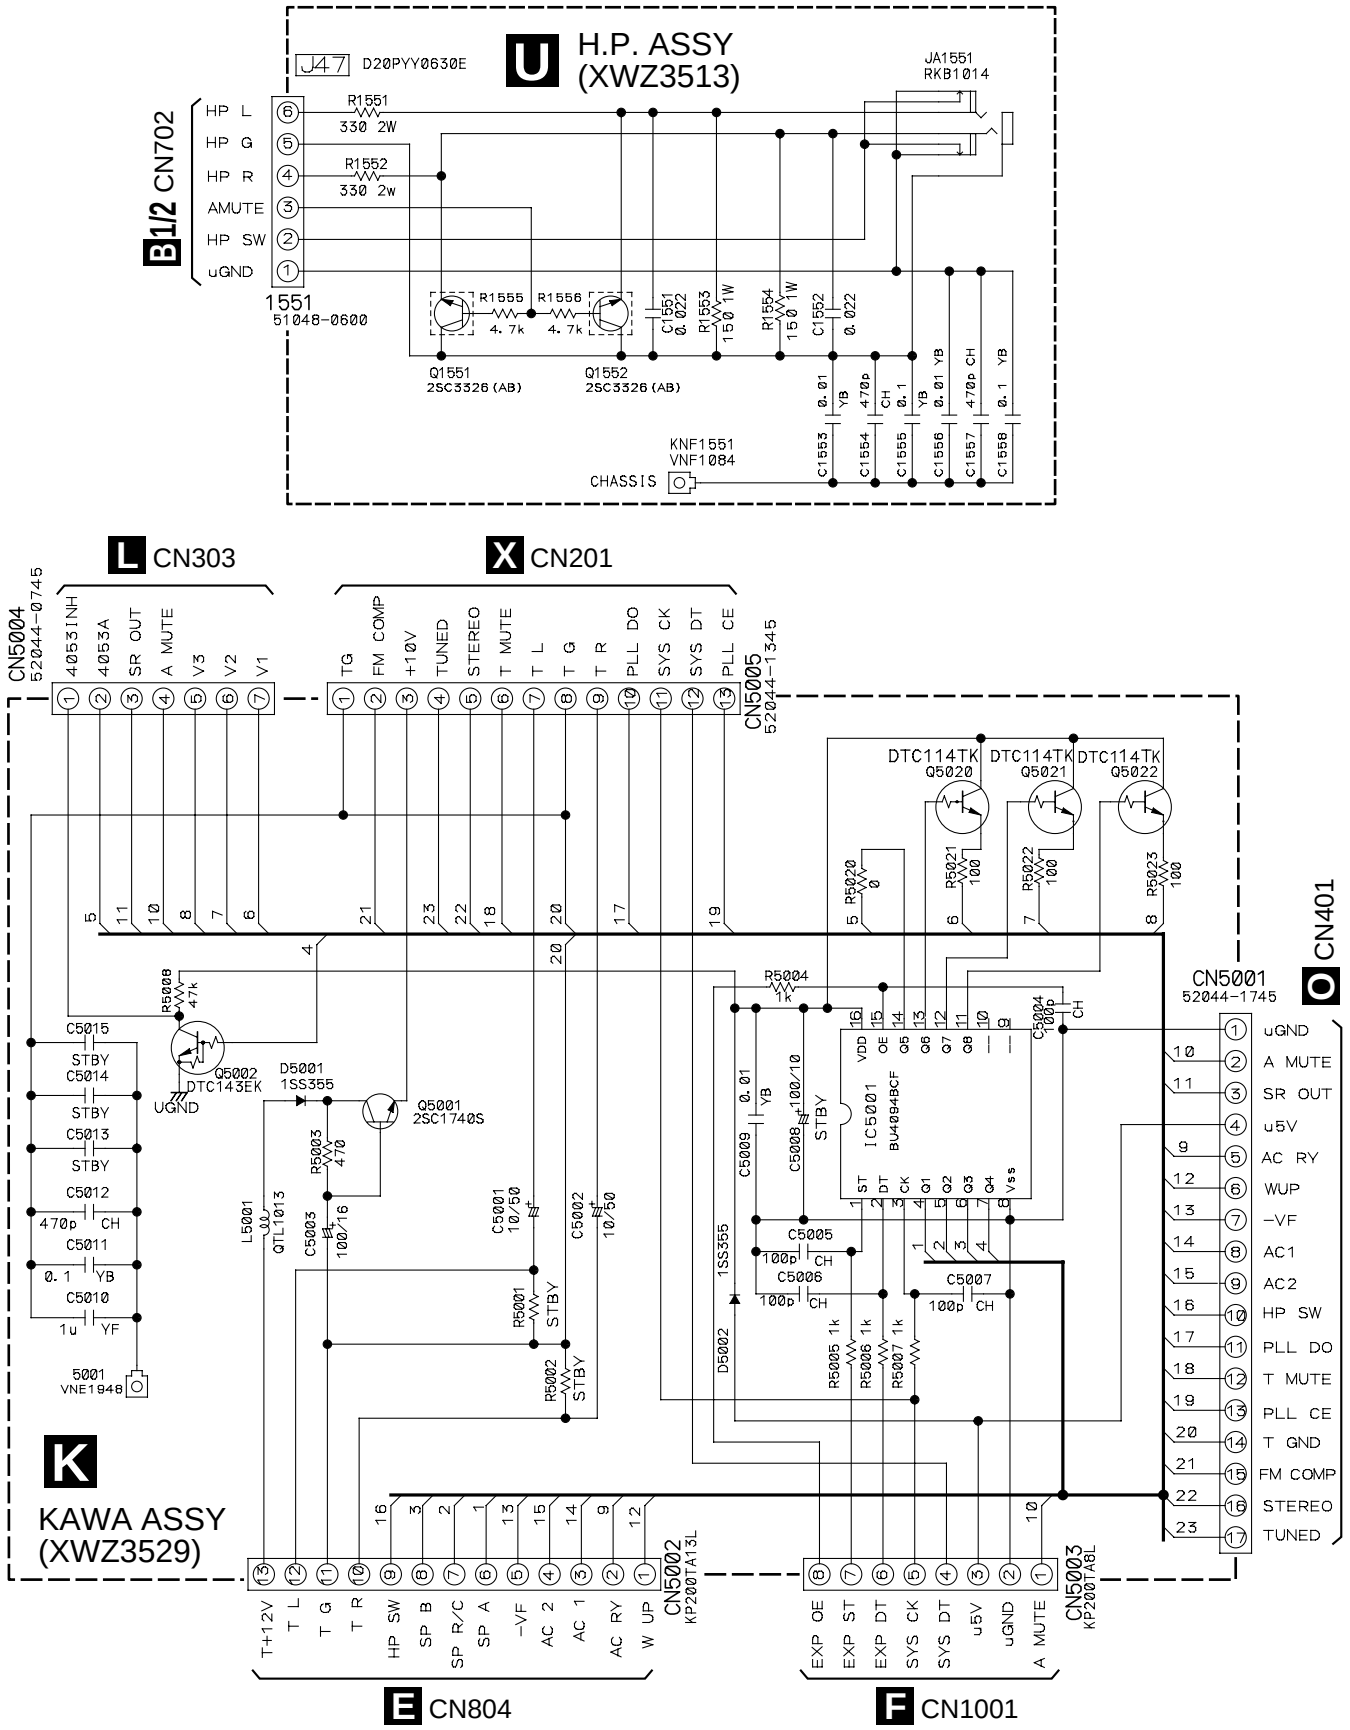
U H.P. ASSY (XWZ3513)
J47 D20PYY0630E
JA1551 RKB1014
B1/2 CN702
HP L
HP G
HP R
AMUTE
HP SW
uGND
1551 51048-0600
R1551 330 2W
R1552 330 2w
R1555 4.7k
R1556 4.7k
C1551 0.022
R1553 150 1W
R1554 150 1W
C1552 0.022
Q1551 2SC3326(AB)
Q1552 2SC3326(AB)
C1553 0.01 YB
C1554 470p CH
C1555 0.1 YB
C1556 0.01 YB
C1557 470p CH
C1558 0.1 YB
KNF1551 VNF1084
CHASSIS
L CN303
X CN201
CN5004 52044-0745
4053INH
4053A
SR OUT
A MUTE
V3
V2
V1
CN5005 52044-1345
TG
FM COMP
+10V
TUNED
STEREO
T MUTE
T L
T G
T R
PLL DO
SYS CK
SYS DT
PLL CE
DTC114TK Q5020
DTC114TK Q5021
DTC114TK Q5022
R5020 0
R5021 100
R5022 100
R5023 100
R5004 1k
R5008 47k
Q5002 DTC143EK
UGND
D5001 1SS355
Q5001 2SC1740S
C5015 STBY
C5014 STBY
C5013 STBY
C5012 470p CH
C5011 0.1 YB
C5010 1u YF
5001 VNE1948
R5003 470
C5003 100/16
L5001 QTL1013
C5001 10/50
C5002 10/50
R5001 STBY
R5002 STBY
C5009 0.01 YB
C5008 100/10 STBY
IC5001 BU4094BCF
C5005 100p CH
C5006 100p CH
C5007 100p CH
1SS355
D5002
R5005 1k
R5006 1k
R5007 1k
C5004 100p CH
CN5001 52044-1745
O CN401
uGND
A MUTE
SR OUT
u5V
AC RY
WUP
–VF
AC1
AC2
HP SW
PLL DO
T MUTE
PLL CE
T GND
FM COMP
STEREO
TUNED
K
KAWA ASSY (XWZ3529)
CN5002 KP200TA13L
T+12V
T L
T G
T R
HP SW
SP B
SP R/C
SP A
–VF
AC 2
AC 1
AC RY
W UP
CN5003 KP200TA8L
EXP OE
EXP ST
EXP DT
SYS CK
SYS DT
u5V
uGND
A MUTE
E CN804
F CN1001

3.12 FM/AM TUNER MODULE

X FM/AM TUNER MODULE (AXQ7232)

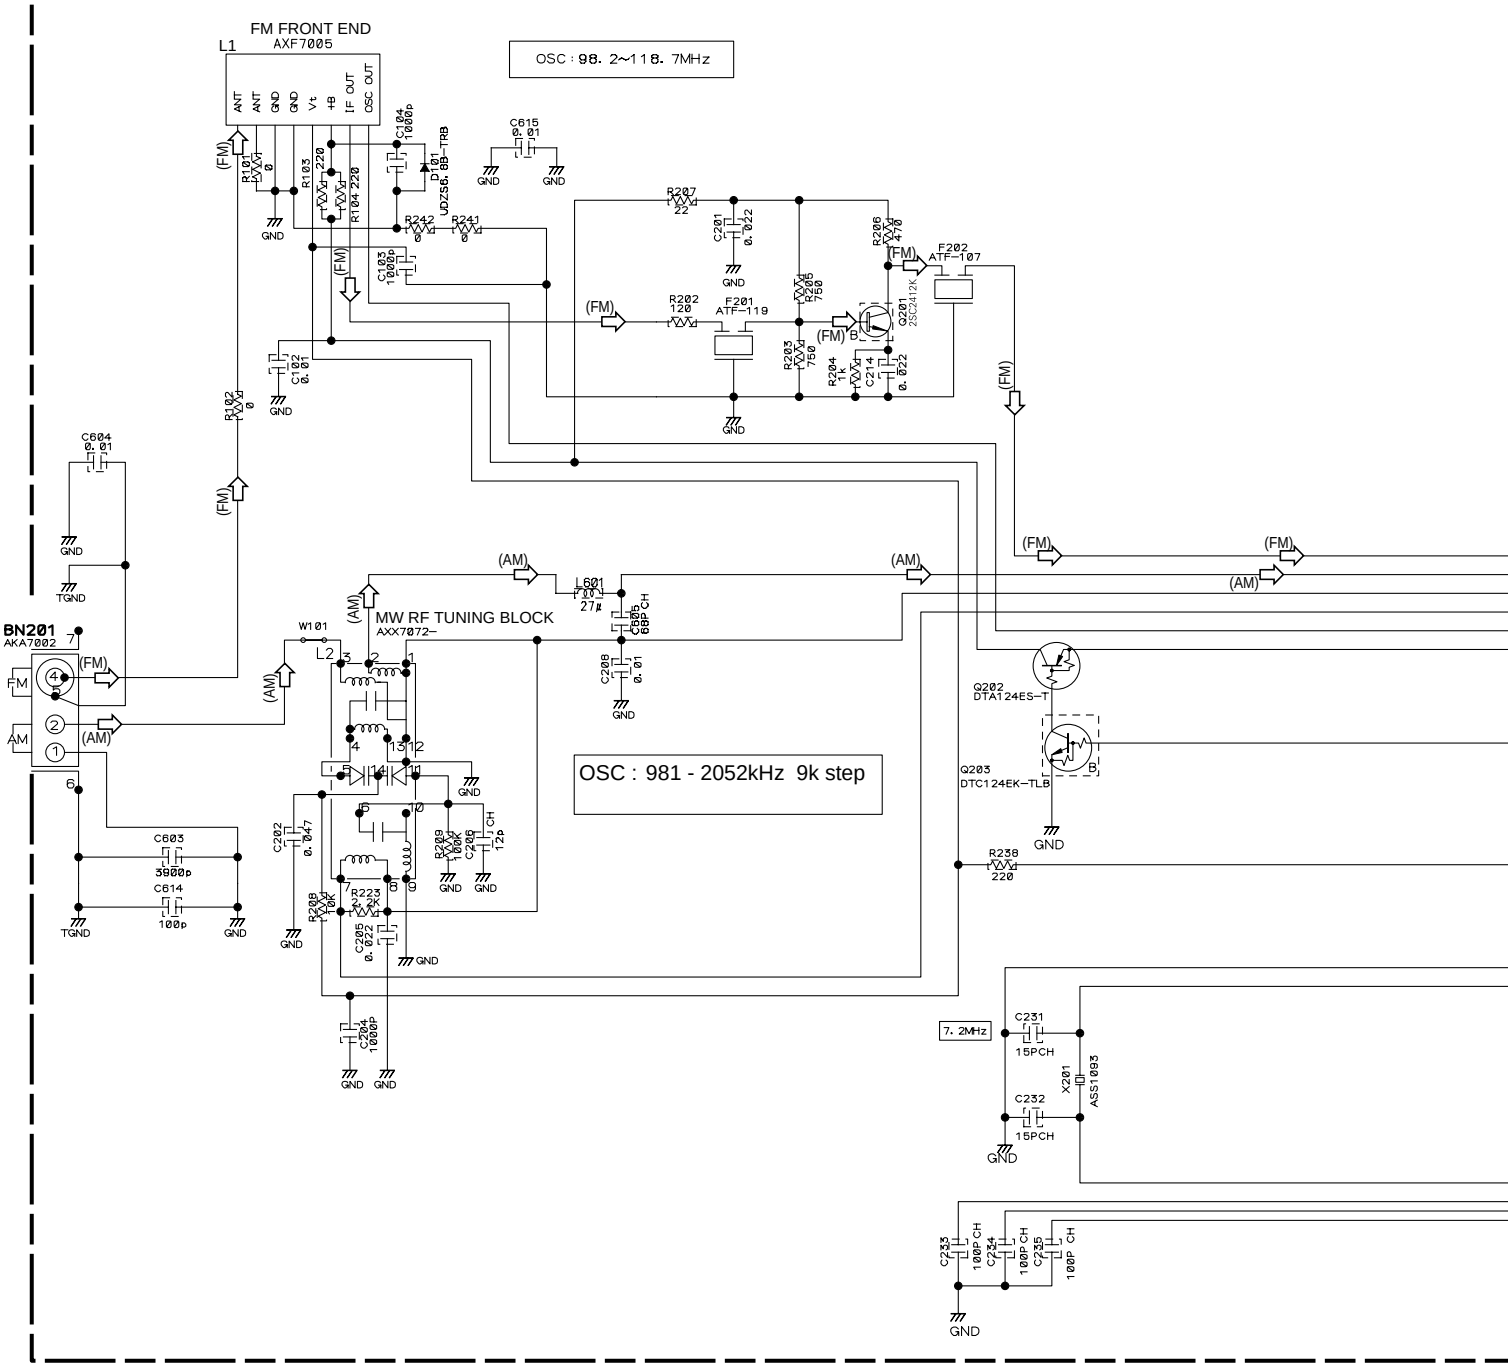

Notes

1. RESISTORS
   Indicated in Ω, 1/16W±5% Tolerance unless otherwise noted K;KΩ, M;MΩ.
2. CAPACITORS
   Indicated in Capacity(μF)/VOLTAGE(V) unless otherwise noted P;PF.
3. DIODES
   No mark diode is 1SS133.

: The power supply is shown with the marked box.

(TX) : AUDIO SIGNAL ROUTE (TUNER)
(AM) : AM SIGNAL ROUTE
(FM) : FM SIGNAL ROUTE

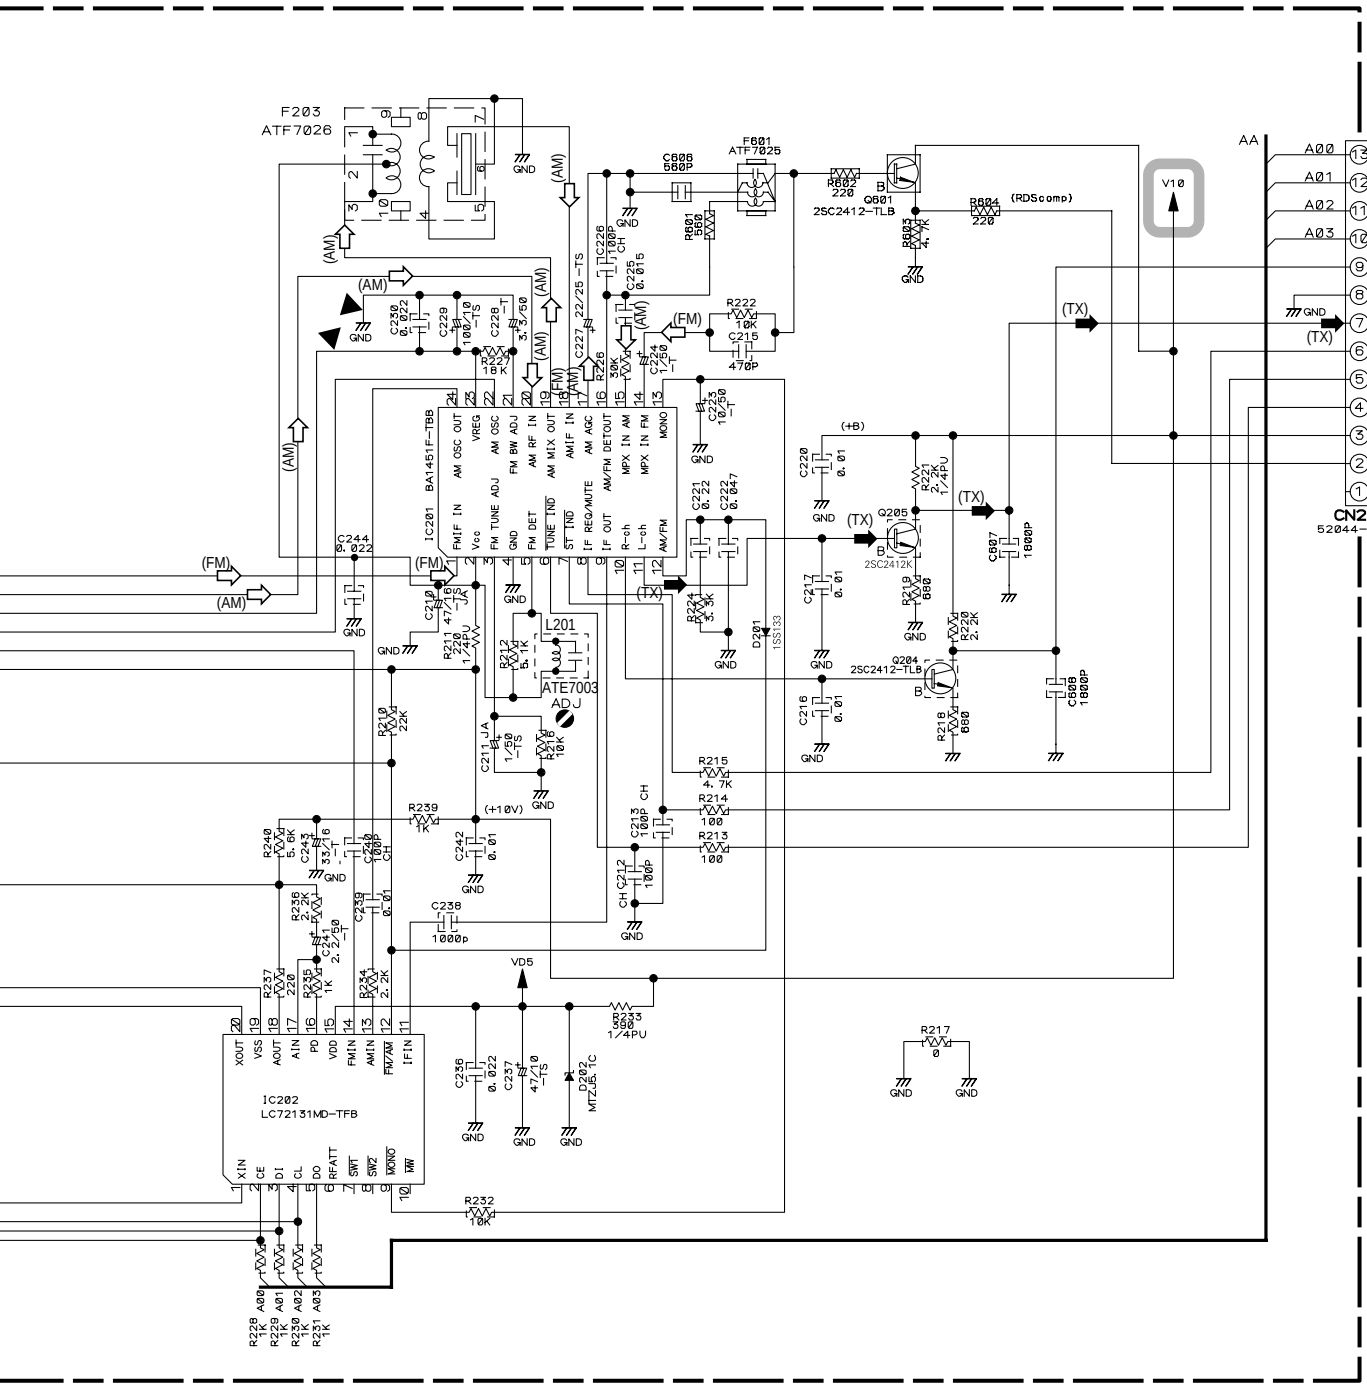

4. PCB CONNECTION DIAGRAM

NOTE FOR PCB DIAGRAMS :

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor array
		3-terminal regulator

3. The parts mounted on this PCB include all necessary parts for several destinations.
   For further information for respective destinations, be sure to check with the schematic diagram.
4. View point of PCB diagrams.

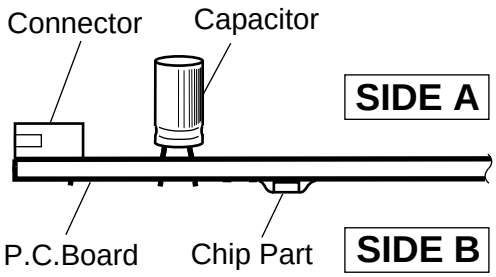

4.1 TRANS1, TRANS2 and TRANS3 ASSYS

SIDE A **SIDE A**

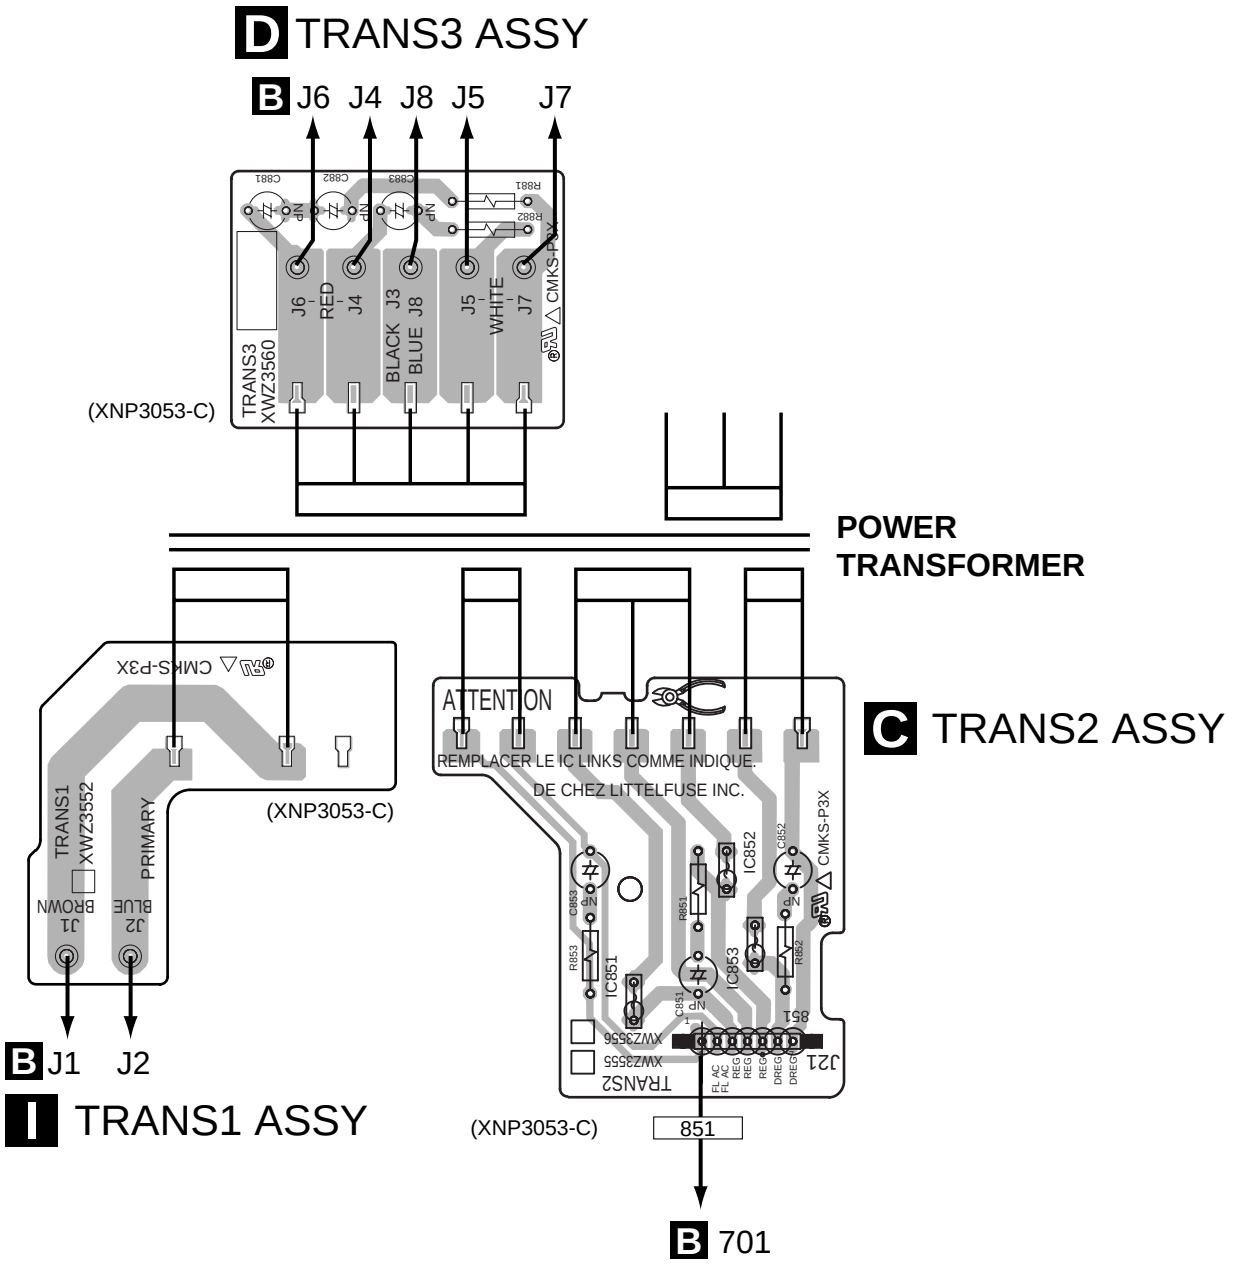

4.2 D.D & INPUT ASSY

SIDE A

A

B

C

D

E

F

A D.D & INPUT ASSY

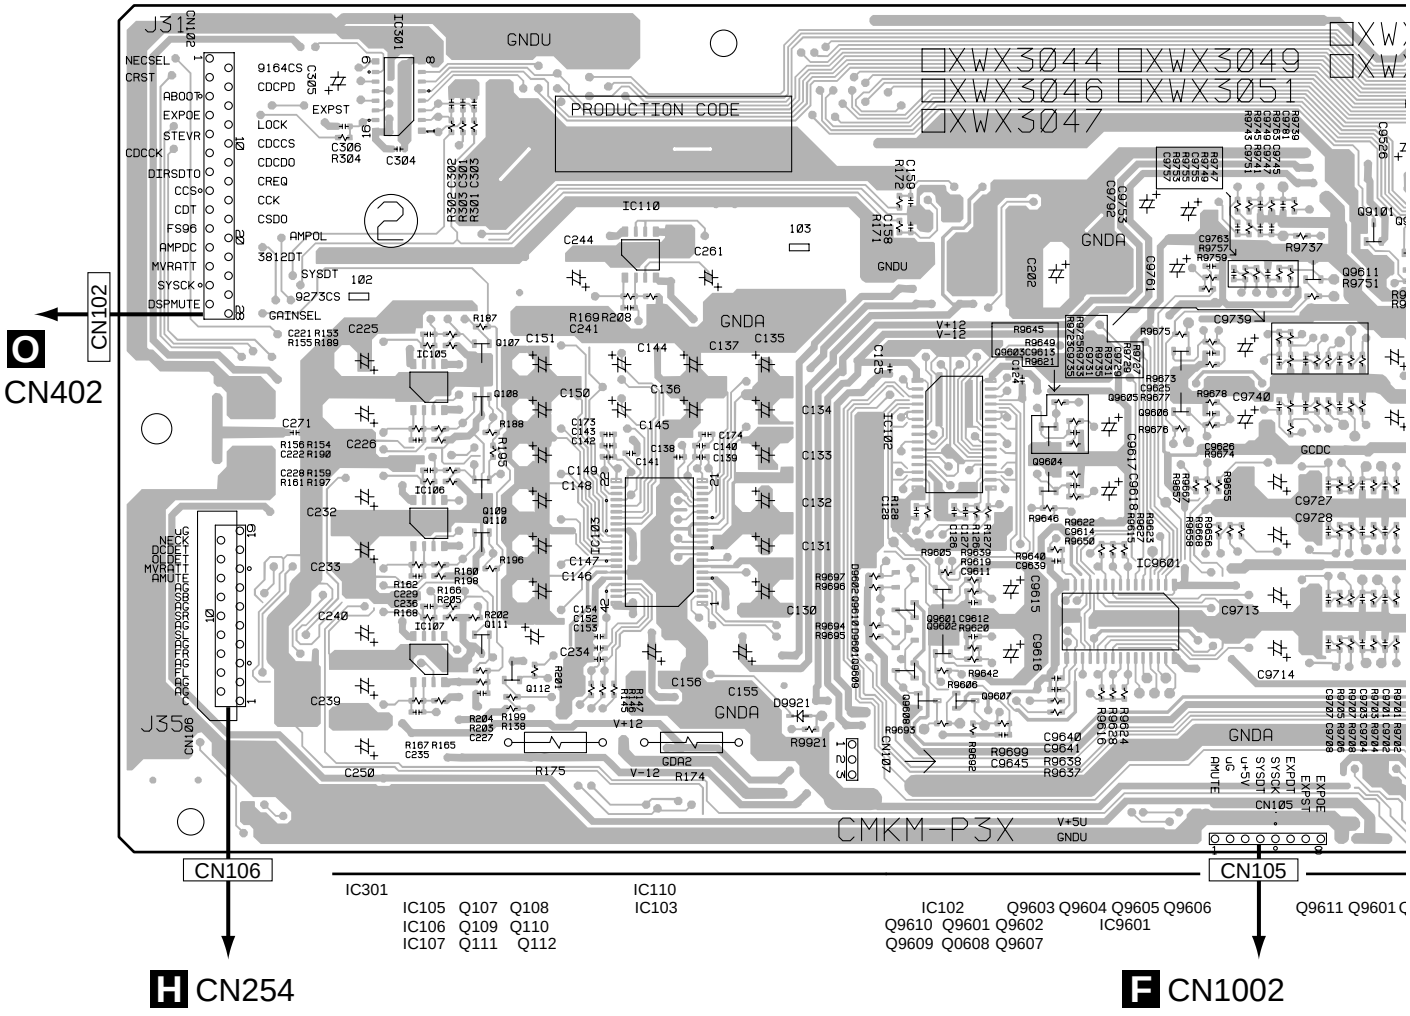

A

SIDE A

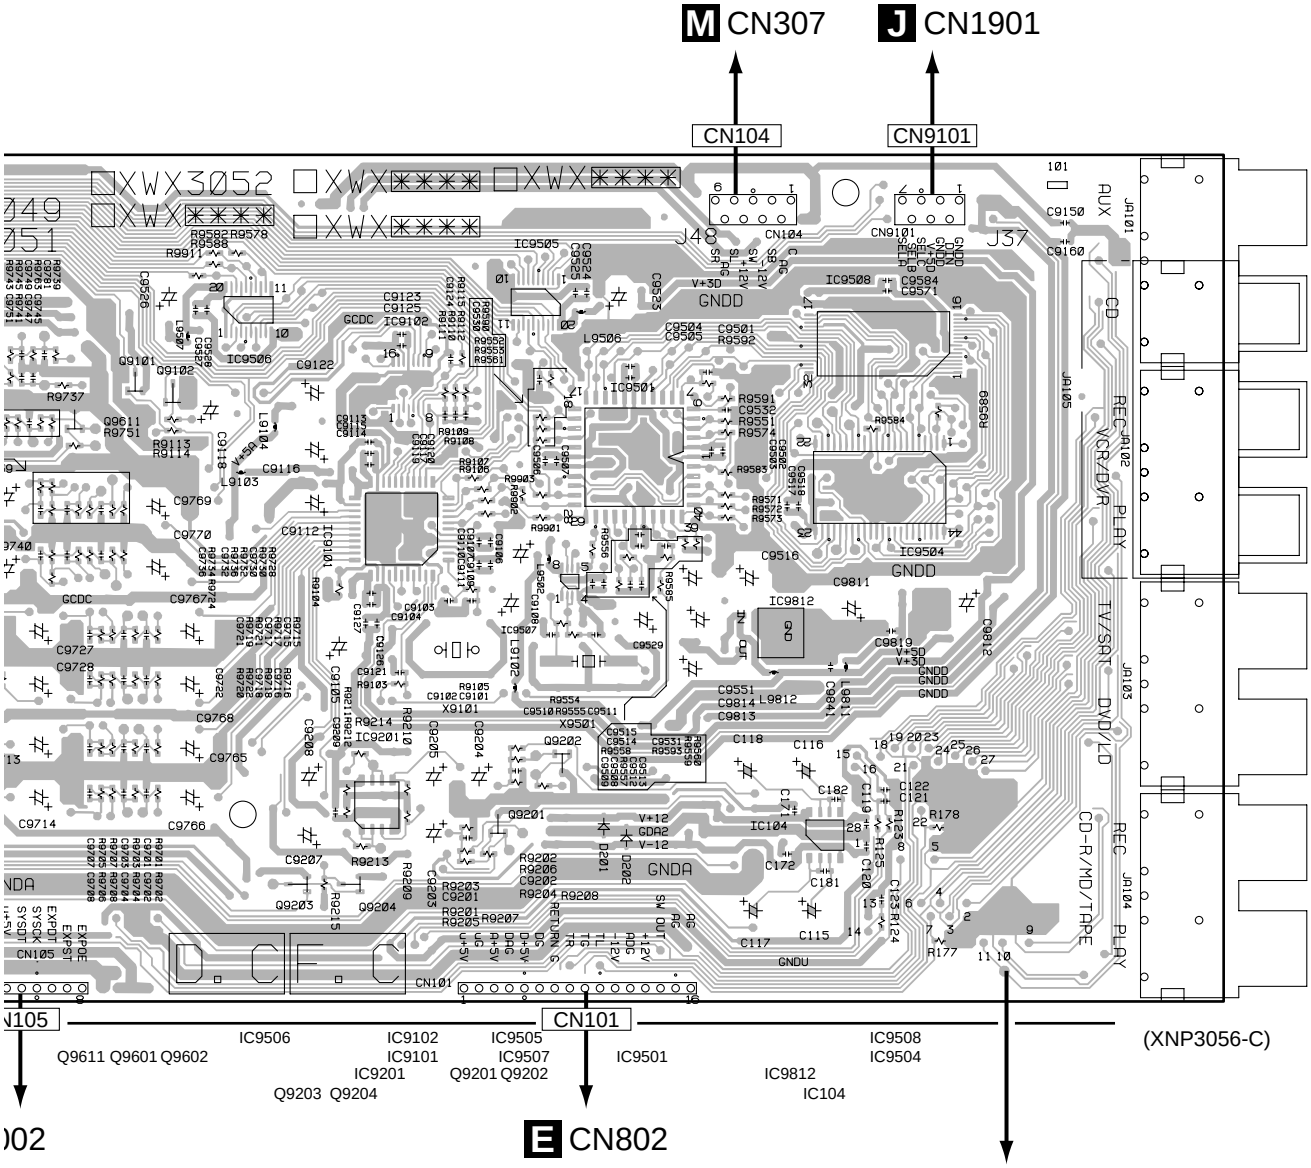

Note : The pin of function IC(IC101 TC9273F-007)can be checked from side-A by the through-hole round. The pin No. is printed on the side-A.

SIDE B

A D.D & INPUT ASSY

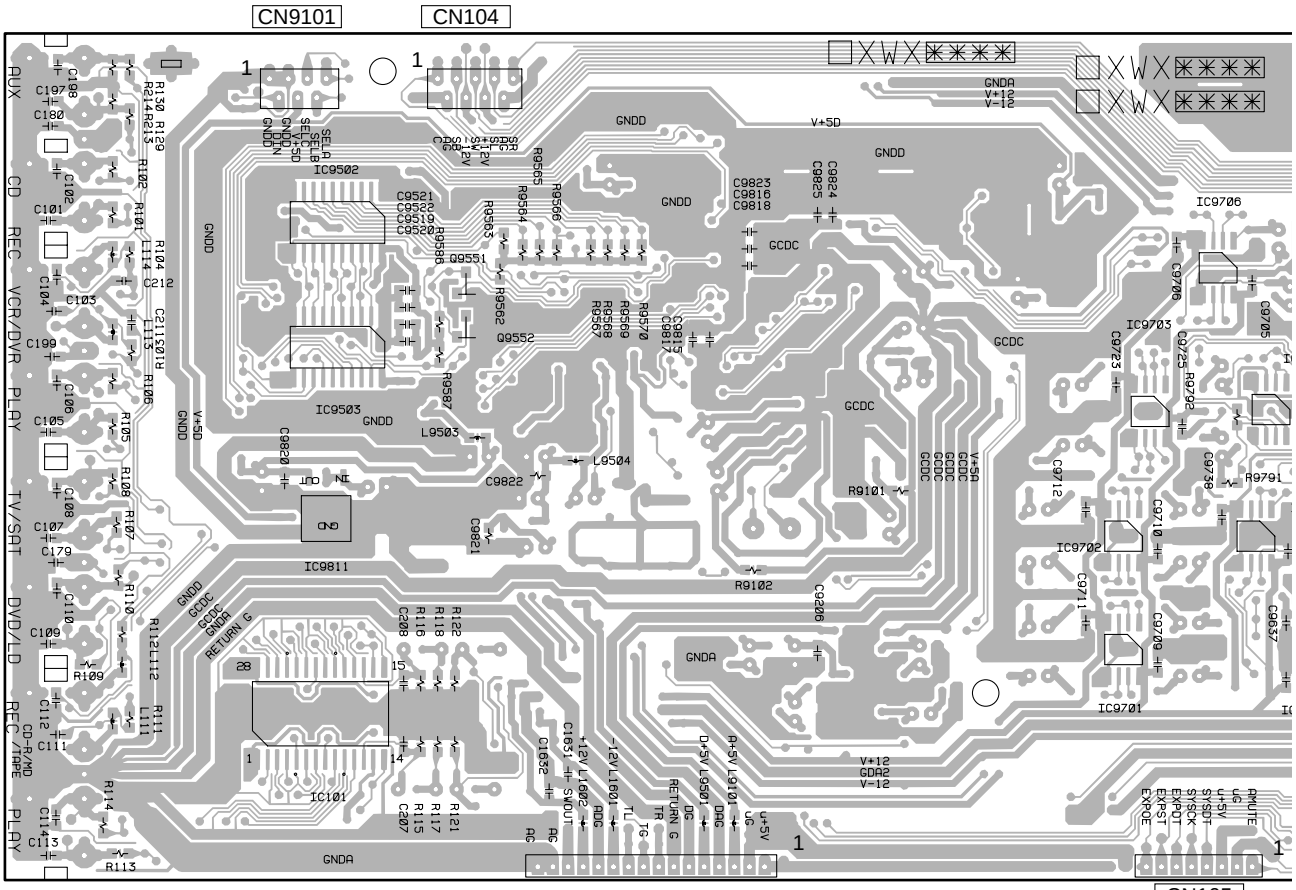

SIDE B

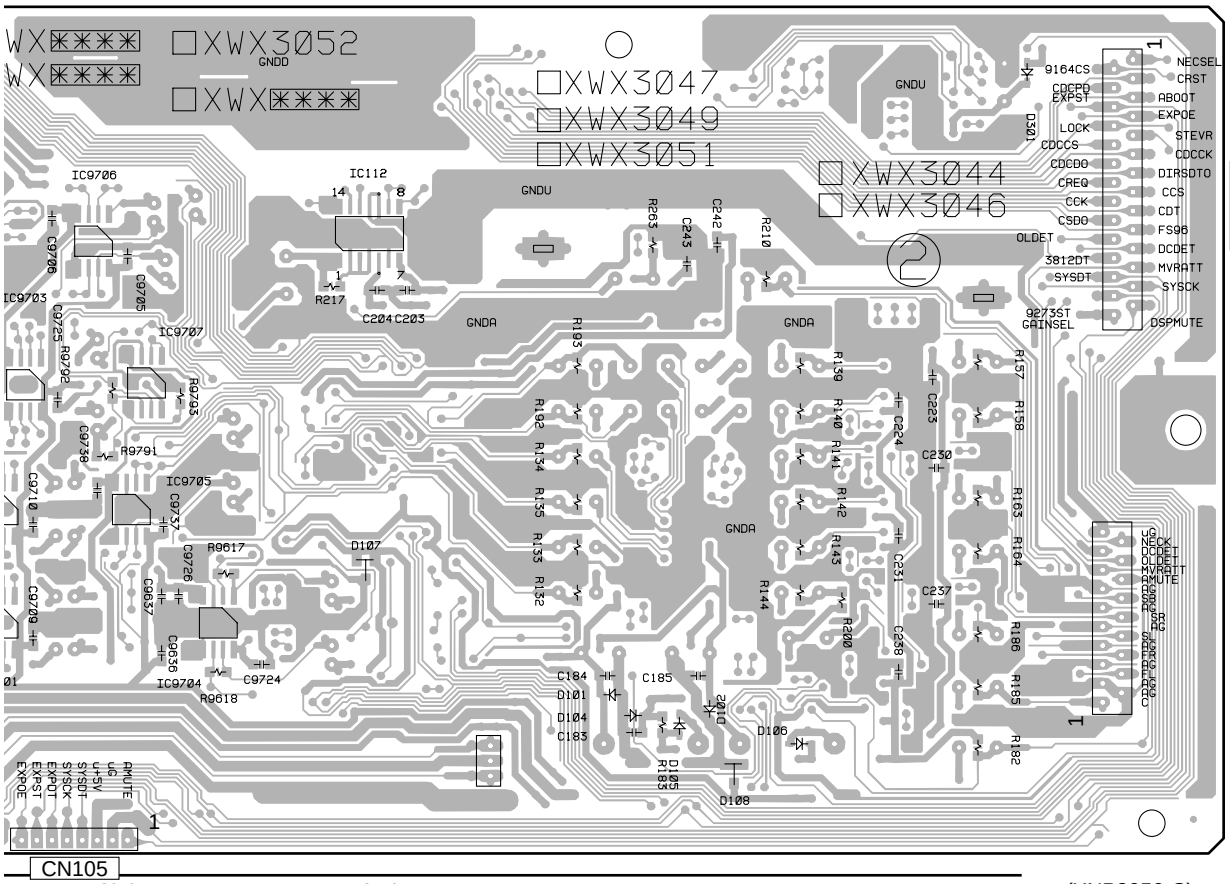

(XNP3056-C)

IC9705 IC112

C9703 IC9707

02 IC9705

IC9704

VSX-D512-K

4.3 AMP INPUT, AMP & PRIMARY and MECHA SW ASSYS

SIDE A

Y MECHA SW ASSY

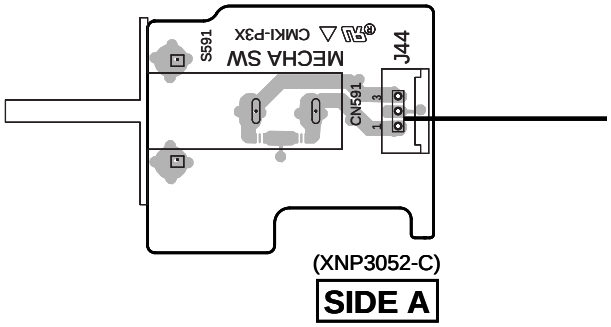

(XNP3052-C)

SIDE A

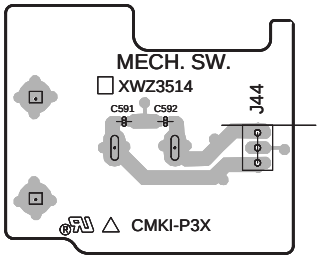

(XNP3052-C)

SIDE B

H AMP INPUT ASSY

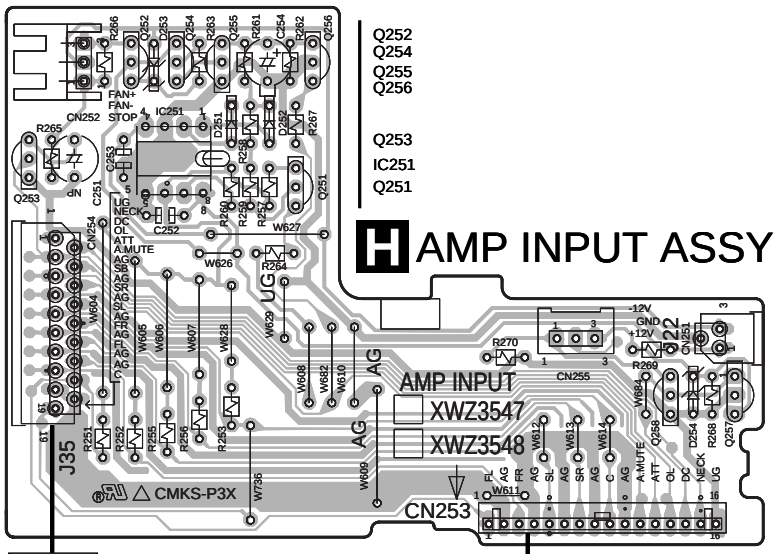

(XNP3053-C)

A CN106

B AMP&PRIMARY ASSY

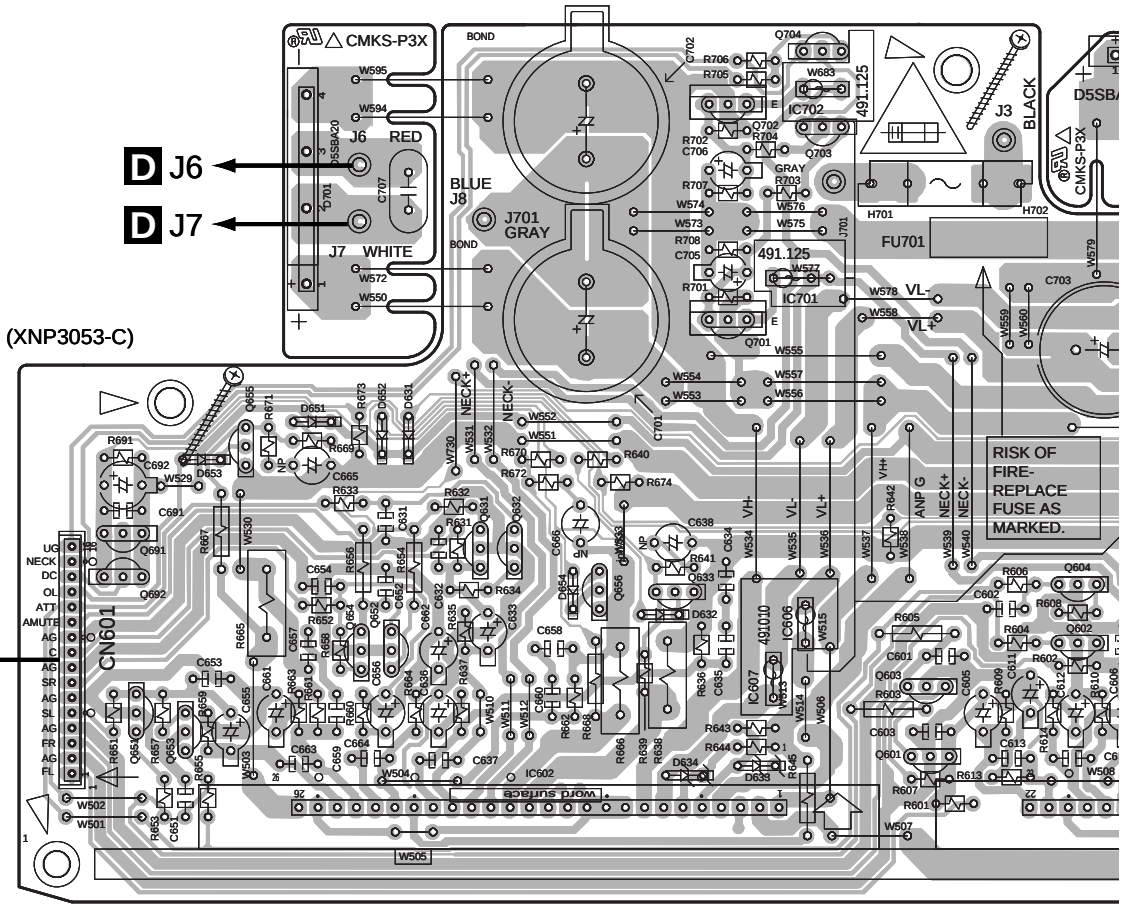

D J6

D J7

(XNP3053-C)

Q704
Q702
IC702
Q703

Q701
IC701

Q655

Q697
Q696
Q681
Q682
Q652
Q654

Q633
Q656
Q683
IC607
IC606

Q602
Q604
Q606
Q605
Q601
Q603
IC605
IC604

Q651
Q653
Q631
Q632

IC602
IC601
IC603

B H Y

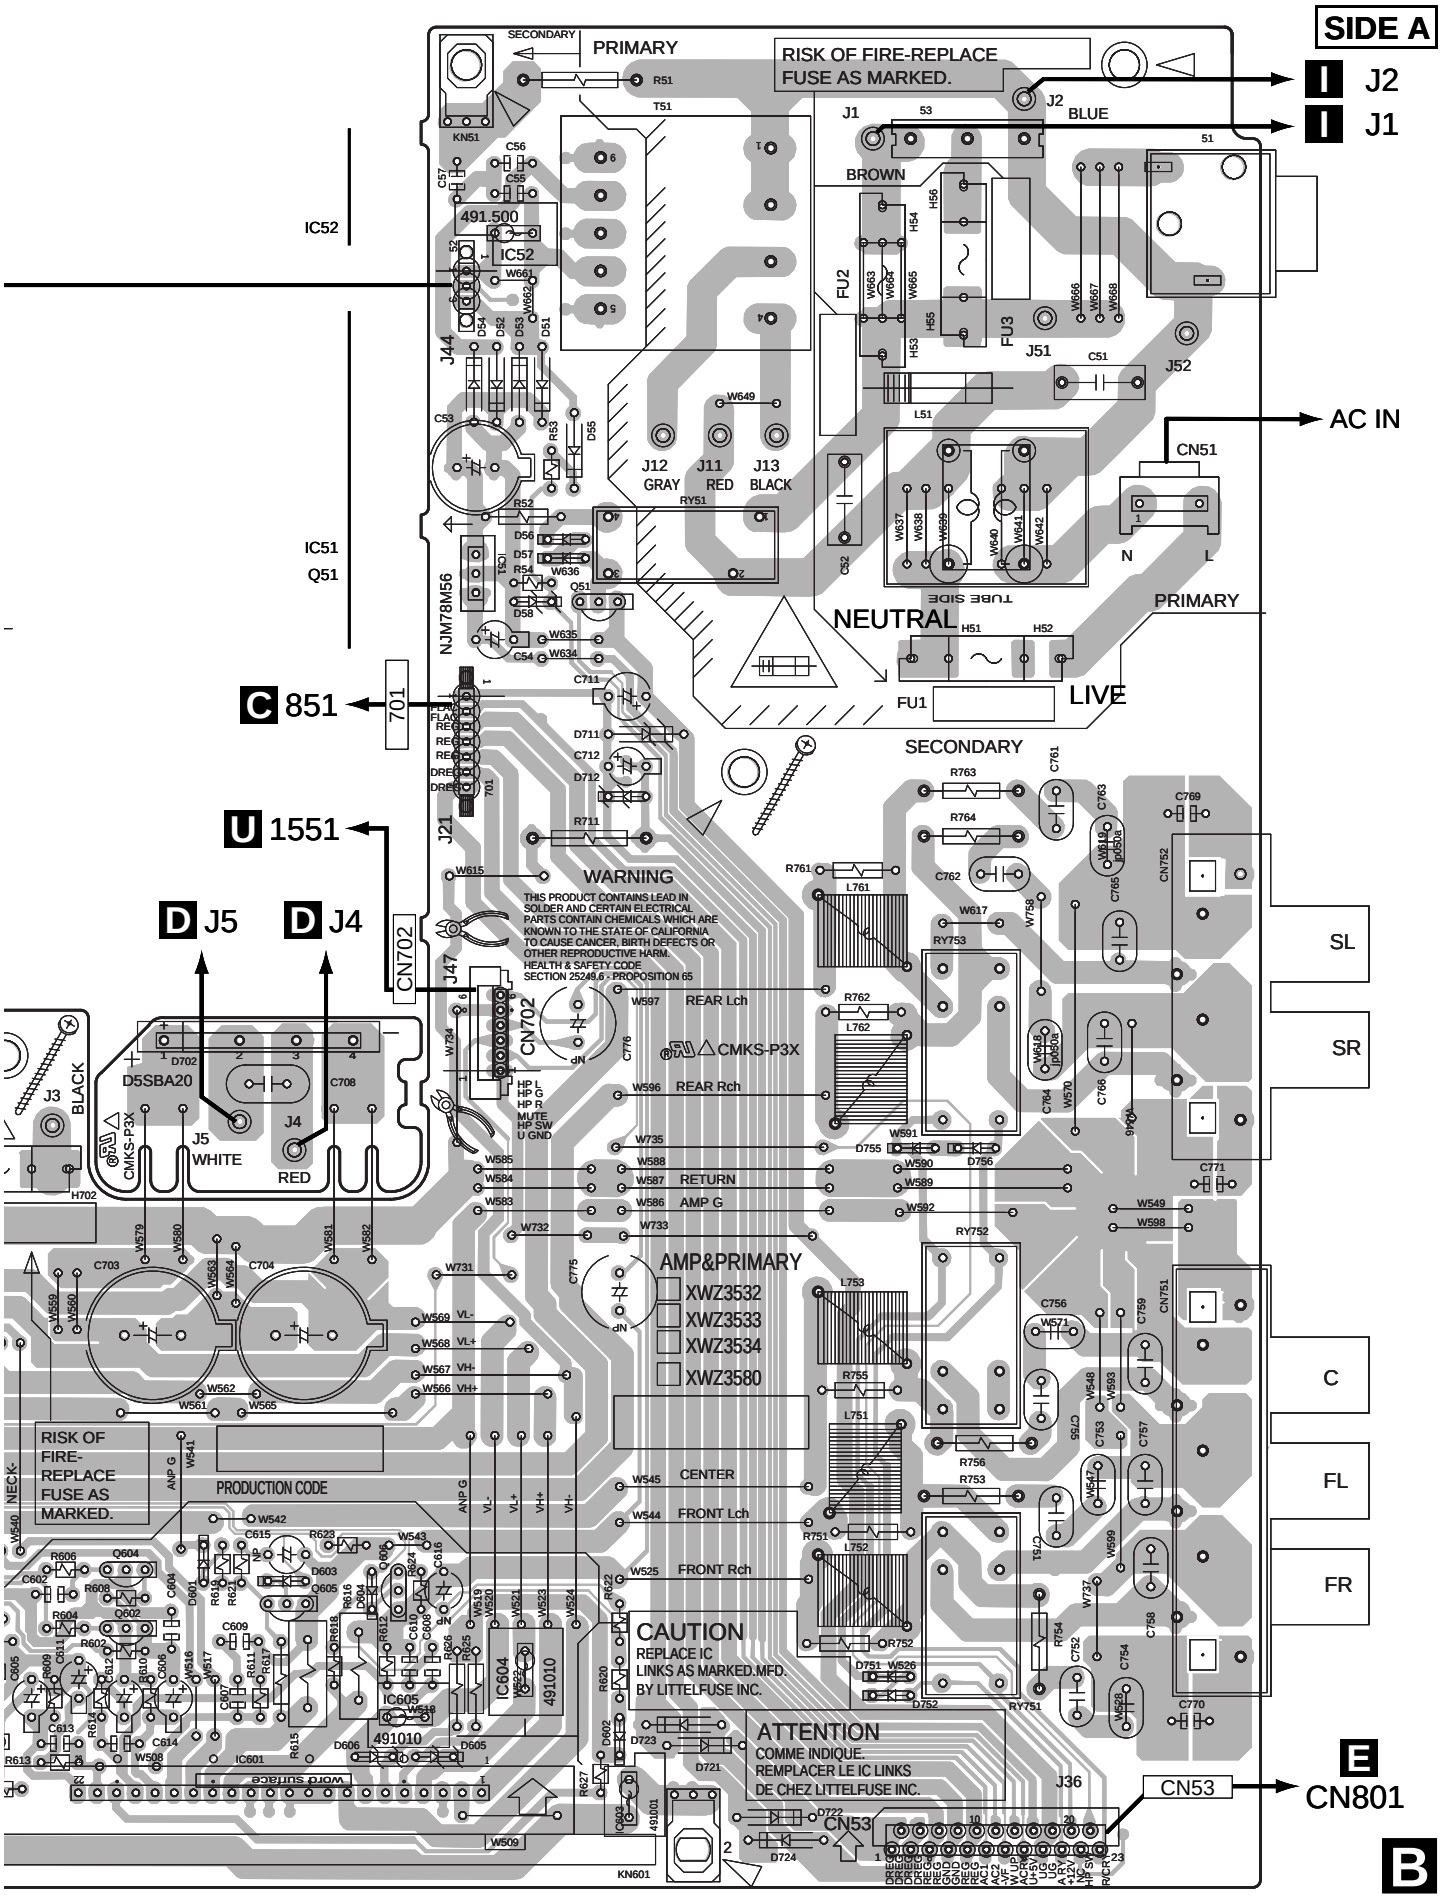
SIDE A
I J2
I J1
AC IN
C 851
U 1551
D J5
D J4
E CN801
B
SECONDARY
PRIMARY
RISK OF FIRE-REPLACE FUSE AS MARKED.
BLUE
BROWN
NEUTRAL
LIVE
PRIMARY
SECONDARY
TUBE SIDE
WARNING
THIS PRODUCT CONTAINS LEAD IN SOLDER AND CERTAIN ELECTRICAL PARTS CONTAIN CHEMICALS WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. HEALTH & SAFETY CODE SECTION 25249.6 - PROPOSITION 65
REAR Lch
REAR Rch
RETURN
AMP G
CENTER
FRONT Lch
FRONT Rch
CMKS-P3X
AMP&PRIMARY
XWZ3532
XWZ3533
XWZ3534
XWZ3580
PRODUCTION CODE
CAUTION
REPLACE IC
LINKS AS MARKED.MFD.
BY LITTELFUSE INC.
ATTENTION
COMME INDIQUE.
REMPLACER LE IC LINKS
DE CHEZ LITTELFUSE INC.
IC52
491.500
IC51
Q51
NJM78M56
IC601
IC604
IC605
491010
CN702
CN701
CN51
CN53
CN752
CN751
SL
SR
C
FL
FR
J1
J2
J3
J4
J5
J12 GRAY
J11 RED
J13 BLACK
J36
J44
J47
J51
J52
J21
FU1
FU2
FU3
D5SBA20
WHITE
RED
BLACK

4.4 FRONT, POWER SW, H.P. and R.ENCODER ASSYS

SIDE A

O FRONT ASSY

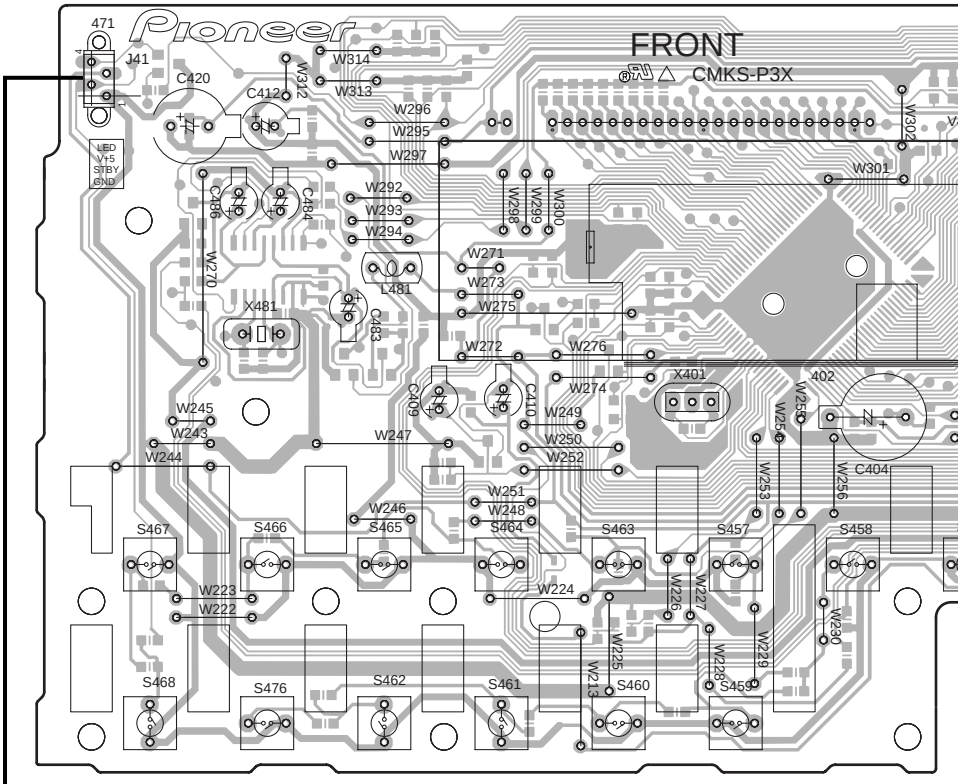

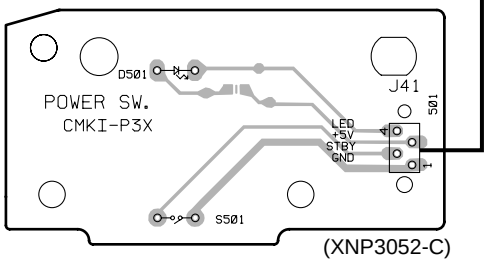

(XNP3052-C)

Q POWER SW ASSY

B CN702

U H.P ASSY

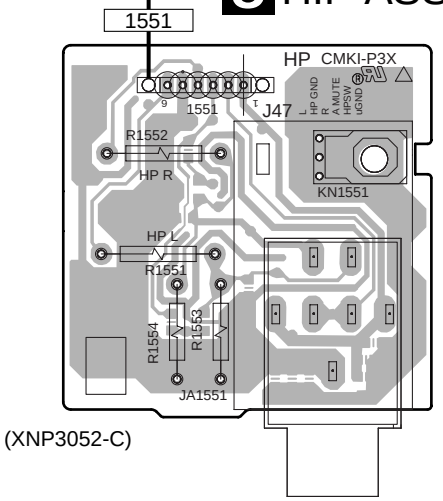

(XNP3052-C)

O Q U

SIDE A

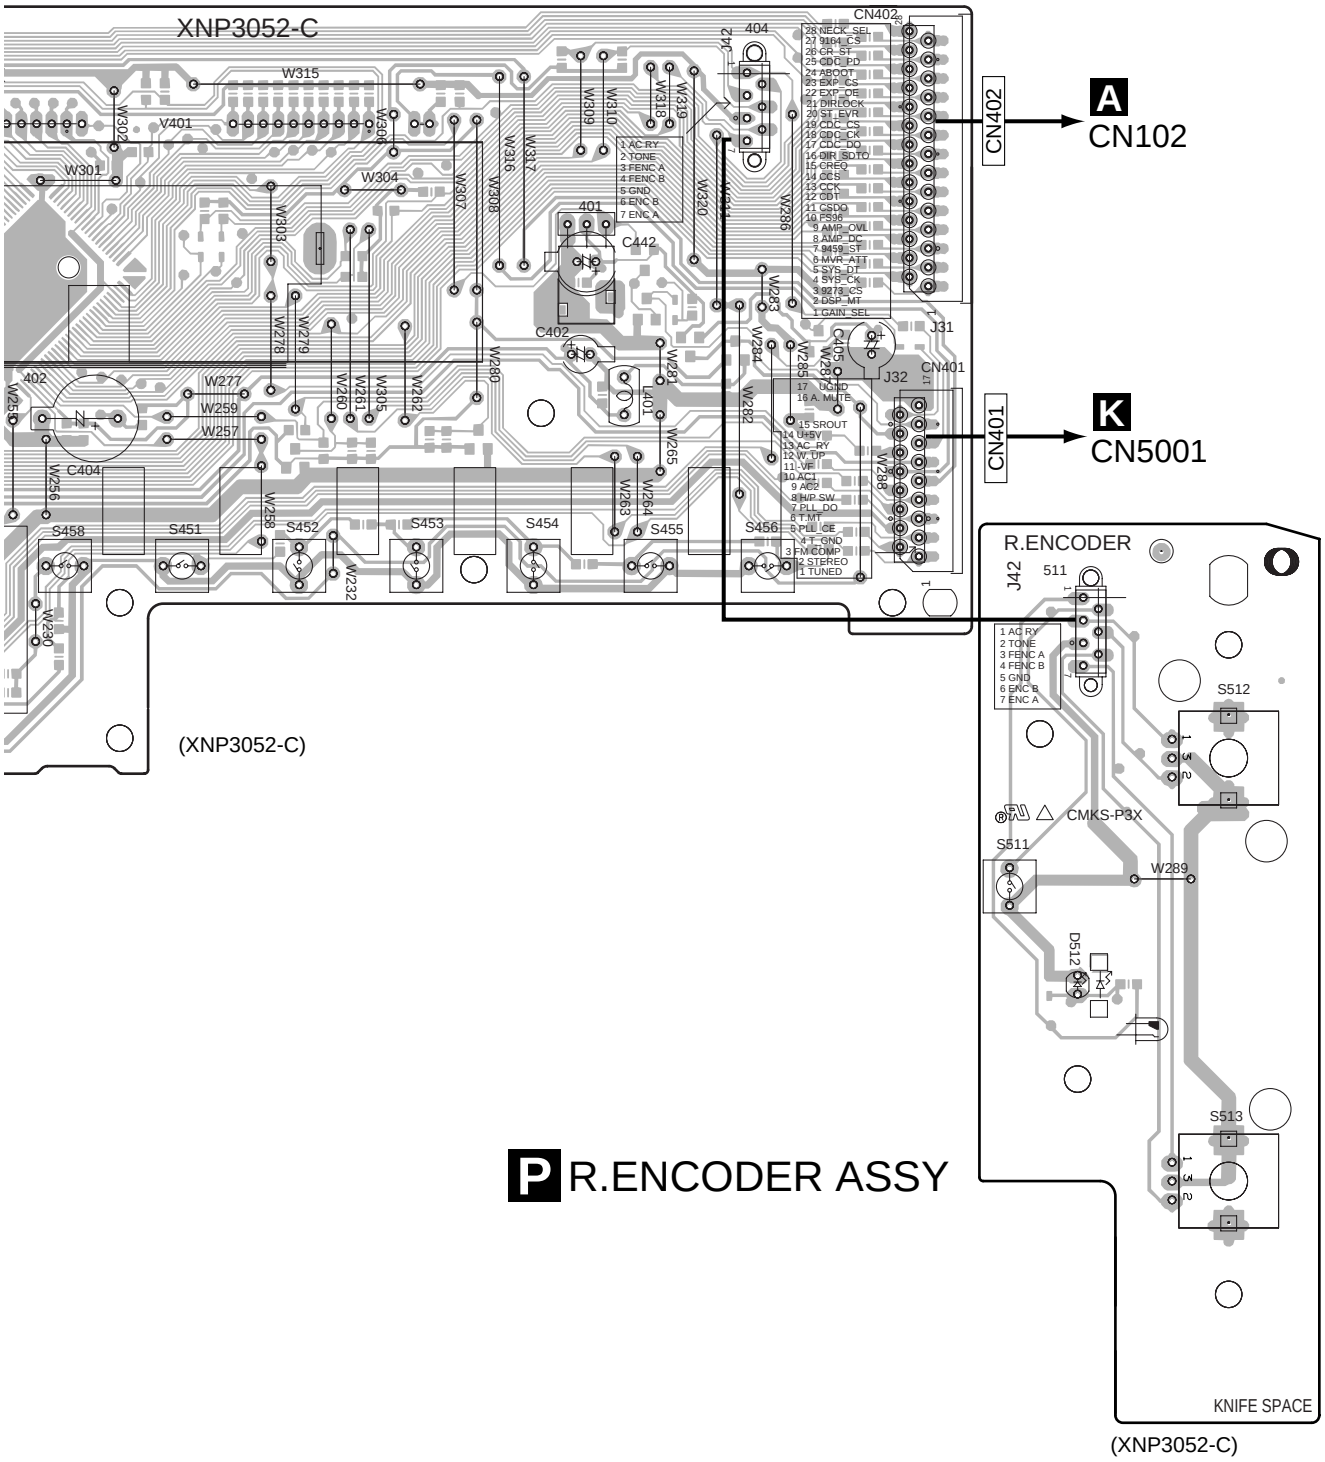

P R.ENCODER ASSY

SIDE B

O FRONT ASSY

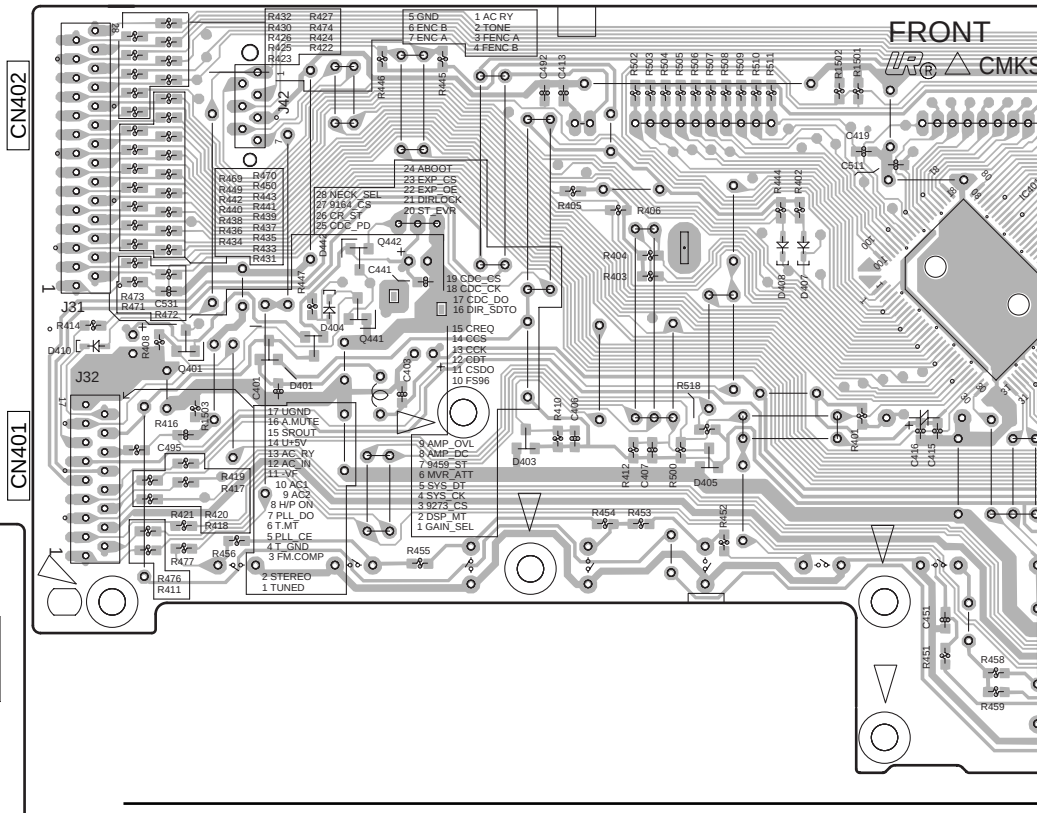

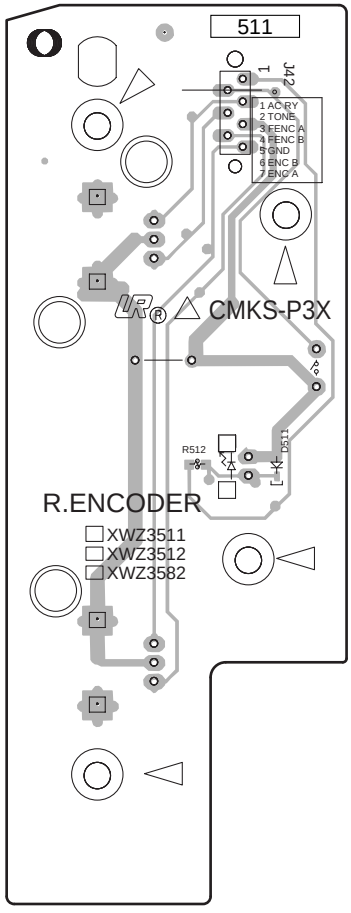

(XNP3052-C)

P R.ENCODER ASSY

O P

SIDE B

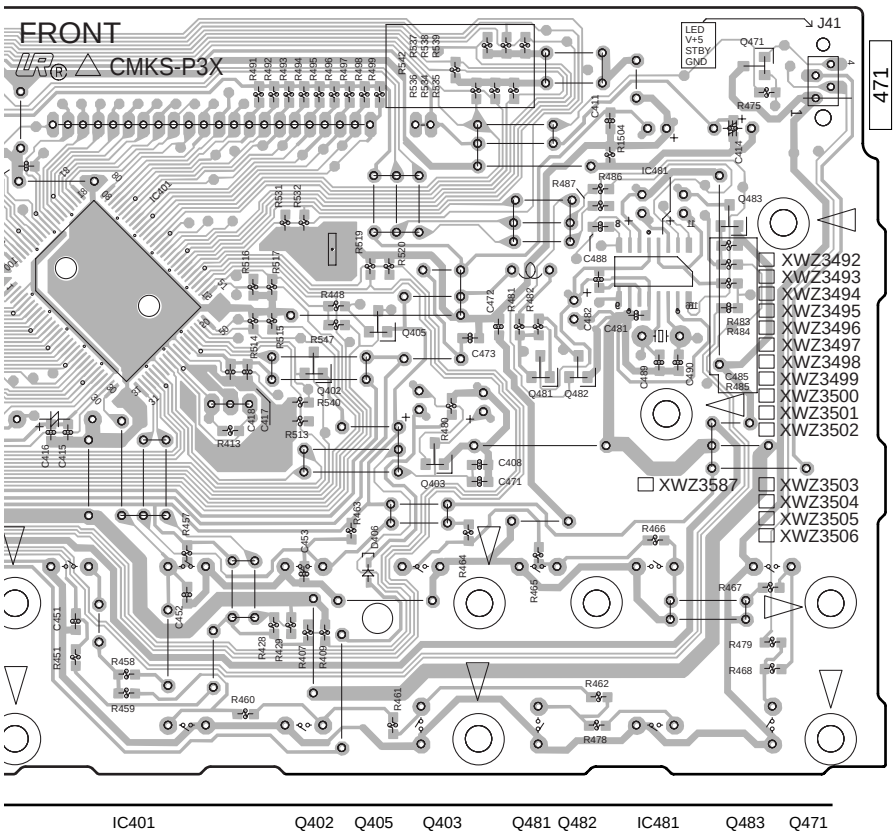

(XNP3052-C)

U H.P ASSY

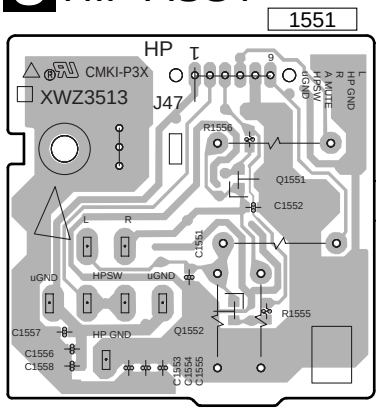

(XNP3052-C)

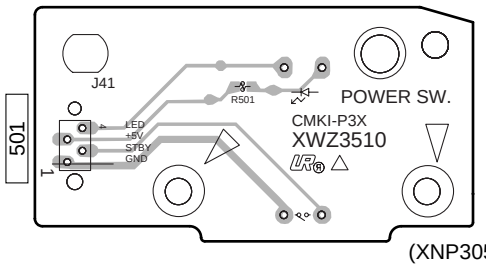

(XNP3052-C)

Q POWER SW ASSY

4.5 REGULATOR, HASHIGETA and KAWA ASSYS

SIDE A

S

F HASHIGETA ASSY

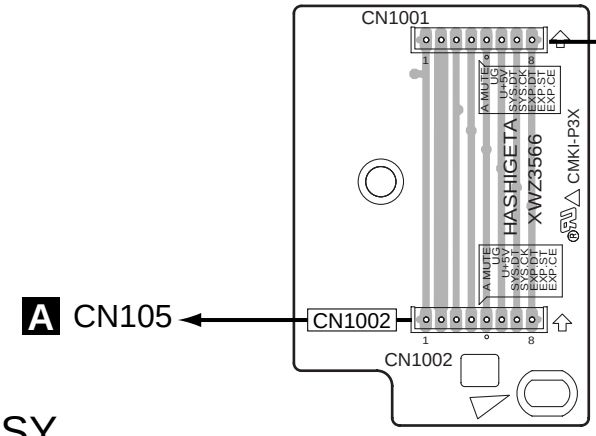

A CN105

E REGULATOR ASSY

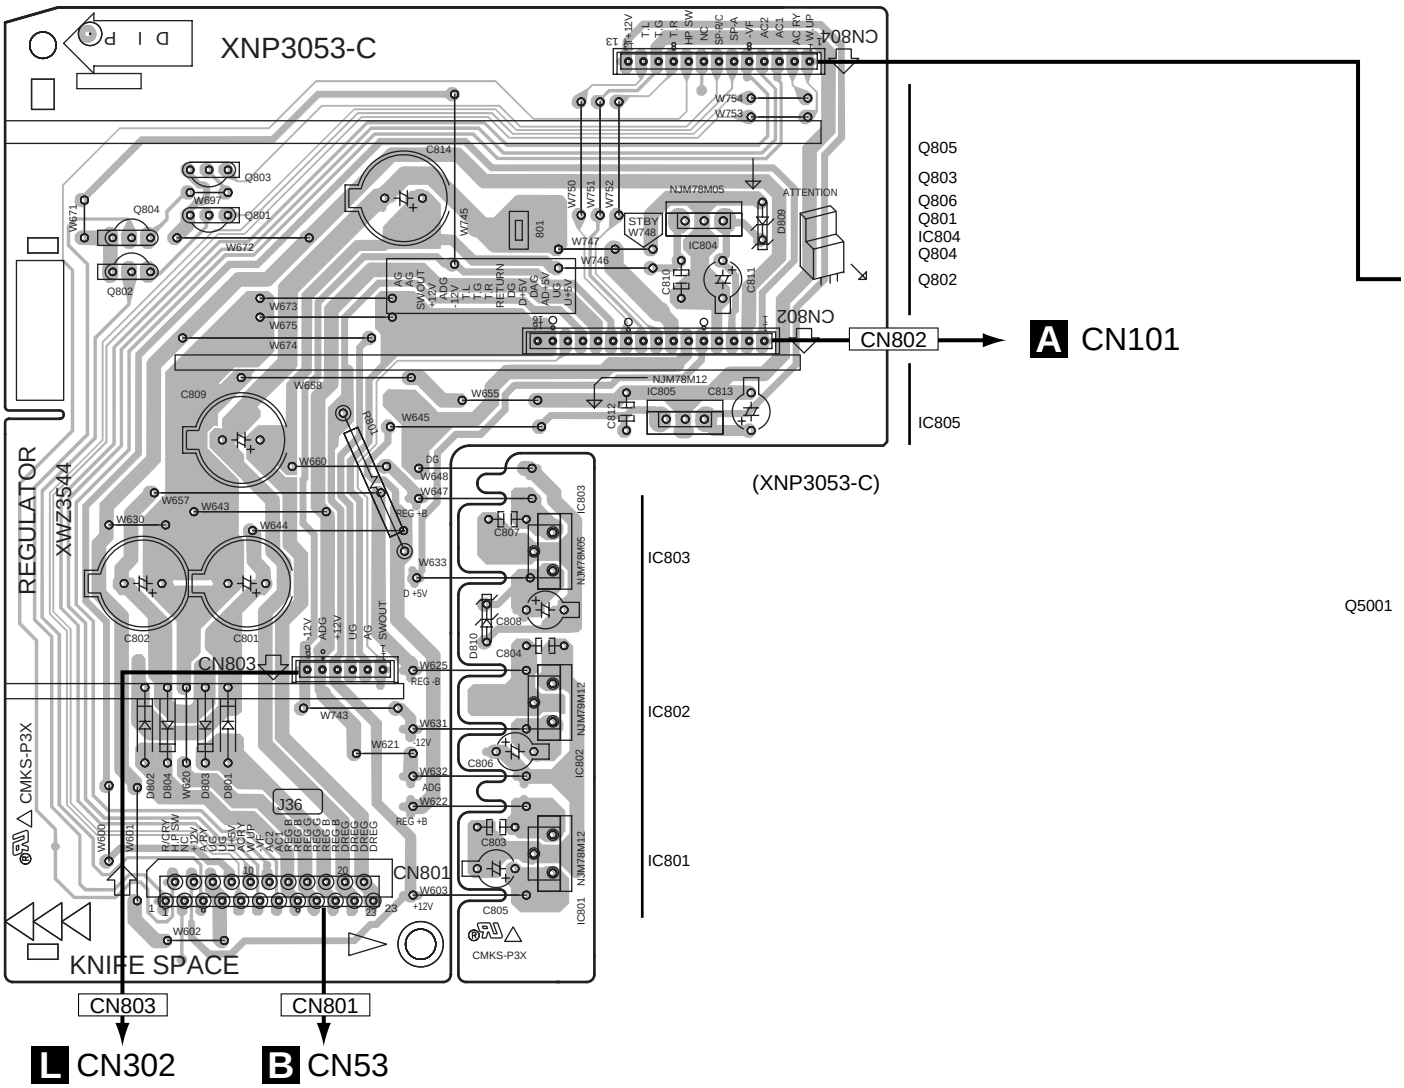

E F

SIDE A **SIDE B**

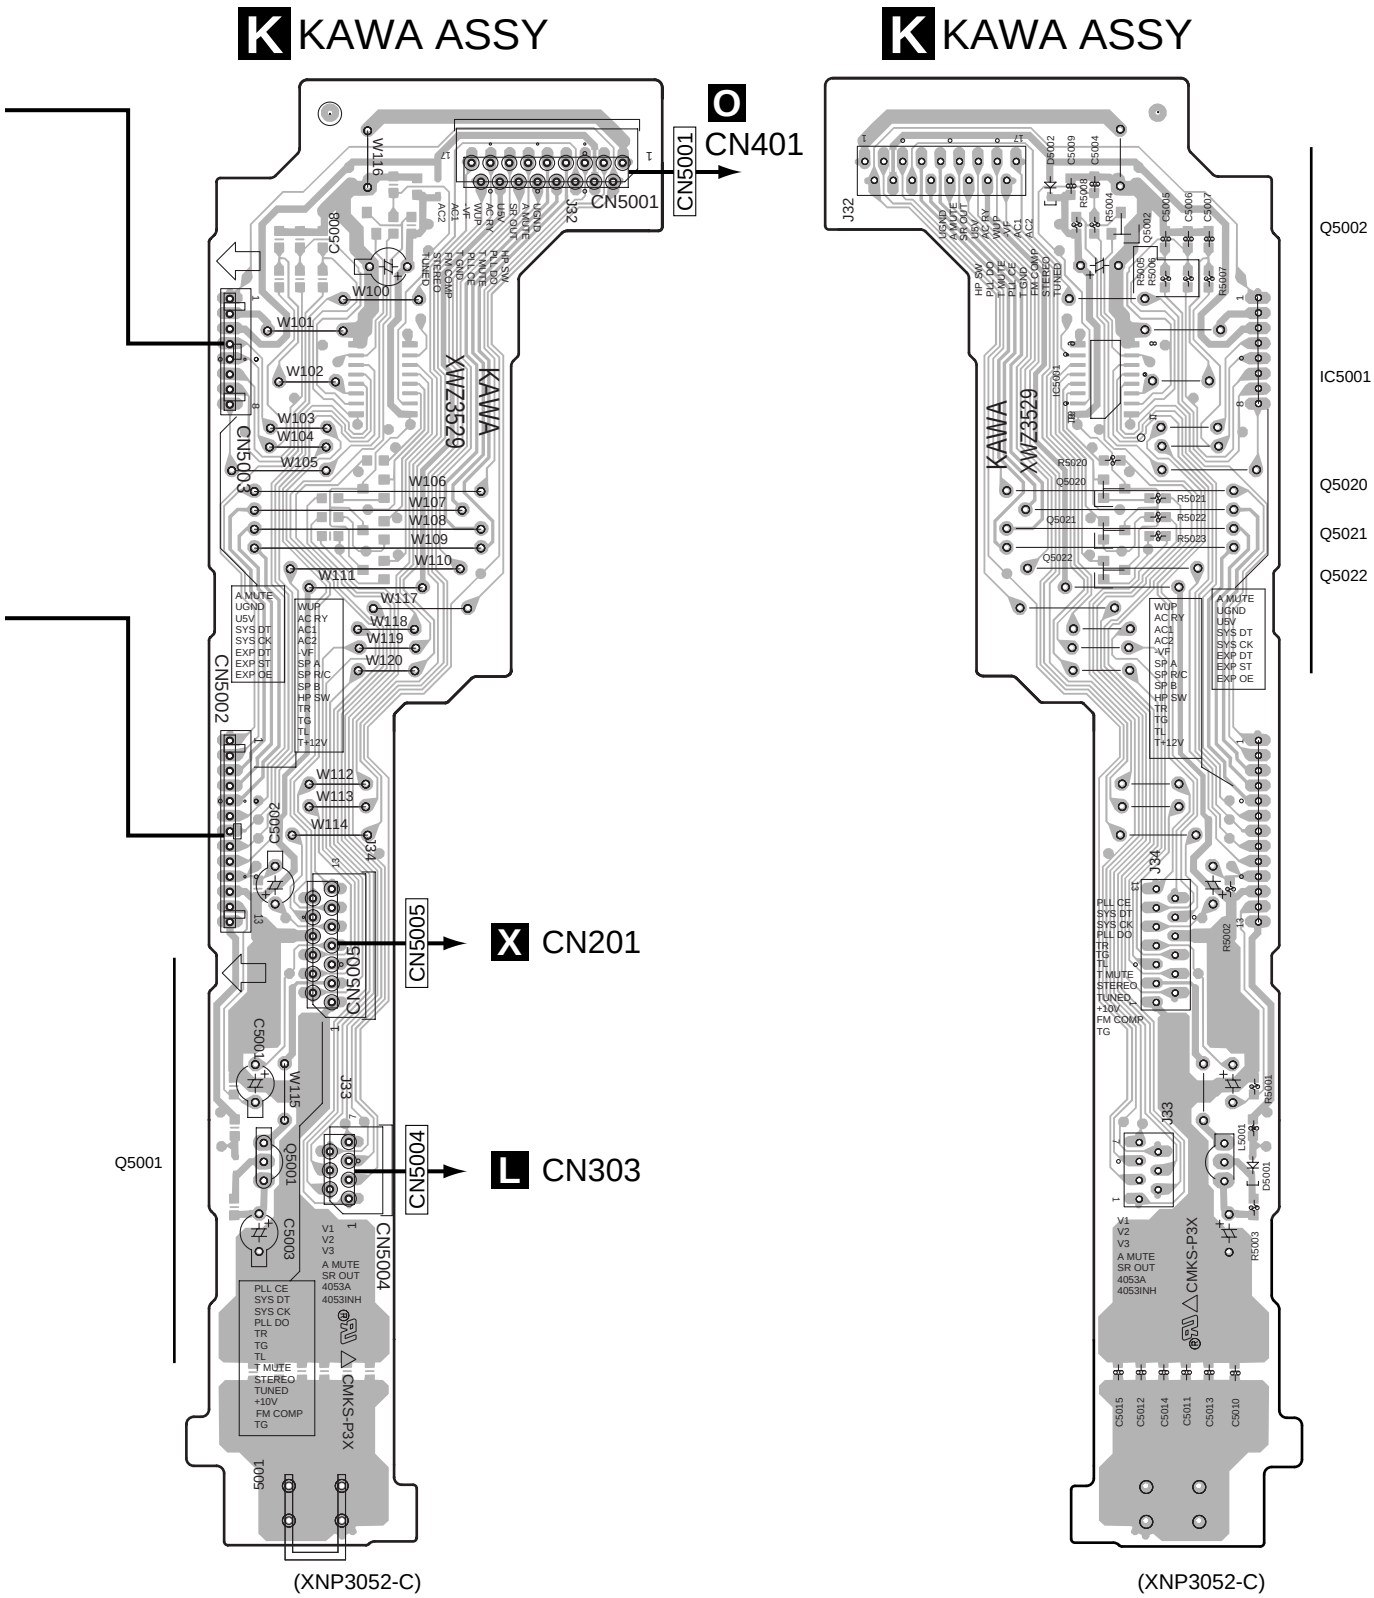
K KAWA ASSY
K KAWA ASSY
O
CN401
CN5001
CN5001
CN5003
CN5002
CN5005
X
CN201
CN5004
L
CN303
Q5001
KAWA
XWZ3529
CMKS-P3X
(XNP3052-C)
(XNP3052-C)
Q5002
IC5001
Q5020
Q5021
Q5022

4.6 DIGITAL IN, 6CH IN and VIDEO ASSYS

SIDE A

J DIGITAL IN ASSY

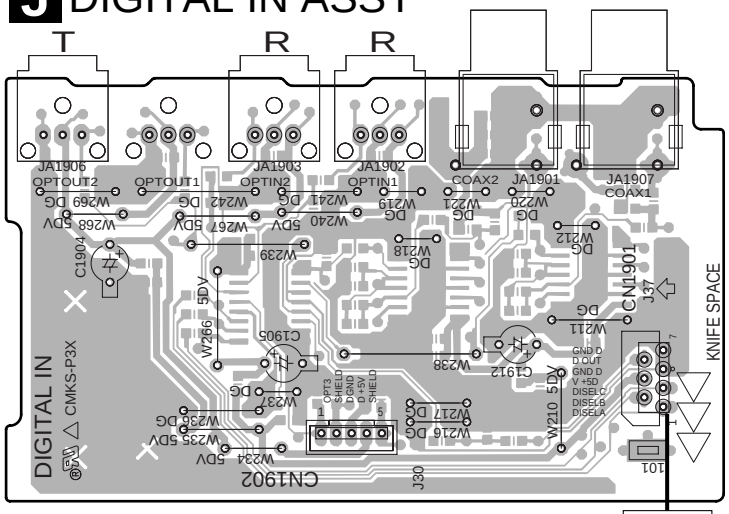

(XNP3052-C)

CN1901

A CN9101

M 6CH IN ASSY

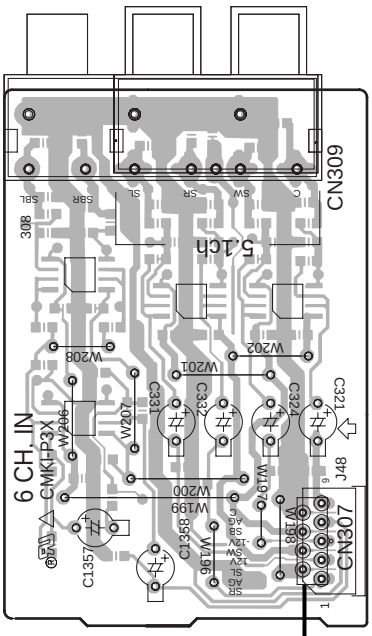

(XNP3052-C)

CN307

A CN104

L VIDEO ASSY

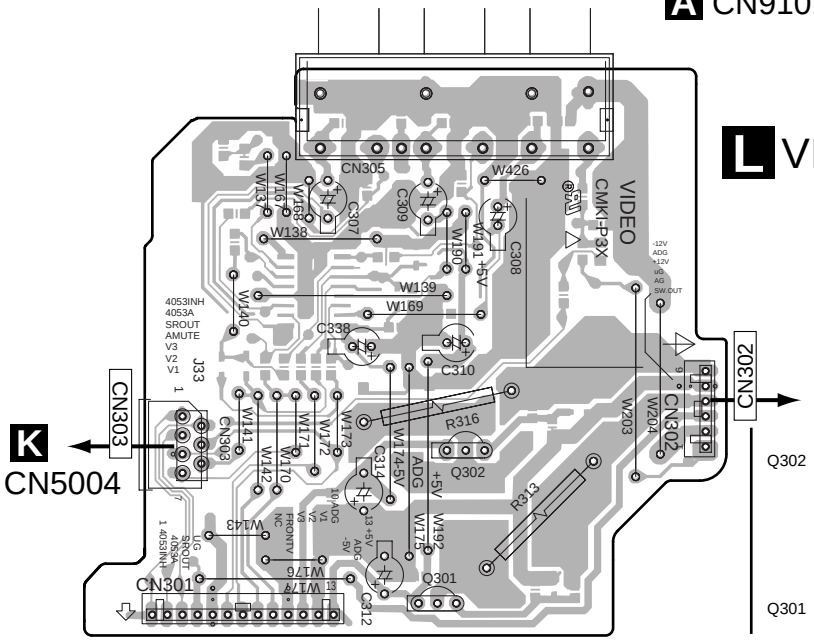

K CN5004

CN303

E CN803

CN302

(XNP3052-C)

J L M

SIDE B

M 6CH IN ASSY

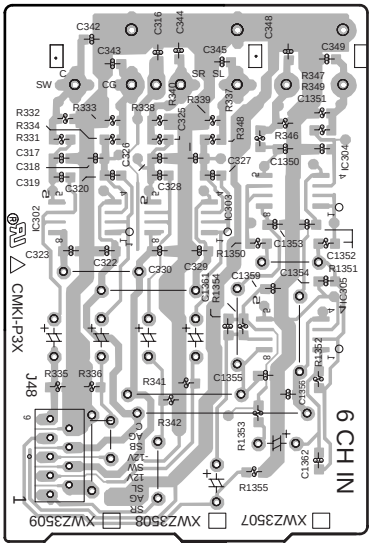

(XNP3052-C)

J DIGITAL IN ASSY

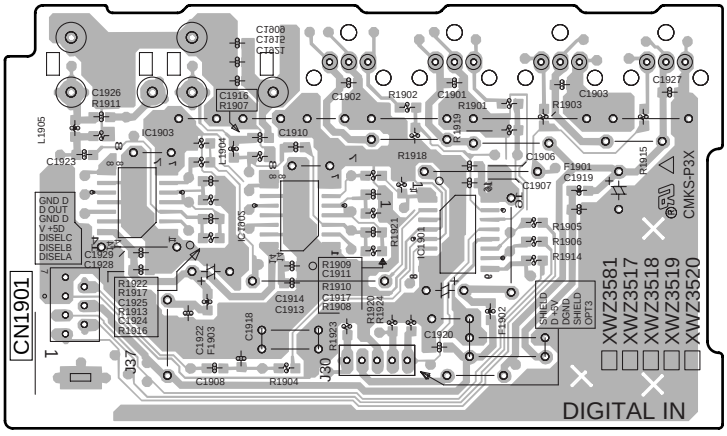

(XNP3052-C)

L VIDEO ASSY

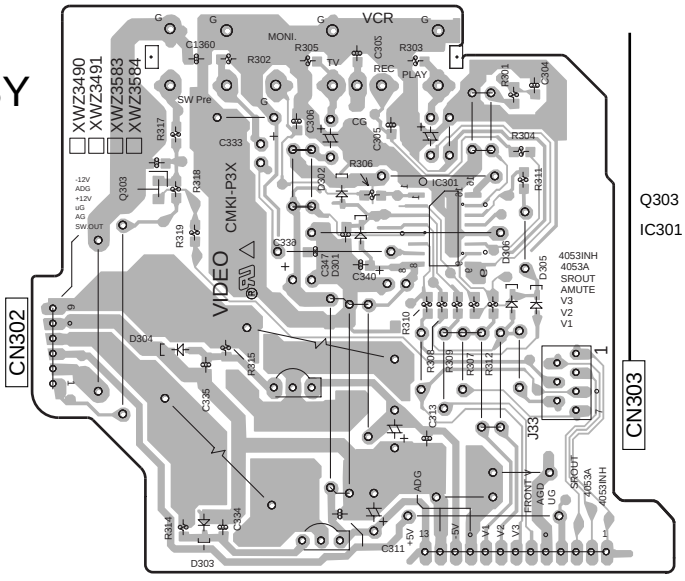

(XNP3052-C)

4.7 FM/AM TUNER MODULE

SIDE B **SIDE A**

X FM/AM TUNER MODULE

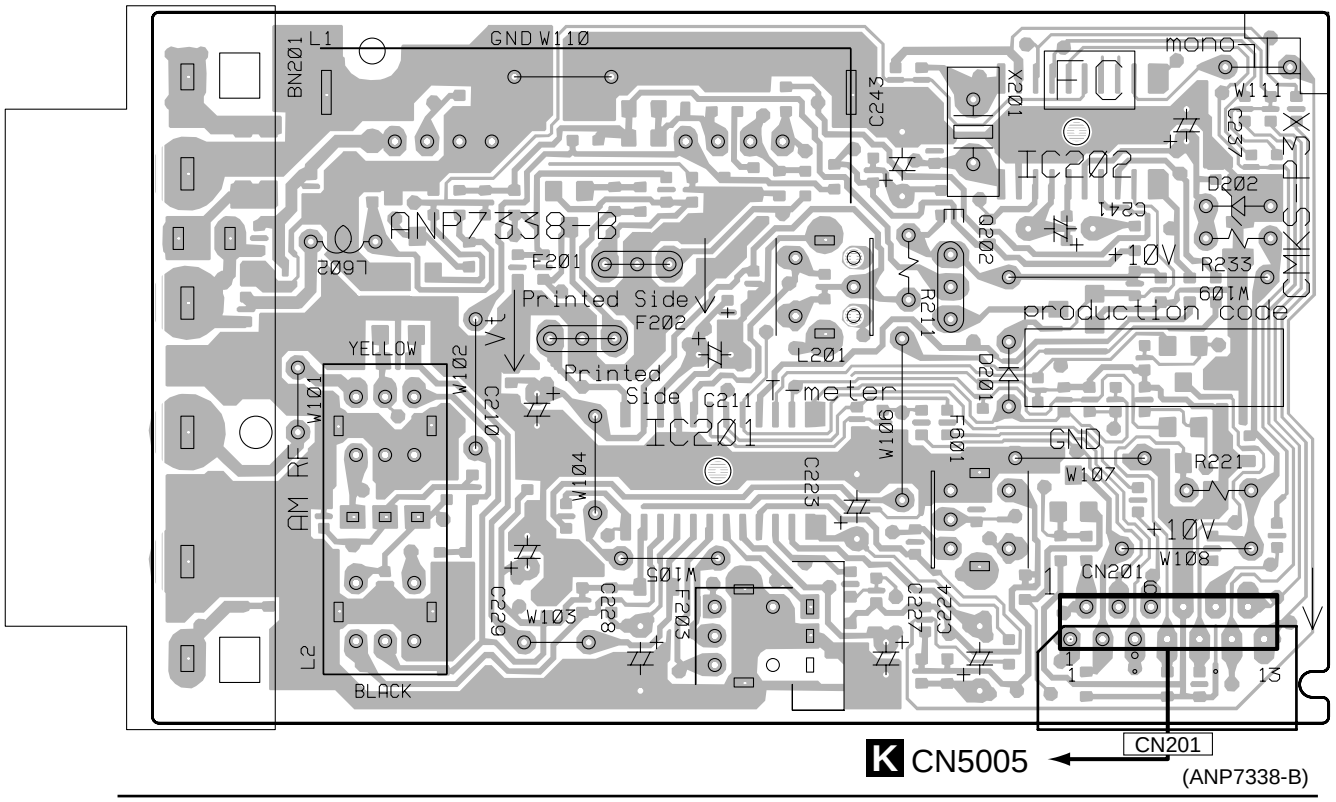

Q202

X FM/AM TUNER MODULE

SIDE B

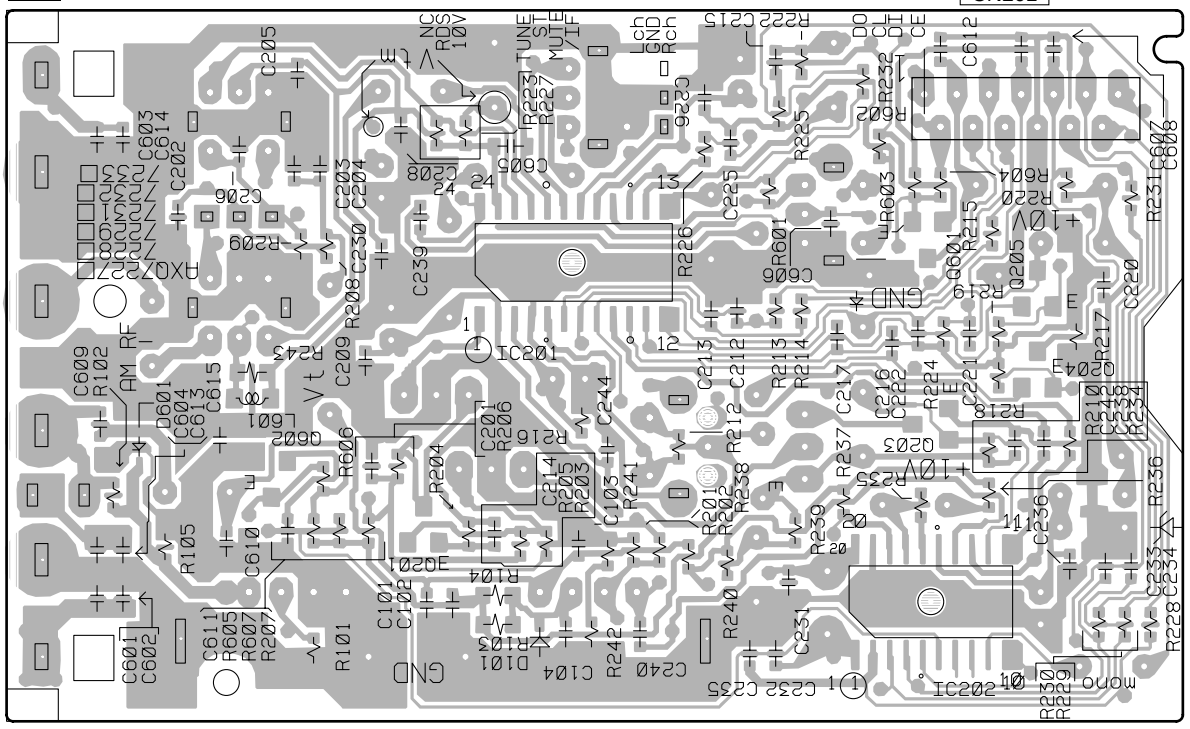

Q201 IC201 Q203 IC202 Q205 Q204

X X

5. PCB PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω	→ *56 x 10¹* →	*561*	*RD1/4PU 5 6 1 J*
47k Ω	→ *47 x 10³* →	*473*	*RD1/4PU 4 7 3 J*
0.5 Ω	→ *R50*		*RN2H R 5 0 K*
1 Ω	→ *1R0*		*RS1P 1 R 0 K*

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω	→ *562 x 10¹* →	*5621*	*RN1/4PC 5 6 2 1 F*

Mark	No.	Description	Part No.
LIST OF ASSEMBLIES			
	1	D.D & INPUT ASSY	XWX3044
NSP	1	AMP & PS ASSY	XWK3113
	2	AMP & PRIMARY ASSY	XWZ3533
	2	REGULATOR ASSY	XWZ3544
	2	AMP INPUT ASSY	XWZ3547
NSP	2	TRANS1 ASSY	XWZ3552
	2	TRANS2 ASSY	XWZ3555
NSP	2	TRANS3 ASSY	XWZ3560
	2	HASHIGETA ASSY	XWZ3566
	2	HOLDER	XWZ3572
NSP	1	COMPLEX ASSY	XWK3107
	2	FRONT ASSY	XWZ3493
	2	6CH IN ASSY	XWZ3507
	2	POWER SW ASSY	XWZ3510
	2	H.P. ASSY	XWZ3513
	2	DIGITAL IN ASSY	XWZ3747
	2	KAWA ASSY	XWZ3529
	2	R. ENCODER ASSY	XWZ3511
	2	VIDEO ASSY	XWZ3490
	2	MECHA SW ASSY	XWZ3514
	1	FM/AM TUNER MODULE	AXQ7232

Mark	No.	Description	Part No.
COMPLEX ASSY			
OTHERS			
	J 41	(JUMPER WIRED)	D15A04-100-2651
	J 42	(JUMPER WIRED)	D15A07-075-2651
	J 47	(JUMPER WIRED)	D20PYY0630E
AMP & PS ASSY			
OTHERS			
	J 701	(AWG14 BOARD IN)	DB812NBO
	J 21	(JUMPER WIRED)	D20PYY0715E
A D.D & INPUT ASSY			
SEMICONDUCTORS			
	IC9101		AK4586VQ
	IC301		BU4094BCF
	IC9501		CS493292
	IC103		M62446FP
	IC9201		NJM2100M
	IC9812		NJM2391DL1-25
	IC9811		NJM2391DL1-33
	IC102		NJU7312AM

Mark	No.	Description	Part No.
	IC9601		NJU7313AM
	IC9504		PD8097A
	IC9505		TC74LVX244FT
	IC9502, IC9503		TC74VHC574F
	IC9506		TC74VHCT244AFT
	IC9507		TC7WU04FU
	IC101		TC9273F-007
	IC104-IC107, IC9701-IC9705, IC9707		UPC4570G2
	Q107-Q112, Q9201, Q9202		2SC3326
	Q9101, Q9204, Q9607, Q9609, Q9610		DTA124EK
	Q9102, Q9203, Q9608		DTC124EK
	D9601, D9602		1SS181
	D105, D106, D301, D9921		1SS355
	D107, D108		DAN217
	D201, D202		RB501V-40
	D104		UDZS5.1B
	D101, D102		UDZS6.8B
COILS AND FILTERS			
	L9101, L9501, L9504, L9811, L9812		ATL7002
	L111-L114, L1601, L1602		QTL1013
	L9102, L9103, L9502, L9503		QTL1013
	L9506, L9507		QTL1013
CAPACITORS			
	C9510, C9511		CCSRCH100D50
	C101-C114, C121-C123		CCSRCH101J50
	C126-C128, C152-C154		CCSRCH101J50
	C207, C208, C221, C222		CCSRCH101J50
	C228, C229, C9160, C9201, C9202		CCSRCH101J50
	C9101, C9102		CCSRCH220J50
	C235, C9117		CCSRCH221J50
	C9509		CCSRCH271J50
	C9530, C9731, C9735		CCSRCH331J50
	C9103, C9110, C9111, C9114, C9503		CCSRCH471J50
	C9505, C9507, C9513, C9515, C9518		CCSRCH471J50
	C9520, C9522, C9525, C9528, C9571		CCSRCH471J50
	C9611-C9614, C9625, C9639, C9729		CCSRCH471J50
	C9815, C9816		CCSRCH471J50
	C9707, C9708, C9721, C9722		CCSRCH820J50
	C130-C137, C146-C151, C305		CEAT100M50
	C9207, C9208, C9523, C9526		CEAT100M50
	C9105, C9106, C9108, C9116, C9516		CEAT101M10
	C9551, C9792, C9812, C9814		CEAT101M10
	C9740		CEAT220M25
	C9205		CEAT221M6R3
	C9112, C9529, C9769, C9770		CEAT2R2M50

Mark	No.	Description	Part No.
	C9713, C9714, C9727, C9728, C9739		CEAT330M25
	C9765-C9768		CEAT330M25
	C144, C145		CEAT3R3M50
	C117, C118, C225, C226		CEAT470M50
	C232, C233, C239		CEAT470M50
	C155, C156		CEAT471M10
	C115, C116, C234, C240		CEAT4R7M50
	C9203, C9204, C9615-C9618, C9811		CEAT4R7M50
	C9813		CEAT4R7M50
	C271, C9703, C9704, C9717, C9718		CKSRYB102K50
	C119, C120, C124, C125, C138		CKSRYB103K50
	C141, C171, C172, C179, C180		CKSRYB103K50
	C183, C199, C223, C224		CKSRYB103K50
	C230, C231, C237, C238, C304		CKSRYB103K50
	C9104, C9107, C9109, C9121, C9209		CKSRYB103K50
	C9502, C9504, C9506, C9508, C9512		CKSRYB103K50
	C9514, C9517, C9519, C9521, C9524		CKSRYB103K50
	C9527, C9531, C9584, C9636, C9637		CKSRYB103K50
	C9709-C9712, C9723-C9726		CKSRYB103K50
	C9737, C9738, C9817		CKSRYB103K50
	C140, C143, C1631, C1632		CKSRYB104K16
	C173, C174, C9113, C9115, C9126		CKSRYB104K16
	C9206, C9818		CKSRYB104K16
	C9701, C9702, C9715, C9716		CKSRYB222K50
	C9736		CKSRYB223K25
	C139, C142, C9626		CKSRYB223K50
	C236		CKSRYB472K50
	C184, C185, C9732		CKSRYB473K25
	C227, C9730		CKSRYF104Z25

RESISTORS

	R9104	RS1/16S1802F
⚠	R174, R175	RS1LMF101J
	Other Resistors	RS1/16S###J

OTHERS

	CN9101 7P FFC CONNECTOR	52044-0745
	CN104 9P FFC CONNECTOR	52044-0945
	CN106 19P FFC CONNECTOR	52045-1945
	CN102 28P FFC CONNECTOR	52045-2845
	JA103, JA104 4P PIN JACK	AKB7048
	JA105 6P PIN JACK	AKB7050
	CN101 16P SOCKET	KP200TA16L
	CN105 8P SOCKET	KP200TA8L
	X9501 (CRYSTAL RES. 27.0MHz)	VSS1086
	X9101 (CRYSTAL RES. 12.3MHz)	VSS1140

B AMP & PRIMARY ASSY

SEMICONDUCTORS

⚠	IC603(1A)	AEK7009
⚠	IC701, IC702(125mA)	AEK7020
⚠	IC604-IC607(10A)	AEK7022
⚠	IC52(500mA)	AEK7005
	IC51	NJM78M56FA
⚠	IC601	PAC010A
⚠	IC602	PAC011A
	Q703	2SA1145
	Q702	2SB1238X
	Q691, Q692	2SC1740S
	Q704	2SC1845
	Q605, Q606, Q633, Q655, Q656	2SC2240
	Q601-Q604, Q631, Q632	2SC2878
	Q651-Q654	2SC2878
	Q701	2SD1859X
	Q51	KRC101M
	D56, D601-D604, D631, D632	1SS133
	D57, D651-D654, D752, D756	1SS133
	D751, D755	1SS133
⚠	D701, D702	D5SBA20(B)
	D605, D606, D633, D634	MTZJ8.2A
	D711	MTZJ22D
	D58	MTZJ5.1A
	D712	MTZJ5.1B
⚠	D51-D55, D721-D724	S5688G

COILS AND FILTERS

⚠	L51 (0.3mH/270V)	ATF7018
	L751-L753, L761, L762(0.7uH)	ATH1004

SWITCHES AND RELAYS

	RY751-RY753	XSR3002
⚠	RY51	XSR3003

CAPACITORS

	C707, C708(0.01uF/150V)	ACG1005
⚠	C51, C52(0.01uF/250V)	ACG7020
	C703, C704(3300uF/42V)	ACH7135
	C701, C702(4700uF/63V)	ACH7134
	C607-C610, C634, C635	CCPUCH6R8K50
	C657-C660	CCPUCH6R8K50
	C615, C616, C638, C665, C666	CEANP2R2M50
	C775, C776	CEANP470M50
	C705, C706	CEAT100M2A
	C712	CEAT101M10
	C611, C612, C636, C661, C662	CEAT101M16
	C711	CEAT101M35
	C53	CEAT102M16
	C692	CEAT221M10
	C54	CEAT470M25
	C605, C606, C633, C655, C656	CEAT4R7M50
	C751-C756, C761-C764	CFTYA224J50
	C613, C614, C637, C663, C664	CKPUYB101K50
	C601, C602, C631, C651, C652	CKPUYB102K50
	C691, C769, C770	CKPUYB102K50
	C603, C604, C632, C653, C654	CKPUYB331K50
	C55-C57	CKPUYF103Z25
	C757-C759, C765, C766	CQMBA472J50

RESISTORS

⚠	R52	RD1/2PM270J
⚠	R751, R752, R755, R761, R762	RD1/4PUF101J
⚠	R753, R754, R756, R763, R764	RS1LMF4R7J
⚠	R711	RS2LMF332J
⚠	R615, R616, R638, R665, R666(0.22)	XCN3001
	Other Resistors	RD1/4PU###J

OTHERS

	CN53(23P FFC CONNECTOR)	52045-2345
	CN702(6P CONNECTOR)	52147-0610
	52 3P CABLE HOLDER	51048-0300
	H53, H54 , H701, H702(FUSE CLIP)	AKR7001
⚠	T51(SUB TRANS FORMER)	ATT7037
	CN601(16P PLUG)	KM200TA16
	CN51(AC INLET)	RKP1751

Mark	No.	Description	Part No.
		KN51,KN601 (EARTH METAL FITTING)	VNF1084
		CN752(4P SPEAKER TERMINAL)	XKE3011
		CN751(6P SPEAKER TERMINAL)	XKE3013
		701 7P CABLE HOLDER	XKP3047
		J21 20P JUMPER WIRE	D20PYY0715E
		J6 JUMPER WIRE	DB215NB0

C TRANS 2 ASSY

SEMICONDUCTORS

⚠	IC851-IC853(1.6A/125V)	AEK7012

OTHERS

	851	XKP3047

D TRANS 3 ASSY

TRANS3 ASSY has no service part.

E REGULATOR ASSY

SEMICONDUCTORS

	IC803, IC804	NJM78M05FA
	IC801, IC805	NJM78M12FA
	IC802	NJM79M12FA
	Q801, Q803	KRA103M
	Q802, Q804	KRC102M
	D809, D810	MTZJ6.2A
⚠	D801-D804	S5688G

CAPACITORS

	C808, C811	CEAT101M10
	C805, C806, C813	CEAT101M16
	C801, C802	CEAT222M25
	C809	CEAT332M16
	C803, C804, C807, C810, C812	CKPUYF103Z25

OTHERS

	CN801(23P CONNECTOR)	52045-2345
	CN804 (13P PLUG)	KM200TA13
	CN802 (16P PLUG)	KM200TA16
	CN803 (6P PLUG)	KM200TA6

F HASHICETA ASSY

OTHERS

	CN1001, CN1002(8P PLUG)	KM200TA8

H AMP INPUT ASSY

OTHERS

	CN254 (19P FFC SOCKET)	52044-1945
	CN253 (16P SOCKET)	KP200TA16L

I TRANS1 ASSY

TRANS1 ASSY has no service part.

J DIGITAL IN ASSY

SEMICONDUCTORS

	IC1901	TC74ACT151F
	IC1902	TC74HCU04AF

COILS AND FILTERS

	F1901-F1903(BK2125HS601)	DTF1067
	L1904, L1905	QTL1013

Mark	No.	Description	Part No.

CAPACITORS

	C1918	CCSRCH221J50
	C1907, C1914, C1928	CCSRCH271J50
	C1925	CCSRCH470J50
	C1916, C1926	CCSRCH471J50
	C1904, C1905, C1912	CEAT101M10
	C1915	CKSRYB102K50
	C1906, C1919, C1920, C1923, C1929	CKSRYB103K50
	C1910, C1913	CKSRYB103K50
	C1902, C1908, C1909, C1921, C1922	CKSRYB104K25
	C1903	CKSRYB104K25

RESISTORS

	Other Resistors	RS1/16S###J

OTHERS

	CN1901(7P FFC CONNECTOR)	52045-0745
	JA1902 (OPTICAL LINK IN)	JFJ4000-010020
	1904 (Label)	XAL3193
	JA1901,JA1907(1P PIN JACK)	VKB1077

K KAWA ASSY

SEMICONDUCTORS

	IC5001	BU4094BCF
	Q5001	2SC1740S
	Q5020-Q5022	DTC114TK
	Q5002	DTC143EK
	D5001, D5002	1SS355

COILS AND FILTERS

	L5001	QTL1013

CAPACITORS

	C5004-C5007	CCSRCH101J50
	C5012	CCSRCH471J50
	C5001, C5002	CEAT100M50
	C5003	CEAT101M16
	C5009	CKSRYB103K50
	C5011	CKSRYB104K16
	C5010	CKSRYF105Z10

RESISTORS

	All Resistors	RS1/16S###J

OTHERS

	CN5004 (7P FFC CONNECTOR)	52044-0745
	CN5005 (13P FFC CONNECTOR)	52044-1345
	CN5001 (17P FFC CONNECTOR)	52044-1745
	CN5002 (13P SOCKET)	KP200TA13L
	CN5003 (8P SOCKET)	KP200TA8L
	5001 (SCREW TERMINAL)	VNE1948

L VIDEO ASSY

SEMICONDUCTORS

	IC301	NJM2296M
	Q302	2SA1515
	Q303	2SC3326
	Q301	2SC3377
	D301, D302, D305, D306	1SS355
	D303, D304	UDZS6.2B

CAPACITORS

	C347	CCSRCH470J50

Mark	No.	Description	Part No.
	C307-C310, C312, C314, C338		CEAT470M25
	C1360, C302		CKSRYB103K50
	C339, C340		CKSRYB104K25
	C304-C306		CKSRYB221K50
	C333		CKSRYB331K50
	C311, C313		CKSRYB473K25

RESISTORS

⚠	R313, R316	RS3LMF560J
	Other Resistors	RS1/16S###J

OTHERS

	CN303 (7P CONNECTOR)	52044-0745
	CN305 (6P PIN JACK)	AKB7123
	CN301 (13P SOCKET)	KP200TA13L
	CN302 (6P SOCKET)	KP200TA6L

M 6CH IN ASSY

SEMICONDUCTORS

	IC302, IC303	NJM4558MD

CAPACITORS

	C319, C320, C327, C328	CCSRCH101J50
	C342-C345	CCSRCH101J50
	C321, C324, C331, C332	CEAT4R7M50
	C316, C322, C323, C329, C330	CKSRYB103K50
	C317, C318, C325, C326	CKSRYB221K50

RESISTORS

	All Resistors	RS1/16S###J

OTHERS

	CN307 (9P CONNECTOR)	52044-0945
	CN309 (6P PIN JACK)	AKB7087

O FRONT ASSY

SEMICONDUCTORS

	IC401	PDG268B
	IC481	BU1923F
	Q401, Q402, Q442, Q471	DTA124EK
	Q403, Q441, Q482	DTC143EK
	Q481	2SA1037K
	Q483	2SC3326
	D406, D410, D442	1SS355
	D403, D405	DAN217
	D401, D404	DAP202K
	D407, D408	RB501V-40

COILS AND FILTERS

	L401, L481	LFEA2R2J

SWITCHES AND RELAYS

	S451-S468, S476	ASG1051

CAPACITORS

	C420 (220uF/35V)	ACH7101
	C404 (0.047F/5.5V)	ACH7132
	C511	CCSRCH471J50
	C488	CCSRCH561J50
	C489, C490	CCSRCH270J50
	C442	CEAL470M10
	C402	CEAT221M6R3
	C483	CEAT101M10
	C486	CEAT1R0M50
	C409, C410, C484	CEAT2R2M50
	C412	CEAT470M50
	C405	CEAT471M6R3
	C451-C453, C472, C492, C495	CKSRYB102K50
	C481, C482	CKSRYB102K50
	C401, C403, C411, C419, C441	CKSRYB103K50
	C531	CKSRYB103K50
	C408, C416, C418, C471	CKSRYB104K16
	C485	CKSRYB472K50
	C406, C407	CKSRYB473K16

RESISTORS

	All Resistors	RS1/16S###J

OTHERS

	471 (4P CABLE HOLDER)	51063-0405
	404 (7P CABLE HOLDER)	51063-0705
	CN401 (17P FFC CONNCTOR)	52044-1745
	CN402 (28P FFC CONNCTOR)	52044-2845
	V401 (FL TUBE)	XAV3013
	401 (REMOTE CONTROL UNIT)	GP1U27X
	J41 (4P JUMPER WIRE)	D15A04-100-2651
	J42 (7P JUMPER WIRE)	D15A07-075-2651
	X401 CERAMIC RESO.(7.2MHz)	ASS7039
	X481 CERAMIC RESO.(4.3MHz)	ASS7004

P R.ENCODER ASSY

SWITCHES AND RELAYS

	S511	ASG1051
	S513 (ROTARY ENCODER)	XSX3005
	S512 (ROTARY ENCODER)	XSX3006

OTHERS

	511 (7P CABLE HOLDER)	51063-0705

Q POWER SW ASSY

SEMICONDUCTORS

	D501	BR3371XJ30A

SWITCHES AND RELAYS

	S501	ASG1051

RESISTORS

	All Resistors	RS1/16S###J

OTHERS

	501(CABLEB HOLDER 4P)	51063-0405

U H.P. ASSY

SEMICONDUCTORS

	Q1551, Q1552	2SC3326

CAPACITORS

	C1554, C1557	CCSRCH471J50
	C1553, C1556	CKSRYB103K50
	C1555, C1558	CKSRYB104K16
	C1551, C1552	CKSRYB223K50

RESISTORS

⚠	R1553, R1554	RS1LMF151J
⚠	R1551, R1552	RS2LMF331J
	Other Resistors	RS1/16S###J

Mark No.	Description	Part No.
OTHERS		
	1551 (6P CABLE HOLDER)	51048-0600
	JA1551 (HEADPHONE JACK)	RKB1014
	KN1551 (EARTH METAL FITTING)	VNF1084
	J47	D20PYY0630E

X FM/AM TUNER MODULE

SEMICONDUCTORS		
	IC201	BA1451F
	IC202	LC72131MD
	Q201, Q204, Q205	2SC2412K
	Q202	DTA124ES
	Q203	DTC124EK
	D201	1SS133
	D202	MTZJ5.1C
COILS AND FILTERS		
	L201 (FM DETECTOR COIL)	ATE7003
	F202 (CERAMIC FILTER)	ATF-107
	F201 (CERAMIC FILTER)	ATF-119
	F203 (AM CERAMIC FILTER)	ATF7026
	F601 (ANTIBIRDIE FILTER)	ATF7025
	L601 (TIP COIL)	LCTA270J2520
	L602 (INDUCTER)	LAU2R2J
CAPACITORS		
	C206	CCSRCH120J50
	C212, C213, C226, C233-C235	CCSRCH101J50
	C240	CCSRCH101J50
	C231, C232, C614	CCSRCH150J50
	C223	CEAT100M50
	C229	CEAT101M10
	C224	CEAT1R0M50
	C227	CEAT220M25
	C241	CEAT2R2M50
	C243	CEAT330M16
	C228	CEAT3R3M50
	C237	CEAT470M10
	C211	CEJQ1R0M50
	C210	CEJQ470M16
	C103, C104, C204, C238, C609	CKSRYB102K50
	C102, C208, C216, C220, C615	CKSRYB103K50
	C217, C239, C242, C604, C610	CKSRYB103K50
	C225	CKSRYB153K50
	C201, C205, C214, C230, C611	CKSRYB223K50
	C244, C236	CKSRYB223K50
	C221	CKSRYB224K10
	C202, C222	CKSRYB473K16
	C215	CKSRYB471K50
	C605	CCSQCH680J50
	C606	CKSRYB561K50
	C607, C608	CKSRYB182K50
RESISTORS		
	R211	RD1/4PU221J
	R221	RD1/4PU222J
	R233	RD1/4PU391J
	R243	RS1/10S0R0J
	R103	RS1/10S221J
	R104	RS1/10S221J
	Other Resistors	RS1/16S###J

Mark No.	Description	Part No.
OTHERS		
	CN201 (13P SOCKET)	52044-1345
	BN201 (2P ANTENNA TERM.)	AKA7002
	(SHIELD CASE T)	ANK7072
	(SHIELD CASE B)	ANK7073
	X201 (CRYSTAR RES.(7.2MHz)	ASS1093
	FM FRONT END	AXF7005
	AM RF TUNING BLOCK	AXX7072

Y MECHA SW ASSY

CAPACITORS		
	C591, C592	CKSRYB103K50
SWITCHES AND RELAYS		
	S591	ASG7014
OTHERS		
	CN591(3P JUMPER CONNCTOR)	52151-0310

6. ADJUSTMENT

■ AM Tuner Section

• There is no adjustment in the AM tuner.

■ FM Tuner Section

• Set the mode selector to FM BAND.
• Connect the wiring as shown in Fig. 1.

Step No.	Adjustment Title	ANT. Input level and signal condition			Adjustment	
		Frequency (MHz)	Modulation	Input Level (dBμV)	Adjust point	Contents
1	T-METER Adjustment	98	OFF	80	L201	Adjust L201 so that the DC voltage between Pin 21 and Pin 23 of IC201 (Test point Vtm) gets within 0 ± 50mV.

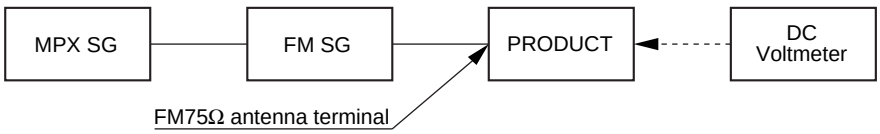

Fig.1 Adjustment Wiring Diagram

■ FM/AM TUNER MODULE

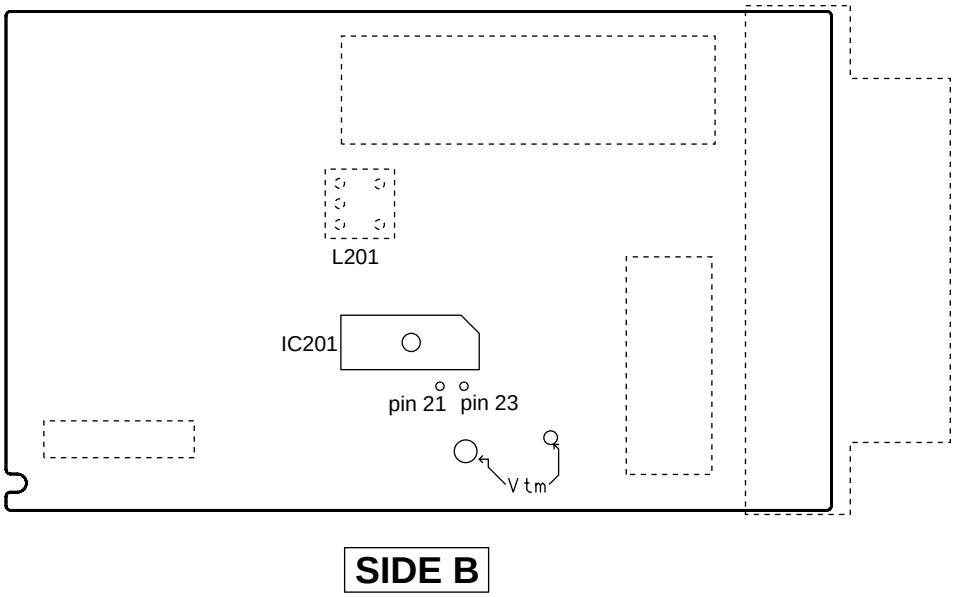

Fig.2 Adjustment Point

7. GENERAL INFORMATION

7.1 DISASSEMBLY and DIAGNOSIS

7.1.1 DISASSEMBLY and PCB LOCATION

Note : This photograph may show a different model, however, the method for disassembly is the same.

■ Diagnosis

① Remove the top cover (seven screws).

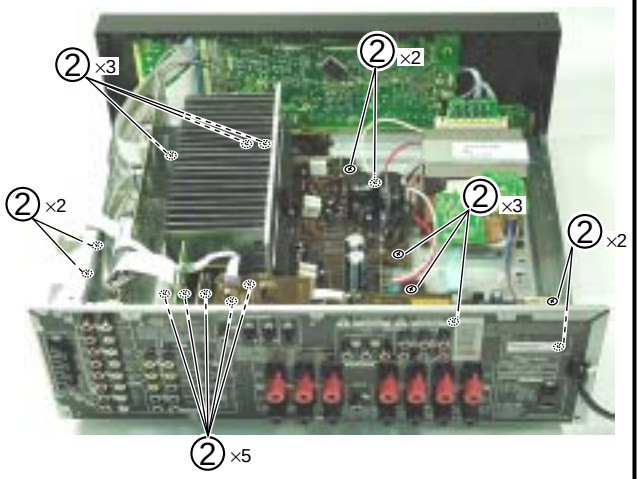

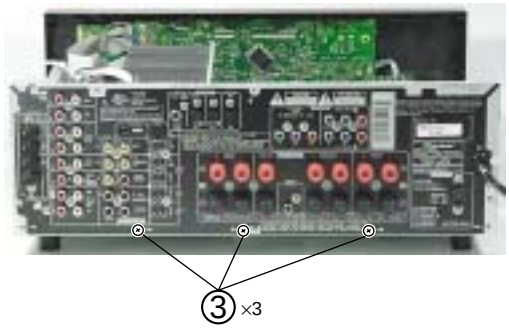

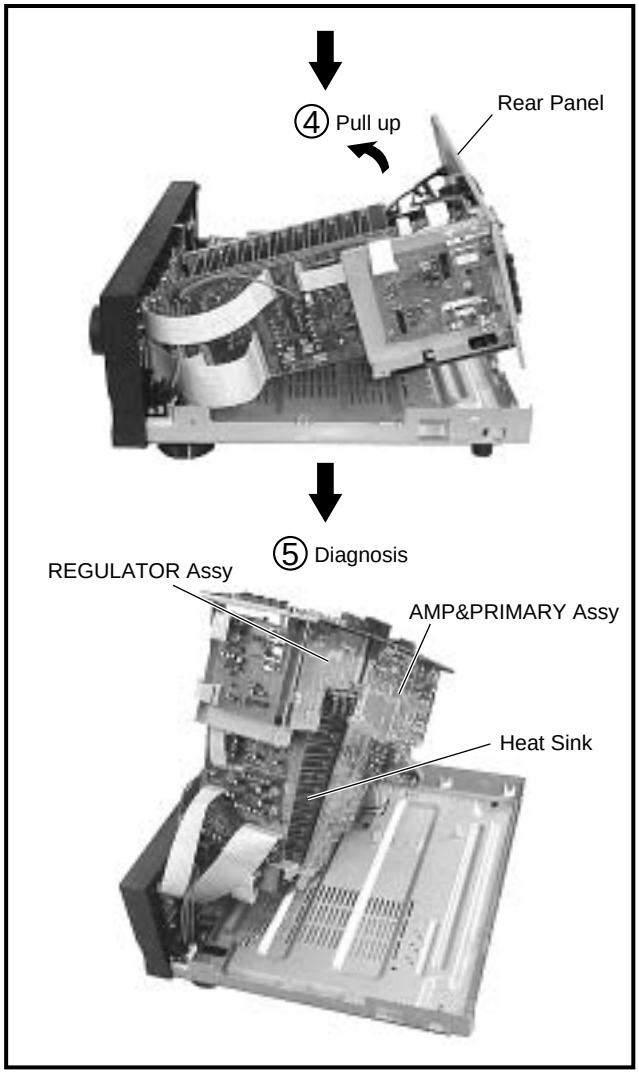

Note : If the speaker and the screw of the rear panel are removed, the unit will stop operating. Even if the FM/AM TUNER MODULE is disconnected, other functions can operate.

■ PCB Location

NOTE : This photograph is VSX-D711

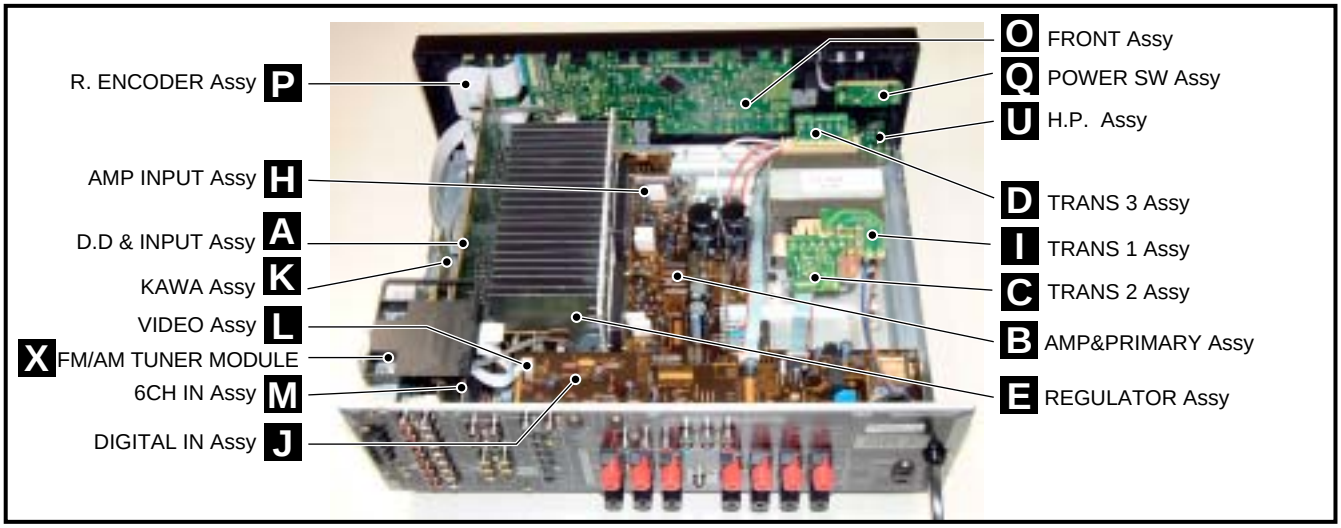

7.1.2 U-COM BLOCKDIAGRAM

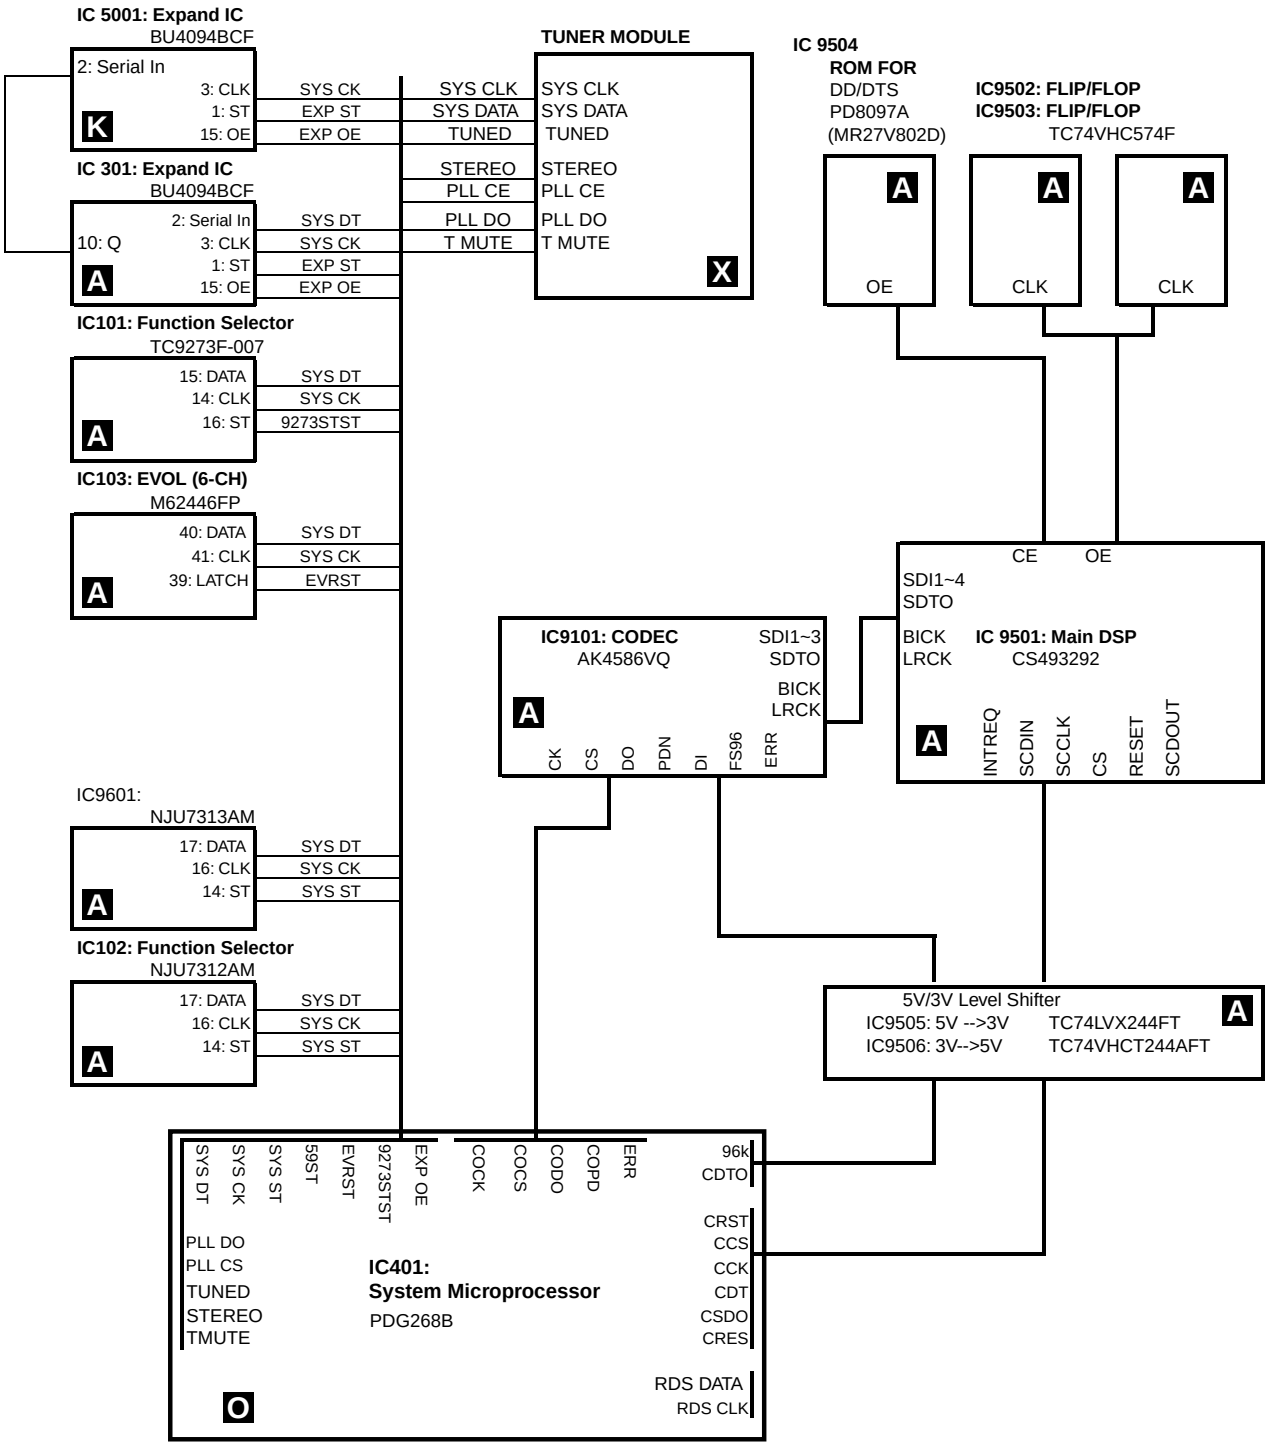

7.1.3 PROTECTION CIRCUIT

1. DC-abnormality detection

In the case of simultaneous detection with the overload protection circuit, DC-abnormality detection is performed preferentially to overload detection.

When a DC abnormality is detected, A.MUTE* is turned on, speaker relay is turned off, then "AMP_ERR" flashes on the display.

*A.MUTE : Audio mute command

↓

The abnormality continues for 3 seconds.

↓ Continues.

The power is shut off.

↓

The power key is disabled for 60 seconds.

↓ Recovery

The program restarts.

If the AC power cord is unplugged within 60 seconds after the power is shut off then plugged in again, the unit will be reset in 60 seconds.

2. Overload detection

When an overload is detected, A.MUTE* is turned on, speaker relay is turned off, then "OVERLOAD" flashes on the display.

↓

The abnormality continues for 3 seconds.

↓ Continues.

The power is shut off.

↓ Recovery

The power is shut off even if the unit recovers.

7.1.4 POWER ON SEQUENCE

■ **POWER ON SEQUENCE**

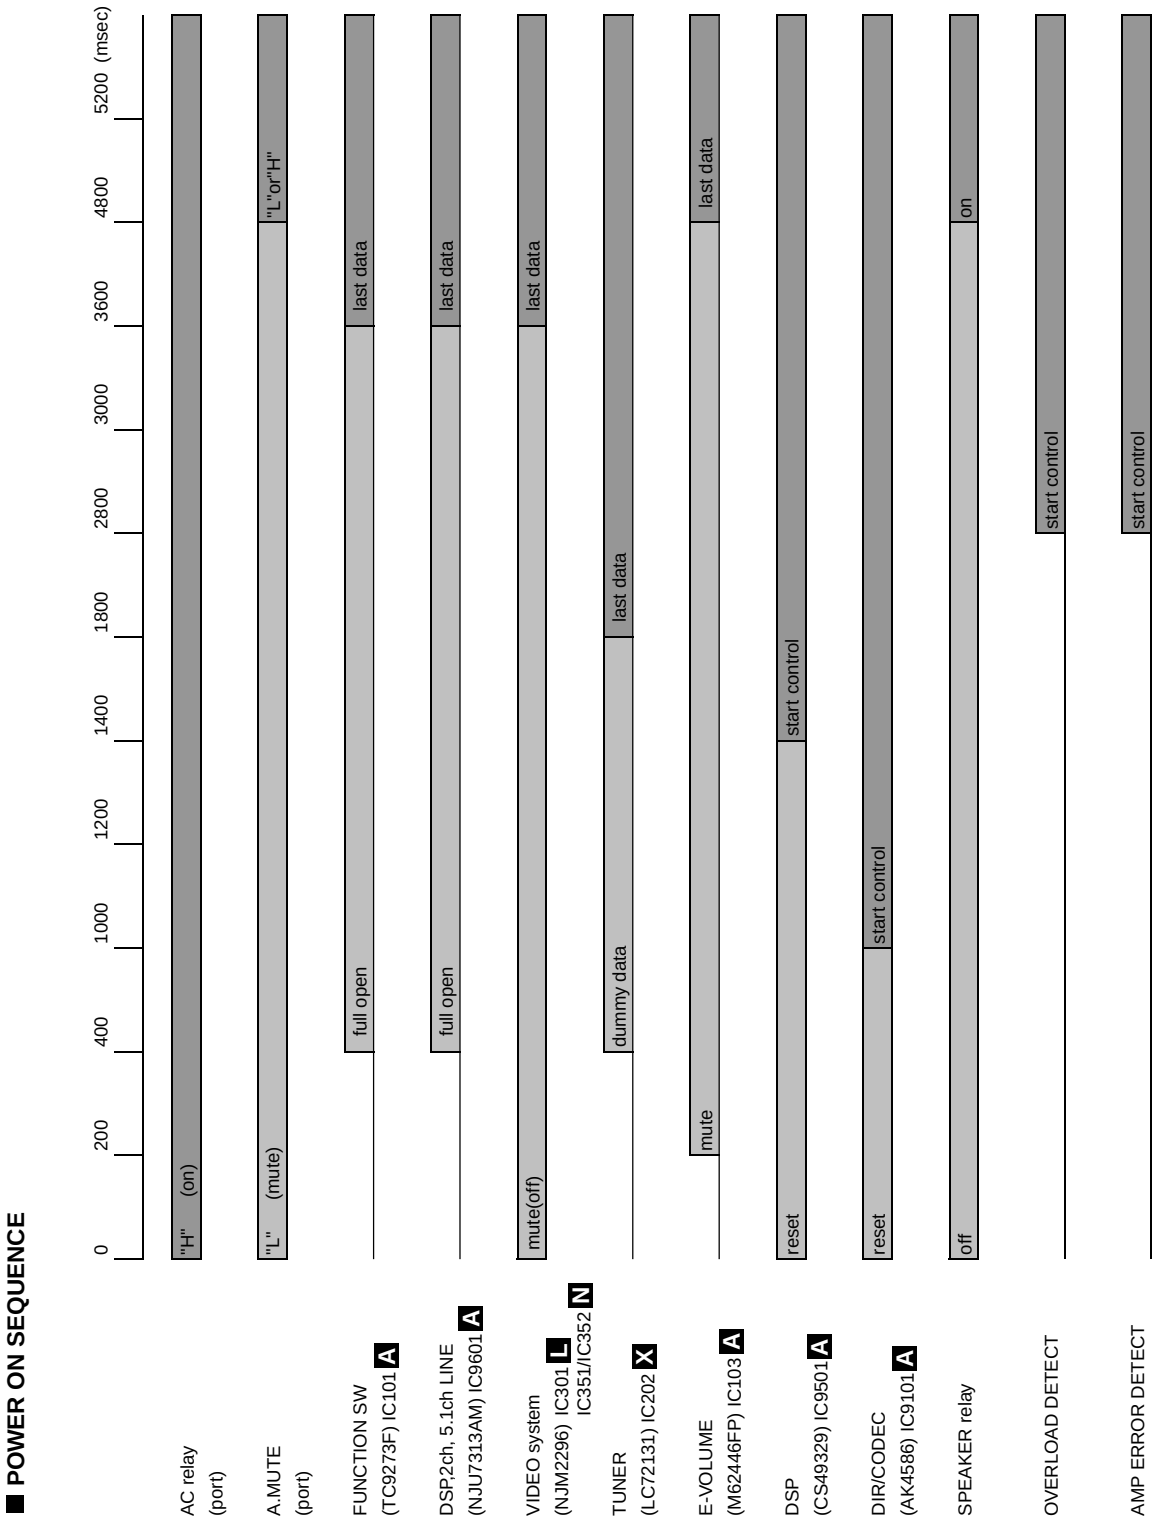

7.1.5 POWER OFF SEQUENCE

■ **POWER OFF SEQUENCE**

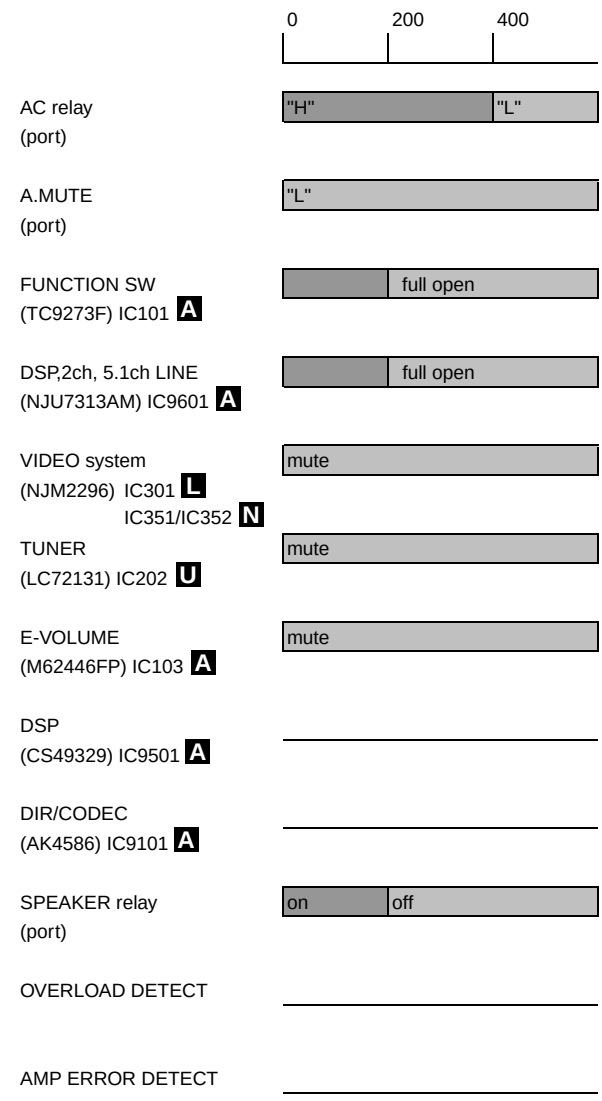

7.2 PARTS

7.2.1 IC

• The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

• List of IC

PDG268B, AK4586VQ, NJU7312AM, PD8097A

■ PDG268B (FRONT ASSY : IC401)

• System Control MCU

■ Pin Arrangement (Top View)

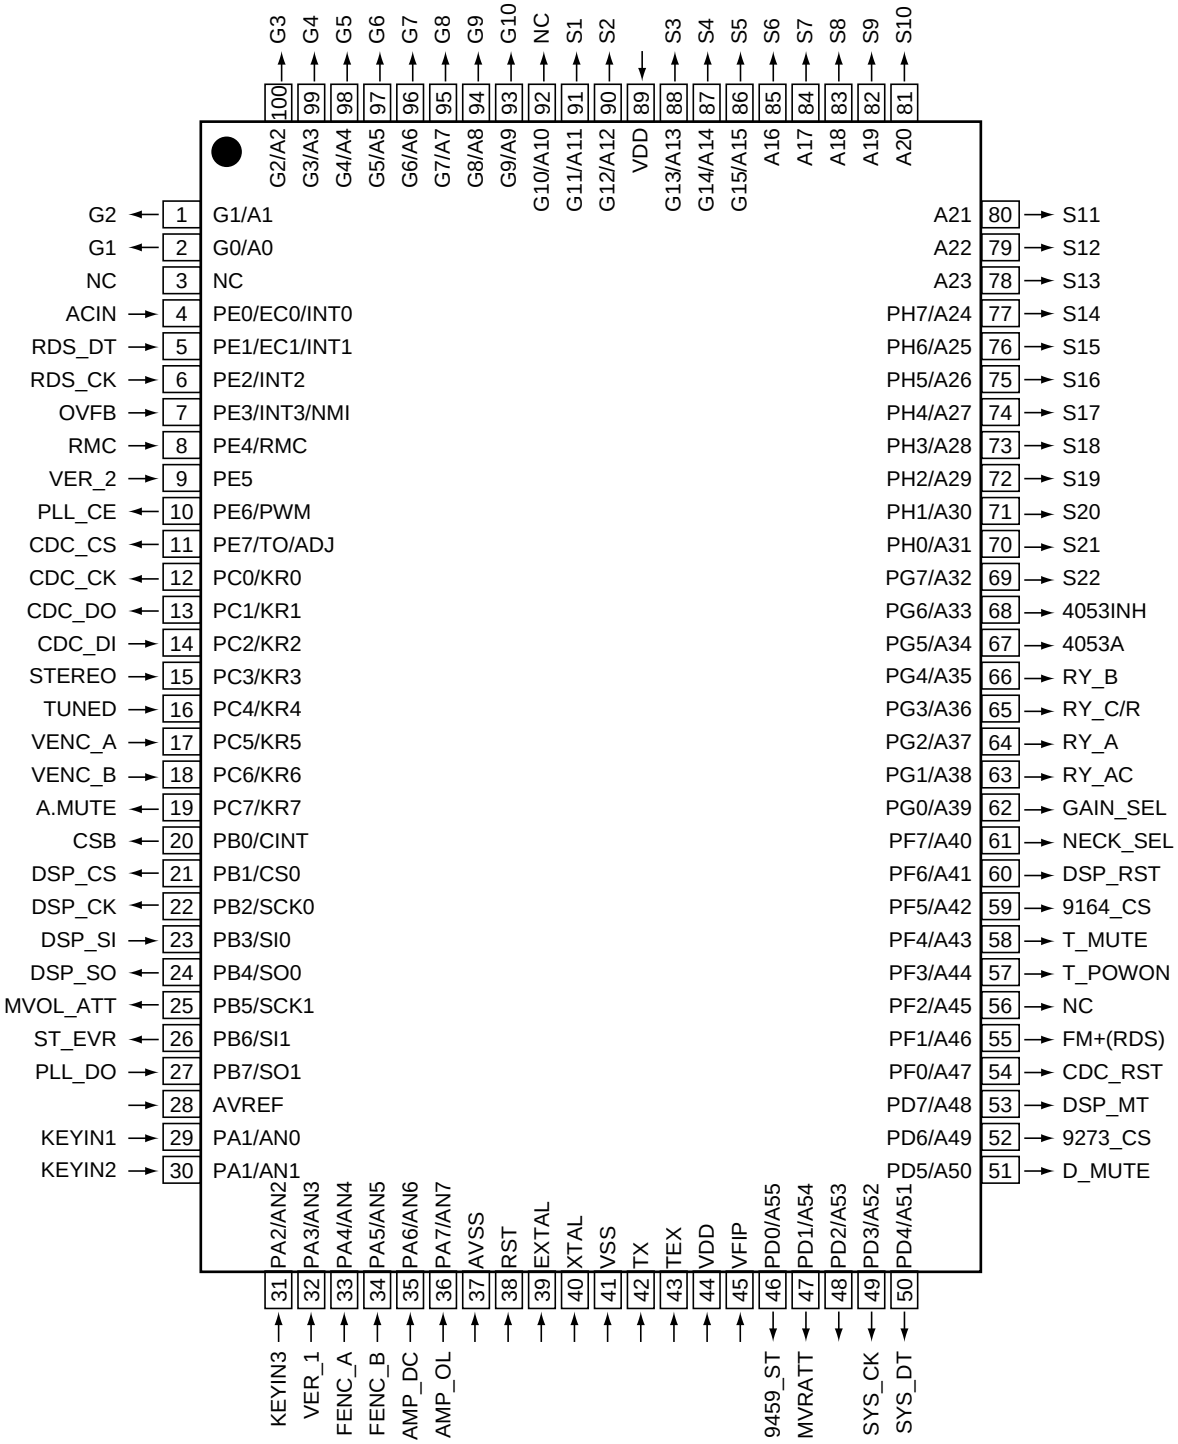

• Pin Function

No.	Pin Name	I/O	Pin Function	Active
1	G2	O	Grid output 2	H
2	G1	O	Grid output 1	H
3	NC	–	Connect to Vdd	
4	ACIN	I	Input AC pulse	
5	RDS_DT	I	Serial control DATA signal of RDS communication	
6	RDS_CK	I	Serial control CLOCK signal of RDS communication (Use external interrupt)	
7	DIRLOCK	I	ERR/OVER input from CODEC	
8	RMC	I	Remote control signal input (no-carrier signal)	
9	VER_2	I	Destination switch 2	
10	ST_EVR	O	Strobe of communication for E-volume	H
11	CDC_CS	O	Chip serect for CODEC	
12	CDC_CK	O	Control clock for CODEC & TC9164	
13	CDC_DO	O	Control data for CODEC & TC9164	
14	CDC DI	I	Data input from DIR	
15	STEREO	I	Signal to switch Stereo / Monoral	
16	TUNED	I	Condition of TUNED	
17	VENC_A	I	Input from rotary encoder of E-volume (A)	
18	VENC_B	I	Input from rotary encoder of E-volume (B)	
19	HP ON	I	Headphone detect	L
20	CREQ	I	Request for DSP	L
21	CCS	O	Chip select for DSP	L
22	CCK	O	Clock signal for DSP	H
23	CDT	I	DATA input signal for DSP	
24	CSDO	O	DATA output signal for DSP	H
25	FS 96	I	96 k	H
26	AMP_OL	I	Detect overload of protection circuit (L: overload)	H
27	PLL_DO	I	Data input signal for communication with LC72131 (Tuner)	
28	AVref	–	Connect to Vdd	
29	KEYIN1	I	Key input A/D conversion port 1	
30	KEYIN2	I	Key input A/D conversion port 2	
31	KEYIN3	I	Key input A/D conversion port 3	
32	VER_1	I	Input 1 to switch region (A/D input)	
33	FENC_A	I	FUNC Rotary encoder signal input (A)	
34	FENC_B	I	FUNC Rotary encoder signal input (B)	
35	AMP_DC	I	Detect trouble DC of protection circuit (L : Trouble)	L
36	VER_2	I	Input 2 to switch region (A/D input)	L
37	AVSS	–	Connect to Vss	
38	RST	–	Reset	
39	EXTAL	–	Connect to the oscillator (7.2MHz)	
40	XTAL	–		
41	VSS	–	Connect to Vss	
42	TX	–	NC	
43	TEX	–	Connect to Vss	
44	VDD	–	+5V	
45	VFDP	–	-30V	
46	9459_ST	O	Strobe for E-volume (TC9459) of SB	
47	MVRATT	O	ATT control of master volume for E-volume (less than -15dB : L)	H
48				H
49	SYS_DT	O	Data signal for communication with M62446, TC9163, TC9164 and PLL	H
50	SYS_CK	O	Clock signal for communication with M62446, TC9163, TC9164 and PLL	H

• **Pin Function**

No.	Pin Name	I/O	Pin Function	Active
51	9273_CS	O	Chip select for TC9273	H
52	DSP_MT	O	DSP Mute (ASSY mute)	H
53	GAIN_SEL	O	Gain select (5.1ch and Stereo of analog input : H)	H
54	AMUTE	O	Audio mute	H
55	T_MUTE	O	Tuner mute	H
56	PLL_CE	O	Chip select for communication to LC72131 (Tuner)	
57	NECK_SEL	O	5.1ch, surround mode and A+B Stereo : H / Stereo : L	H
58	FM+(RDS)	O	Tr switch ON/OFF for power supply of RDS decoder (L : AM, power OFF , H : Other)	H
59	9164_ CS	O	TC9163, TC9164 Chip select	
60	CRST	O	Reset for DSP	
61	CDC_PD	O	Power down for CODEC	
62	ABOT	O	Abort for DSP	H
63	RY_AC	O	AC relay ON/OFF	H
64	RY_A	O	Speaker A relay ON/OFF	H
65	RY_C/R	O	Rear/Center Speaker relay ON/OFF	H
66	EXP CS	O	Chip select for expand IC	H
67	EXP OE	O	Chip select for expand IC	H
68	RY_AC	O	AC relay ON/OFF control	H
69	S22	O	Segment output 22	H
70	S21		Segment output 21	
71	S20		Segment output 20	
72	S19		Segment output 19	
73	S18		Segment output 18	
74	S17		Segment output 17	
75	S16		Segment output 16	
76	S15		Segment output 15	
77	S14		Segment output 14	
78	S13		Segment output 13	
79	S12		Segment output 12	
80	S11		Segment output 11	
81	S10		Segment output 10	
82	S9		Segment output 9	
83	S8		Segment output 8	
84	S7		Segment output 7	
85	S6		Segment output 6	
86	S5		Segment output 5	
87	S4		Segment output 4	
88	S3		Segment output 3	
89	VDD	–	5V	
90	S2	O	Segment output 2	H
91	S1		Segment output 1	
92	Not used	O	Not used (Fixed Vfdp)	
93	G10	O	Grid output 10	H
94	G9		Grid output 9	
95	G8		Grid output 8	
96	G7		Grid output 7	
97	G6		Grid output 6	
98	G5		Grid output 5	
99	G4		Grid output 4	
100	G3		Grid output 3	

BD3812F (D.D & INPUT ASSY : IC112)

• **Audio Sound Processor**

● **Block Diagram**

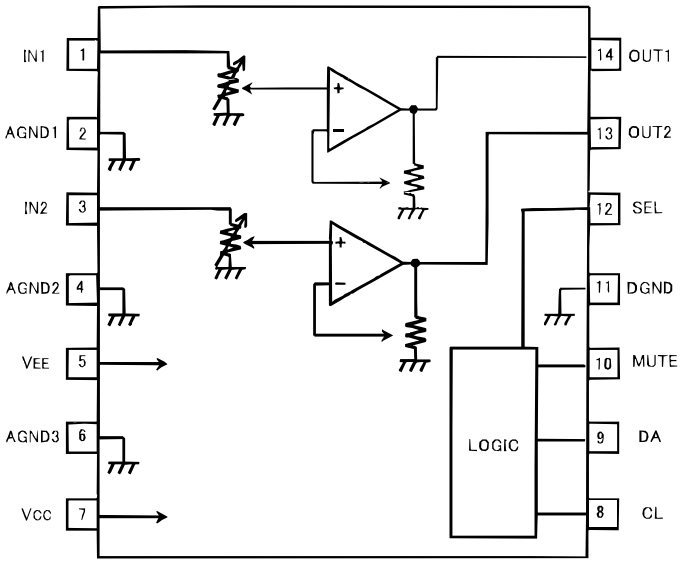

● **Pin Function**

No.	Pin Name	Function
1	IN1	1ch input terminal
2	AGND1	Analog ground terminal
3	IN2	2ch input terminal
4	AGND2	Analog ground terminal
5	Vee	(-) Power supply terminal
6	AGND3	Analog ground terminal
7	Vcc	(+) Power supply terminal
8	CL	Serial clock input terminal
9	DA	Serial data an latch input terminal
10	MUTE	Mute terminal
11	DGND	Ground terminal for comparator
12	SEL	Serial data select terminal
13	OUT2	2ch output terminal
14	OUT1	1ch output terminal

NJU7312AM (D.D & INPUT ASSY : IC102)

• **Analog Switch Array**

● **Block Diagram**

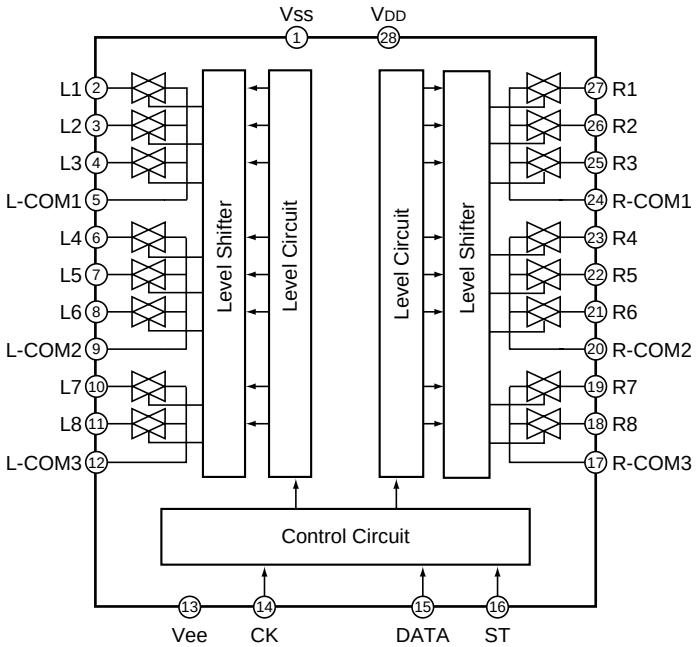

● **Pin Function**

No.	Pin Name	Function
1	VSS	Minus Power Supply
2, 27	L1,R1	Input and Output
3, 26	L2,R2	
4, 25	L3,R3	
5, 24	COM1	
6, 23	L4,R4	
7, 22	L5,R5	
8, 21	L6,R6	
9, 20	COM2	
10, 19	L7,R7	
21, 18	L8,R8	
26, 17	COM3	
13	GND	Digital Ground
14	CK	Clock Input
15	DATA	Data Input
16	ST	Strobe Input
28	VDD	Plus Power Supply

■ PD8097A (D.D & INPUT ASSY : IC9504)

• **4Mb P2ROM**

■ Pin Arrangement (Top View)

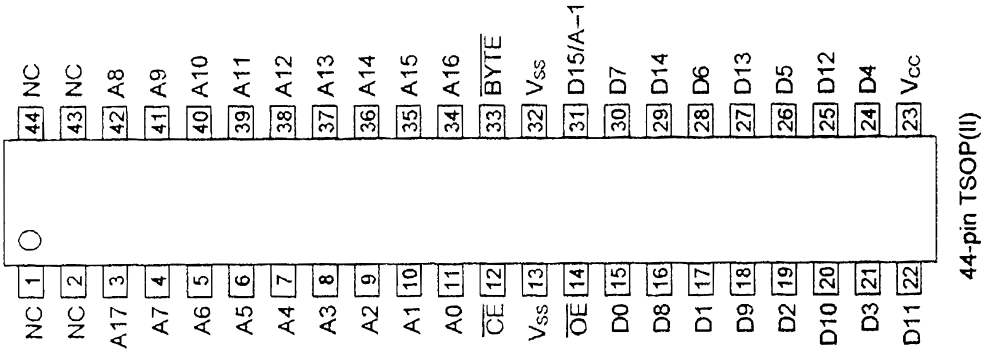

■ Block Diagram

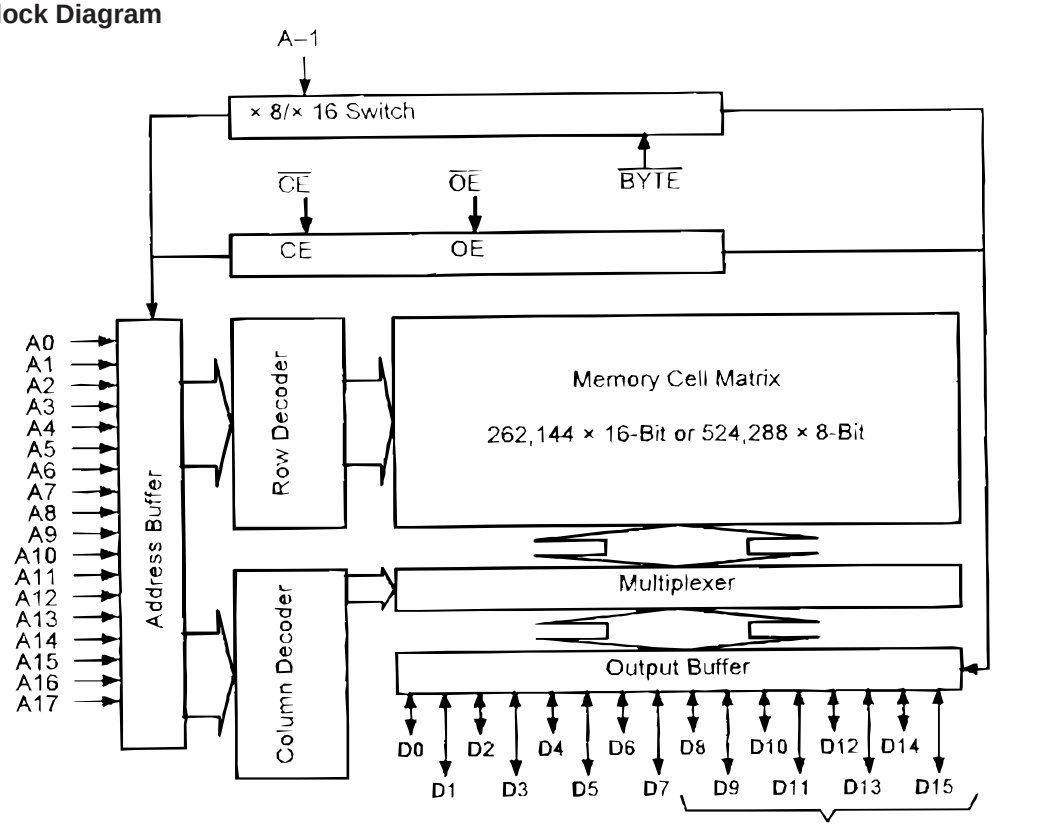

In 8-bit output mode, these pins are placed in a high-Z state and pin D15 functions as the A-1 address pin.

7.2.2 DISPLAY

■ XAV3013 (FRONT ASSY : V401)

• FL DISPLAY

• Pin Assignment

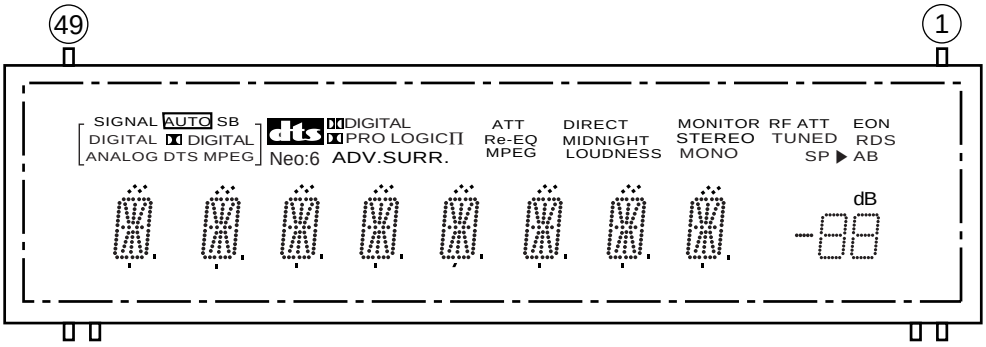

• Grid Assignment

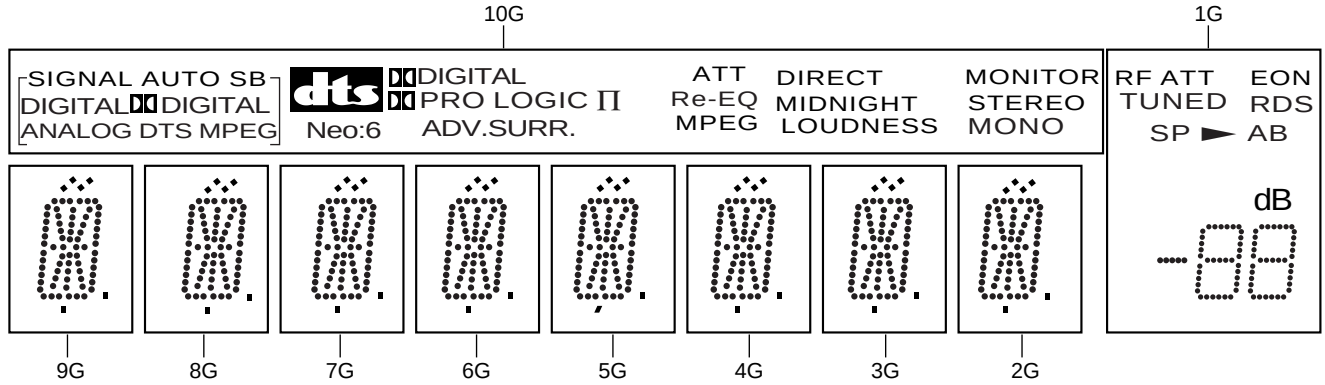

• Segment Designation

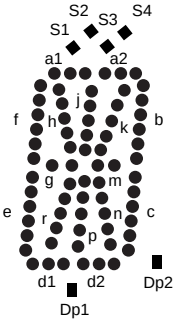

(9G to 2G)

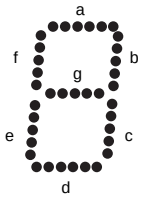

(1G)

• Pin Connection

Pin No.	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25
Connection	F2	F2	NP	NP	P22	P21	P20	P19	P18	P17	P16	P15	P14	P13	P12	P11	P10	P9	P8	P7	P6	P5	P4	P3	P2
Pin No.	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	
Connection	P1	NX	NX	NX	NX	NX	NX	NX	NX	NX	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G	NP	NP	F1	F1	

NOTE 1) F1, F2..... Filament
2) NP..... No pin
3) NX..... No extend pin
4) DL..... Datum Line
5) 1G to 10G..... Grid
6) Field of vision is a minimum of 21.8° from the lower side.

• Anode Connection

	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
P1	S1	a1	a1	a1	a1	a1	a1	a1	a1	RFATT
P2	AUTO	a2	a2	a2	a2	a2	a2	a2	a2	EON
P3	SB	h	h	h	h	h	h	h	h	○
P4	DIGITAL	j	j	j	j	j	j	j	j	TUNED
P5	ANALOG	k	k	k	k	k	k	k	k	RDS
P6	DIGITAL (L)	b	b	b	b	b	b	b	b	S1
P7	DTS	f	f	f	f	f	f	f	f	A
P8	MPEG	m	m	m	m	m	m	m	m	B
P9	dts	g	g	g	g	g	g	g	g	1a
P10	MPEG	c	c	c	c	c	c	c	c	1b
P11	DIGITAL (R)	e	e	e	e	e	e	e	e	1f
P12	PROLOGIC Π	r	r	r	r	r	r	r	r	1g
P13	Neo:6	p	p	p	p	p	p	p	p	1c
P14	ATT	n	n	n	n	n	n	n	n	1e
P15	ADV.SURR.	d1	d1	d1	d1	d1	d1	d1	d1	1d
P16	Re-EQ	d2	d2	d2	d2	d2	d2	d2	d2	2a
P17	DIRECT	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	Dp2	2b
P18	MIDNIGHT	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	Dp1	2f
P19	LOUDNESS	S1	S1	S1	S1	S1	S1	S1	S1	2g
P20	MONITOR	S4	S4	S4	S4	S4	S4	S4	S4	2c
P21	STEREO	S2	S2	S2	S2	S2	S2	S2	S2	2e
P22	MONO	S3	S3	S3	S3	S3	S3	S3	S3	2d

8. PANEL FACILITIES

Front panel

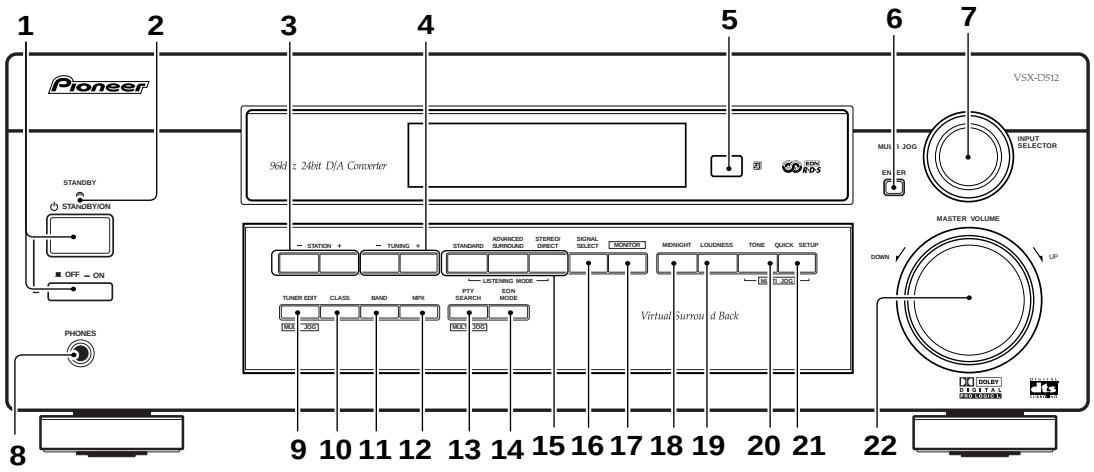

1 ⏻ STANDBY/ON-power ⎕ OFF ⎓ ON buttons
STANDBY/ON Switches the receiver between on and standby. The power button switches the receiver off.

2 STANDBY indicator
Lights when the receiver is in standby mode.

3 STATION (+/–) buttons
Selects station presets when using the tuner.

4 TUNING (+/–) buttons
Selects the frequency when using the tuner.

5 Remote sensor
Receives the signals from the remote control.

6 ENTER

7 MULTI JOG/INPUT SELECTOR dial

The **MULTI JOG/INPUT SELECTOR** dial performs a number of tasks.
Use it to select options after pressing **TONE CONTROL, QUICK SETUP or TUNER EDIT.**

8 PHONES jack
Use to connect headphones.

9 TUNER EDIT
Press to memorize and name a station for recall using the station (+/-) buttons.

10 CLASS
Switches between the three banks (classes) of station presets.

11 BAND
Switches between AM and FM radio bands.

12 MPX
Press the MPX button to receive a radio broadcast in mono.

Note

When the headphones are connected, there is no sound output from the speakers.

13 PTY SEARCH
Use to search for different program types in RDS mode.

14 EON MODE
Use to search for different programs that are transmitting traffic or news information (this search method is called EON).

15 LISTENING MODE buttons

STANDARD
Press for Standard decoding and to switch between the various Pro Logic II options.

ADVANCED SURROUND
Use to switch between the various surround modes.

STEREO/DIRECT
Switches direct playback on or off. Direct playback bypasses the tone controls and channel levels for the most accurate reproduction of a source.

16 SIGNAL SELECT
Use to select between an analog or digital signal.

17 MONITOR
Press to switch tape monitoring on/off.

18 MIDNIGHT
Use when listening to movie soundtracks at low volumes.

19 LOUDNESS
Use to boost the bass and treble at low volumes.

20 TONE
Press this button to access the bass and treble controls, which you can then adjust with the **MULTI JOG/INPUT SELECTOR** dial.

21 QUICK SETUP

22 MASTER VOLUME

Display

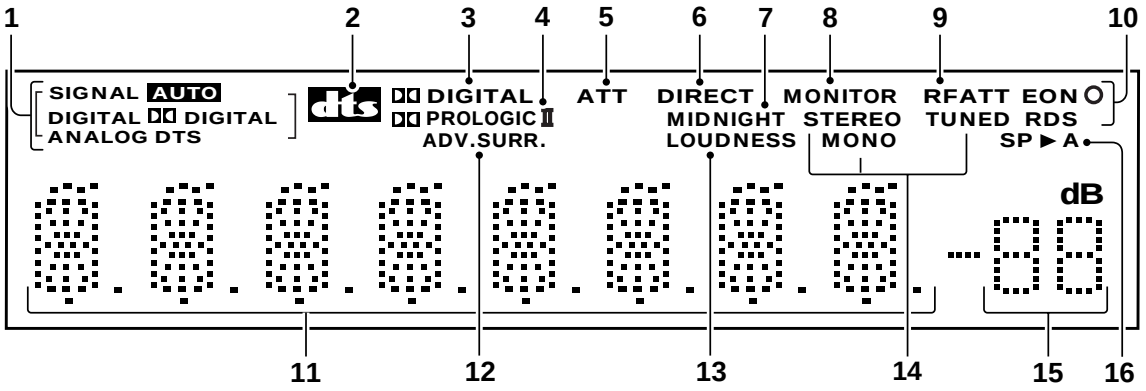

1 SIGNAL SELECT indicators
Lights to indicate the type of input signal assigned for the current component:

AUTO
Lights when AUTO signal select is on

SB
Depending on the source, this lights when a signal with surround back channel encoding is detected.

DIGITAL
Lights when a digital audio signal is detected.

DIGITAL
Lights when a Dolby Digital encoded signal is detected.

ANALOG
Lights when an analog signal is detected.

DTS
Lights when a source with DTS encoded audio signals is detected.

2 DTS
When the Standard mode of the receiver is on, this lights to indicate decoding of a DTS signal.

3 DIGITAL
When the Standard mode of the receiver is on, this lights to indicate decoding of a Dolby Digital signal.

4 PRO LOGIC II
When the Standard mode of the receiver is on, this lights to indicate Pro Logic II decoding.

5 ATT
Lights when INPUT ATT is used to attenuate (reduce) the level of the analog input signal.

6 DIRECT
Lights when source direct playback is in use. This function bypasses all tone, balance, Advanced surround, and Dolby Surround effects.

7 MIDNIGHT
Lights during Midnight listening.

8 MONITOR
Lights when MONITOR is selected

9 RF ATT
Lights when the RF ATT is on .

10 EON and ○
The ○ indicator lights to inform you that the currently tuned station carries the EON data service. When the EON mode is set, the EON indicator lights, but during actual reception of an EON broadcast the EON indicator will flash.
RDS: Lights when an RDS broadcast is received.

11 Character display

12 ADV. SURR. (Advanced Surround)
Lights when one of the Advanced Surround modes has been selected.

13 LOUDNESS
Lights when LOUDNESS has been selected.

14 TUNER indicators

STEREO:
Lights when a stereo FM broadcast is being received in auto stereo mode.

MONO:
Lights when the mono mode is set using the MPX button.

TUNED:
Lights when a broadcast is being received.

15 Master volume level
Shows the overall volume level. **---dB** indicates the minimum level, and –**0 dB** indicates the maximum level.

Note

Depending on your level settings for each channel, the maximum level can range between –10 dB and –0 dB.

16 Speaker indicator
Shows if the speaker system is on or not.
SP ►A means speakers are switched on. **SP ►** means the head phones are connected.

Remote control

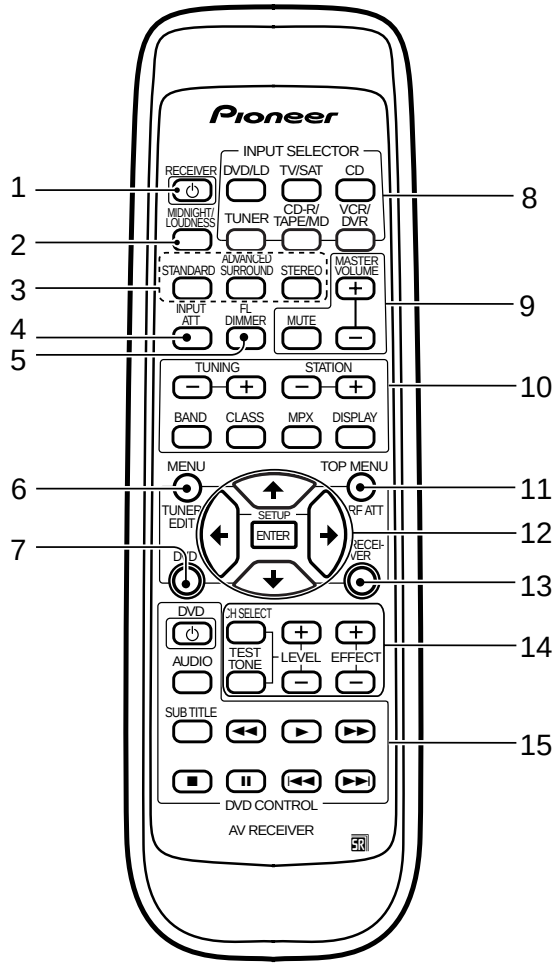

1 ⏻ RECEIVER
Switches the receiver between on and standby.

2 MIDNIGHT/LOUDNESS
Use to switch to Midnight or Loudness listening.

3 LISTENING MODE buttons
STANDARD
Press for Standard decoding and to switch between the various Pro Logic II options.

ADVANCED SURROUND
Use to switch between the various surround modes.

STEREO/DIRECT
Switches direct playback on or off. Direct playback bypasses the tone controls and channel levels for the most accurate reproduction of a source.

4 INPUT ATT
Use to attenuate (lower) the level of an analog input signal to prevent distortion.

5 FL DIMMER
Use this button to make the fluorescent display (FL) dimmer or brighter.

6 MENU (DVD control)
Use to access different menus associated with your DVD player.
TUNER EDIT (Receiver control) (pages 35–36)
Press to memorize and name a station for recall using the STATION (+/–) buttons.

7 DVD
Use to switch over to the DVD controls on the remote control.

Note

The DVD controls on the remote control (**TOP MENU, MENU**, ⇦⇨ ⇧ ⇩ and **ENTER/SETUP** buttons) can only be used for DVD control after pressing **DVD** on the remote. See the next page for more on the seperate **DVD CONTROL** buttons.

8 INPUT SELECTOR buttons
Use to select the input source.

9 Volume buttons
Use **MASTER VOLUME +/–** to set the overall listening volume.
Use **MUTE** to mute the sound or restore the sound if it has been muted.

10 Tuner controls
The **TUNING +/–** buttons can be used to find radio frequencies.
The STATION +/– buttons can be used to select preset radio stations.

BAND
Use to switch between the AM and FM bands when the tuner is selected.

CLASS
Use to switch between the three banks (classes) of station presets.

MPX
Use to switch between auto stereo and mono reception of FM broadcasts. If the signal is weak then switching to mono will improve the sound quality.

DISPLAY
Use to switch the display between the station preset name and the frequency.

11 TOP MENU
Displays the disc 'top' menu of a DVD.

RF ATT (Receiver control)
Use to lower the input level of a radio signal that is too powerful or contain interference thus causing the receiver to distort.

12 ⇦ ⇨ ⇧ ⇩ and ENTER/SETUP buttons
Use these arrow buttons when setting up your surround sound system. These buttons are also used to control DVD menus/options.

12 ⇦ ⇨ ⇧ ⇩ and ENTER/SETUP buttons

Use these arrow buttons when setting up your surround sound system.

These buttons are also used to control DVD menus/options.

13 RECEIVER

Use to switch to the receiver controls on the remote control. Also used when setting up the surround sound for the receiver.

14 CHANNEL SELECT

Use to select a channel when setting up the surround sound of the receiver.

TEST TONE

Use to sound the test tones when setting up the surround sound of the receiver.

LEVEL +/–

Use to set up the levels of the surround sound of the receiver.

EFFECT +/–

Use to add or subtract the amount of effect in different sound modes or advanced listening modes.

15 DVD CONTROL buttons

You can use these buttons to control a Pioneer DVD player connected to your system.

Button	What it does
DVD	Turns DVD power on/off.
AUDIO	Changes the audio language or channel.
SUBTITLE	Displays/changes the subtitles included in multilingual DVD-Video discs.
◄◄	Press to start fast reverse scanning.
►	Starts playback.
►►	Press to start fast forward scanning.
■	Stops playback.
II	Pauses a disc that's playing, or restarts a paused disc.
I◄◄	Skips to the start of the current track or chapter, then to previous tracks/chapters.
►►I	Skips to the next track or chapter.

Rear Panel